



19. Fuel Pump Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.

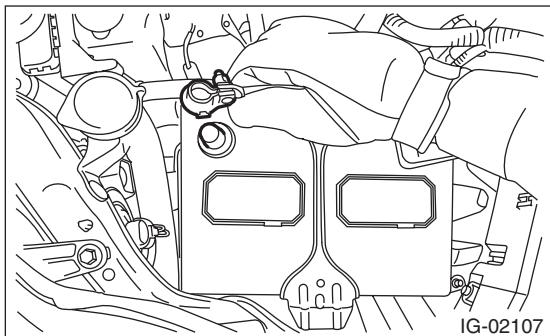

- 2) Remove the glove box lid assembly. <Ref. to EI-65, REMOVAL, Glove Box.>
- 3) Remove the fuel pump relay from the relay holder.


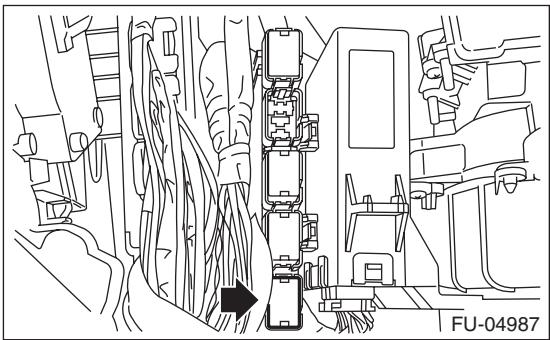


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the fuel pump relay has no deformation, cracks or other damages.
- 2) Measure the resistance between fuel pump relay terminals.

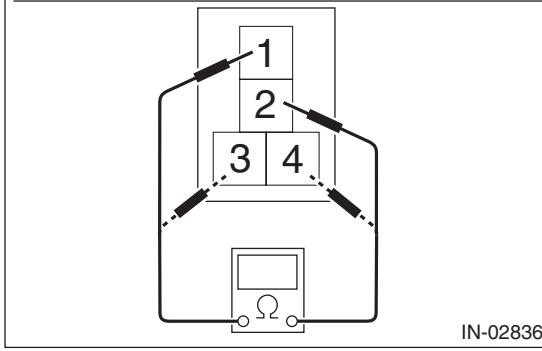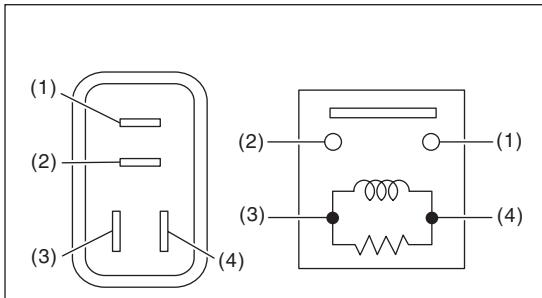


Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	93.8 — 136.4 Ω (when 20°C (68°F))

Fuel Pump Relay

FUEL INJECTION (FUEL SYSTEMS)

3) Connect terminal No. 3 to battery positive terminal and terminal No. 4 to the battery ground terminal, and check the resistance between the fuel pump relay terminals.

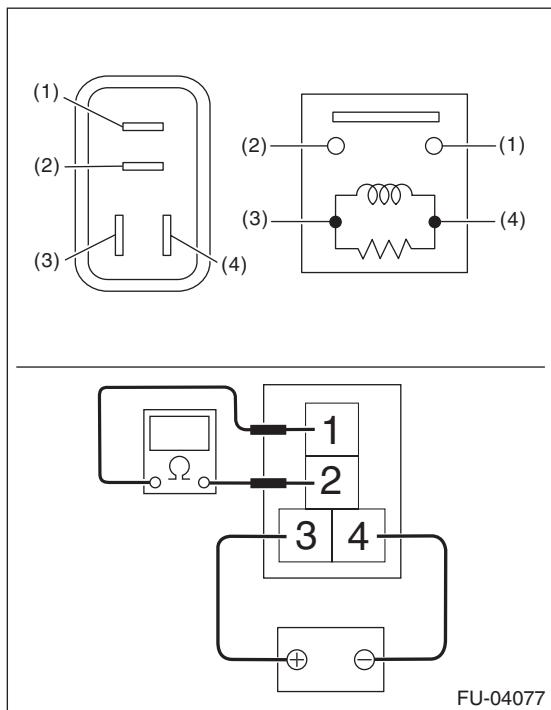

Terminal No.	Standard
1 and 2	Less than 1 Ω