


# Electronic Throttle Control Relay

## FUEL INJECTION (FUEL SYSTEMS)


### 20. Electronic Throttle Control Relay

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.

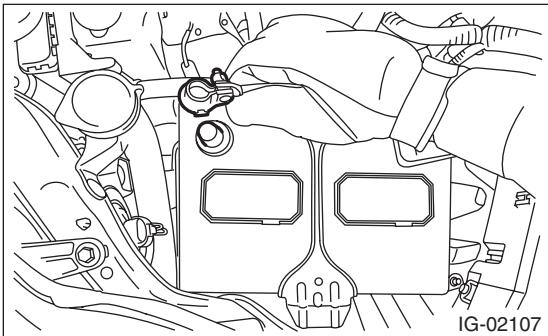

- 2) Remove the glove box lid assembly. <Ref. to EI-65, REMOVAL, Glove Box.>
- 3) Remove the electronic throttle control relay from the relay holder.

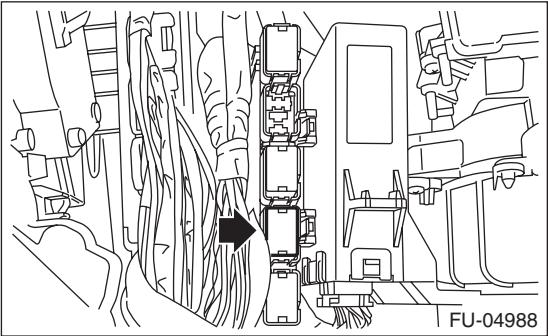


#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

- 1) Check that the electronic throttle control relay has no deformation, cracks or other damages.
- 2) Measure the resistance between electronic throttle control relay terminals.

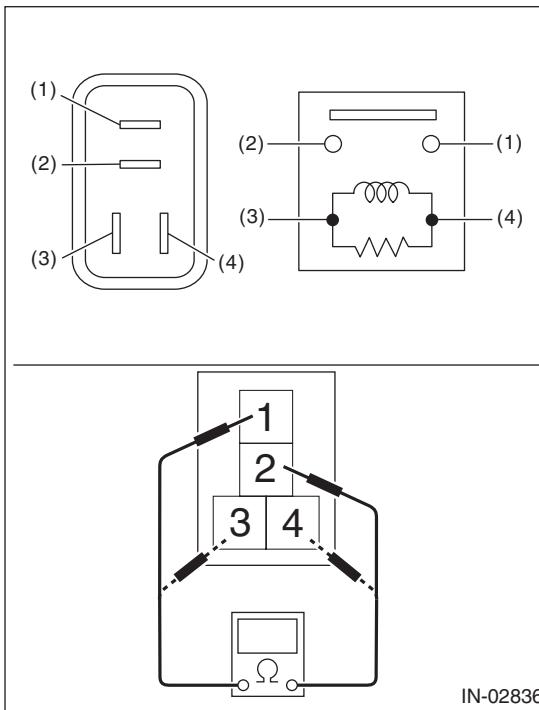


Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	93.8 — 136.4 Ω (when 20°C (68°F))

## Electronic Throttle Control Relay

FUEL INJECTION (FUEL SYSTEMS)

3) Connect terminal No. 3 to battery positive terminal and terminal No. 4 to the battery ground terminal, and check the resistance between the electronic throttle control relay terminals.

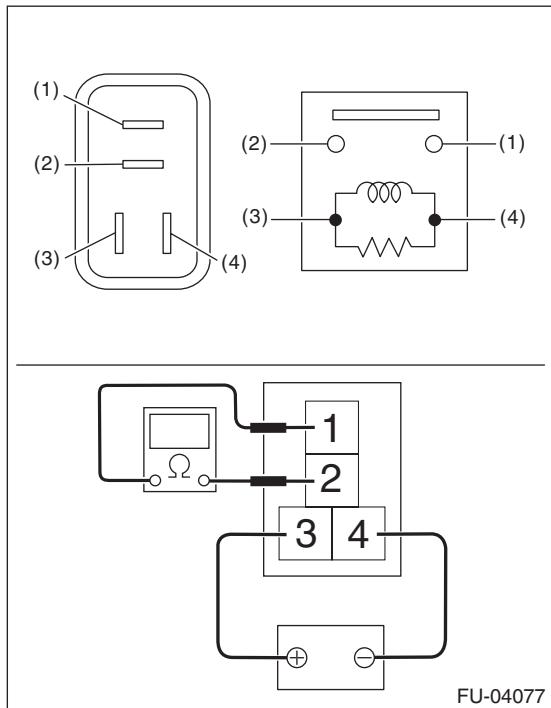

Terminal No.	Standard
1 and 2	Less than 1 Ω