

3. Ignition Coil

A: REMOVAL

Direct ignition type is adopted. Refer to "Spark Plug" for removal procedure. <Ref. to IG(H4SO)-3, REMOVAL, Spark Plug.>

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

9 N·m (0.9 kgf·m, 6.6 ft-lb)

C: INSPECTION

For inspection procedure, refer to "Diagnostics for Engine Starting Failure". <Ref. to EN(H4SO)(diag)-69, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

Ignition Coil

IGNITION

STARTING/CHARGING SYSTEMS

SC(H4SO)

	Page
1. General Description	2
2. Starter	9
3. Generator	16
4. Battery	25