



4. Air Intake Boot

A: REMOVAL

- 1) Remove the cover (A) and clip (B) from air intake boot assembly.

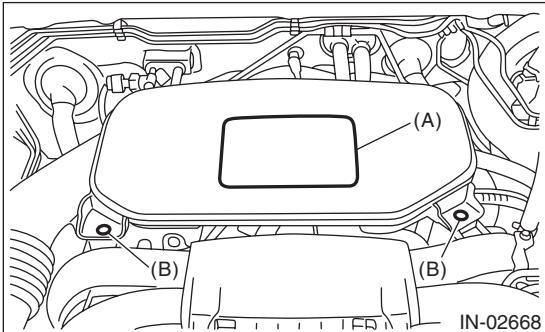

- 2) Loosen the clamp (A) which connects the air intake boot assembly and air cleaner case.
- 3) Loosen the clamp (B) which connects the air intake boot assembly and throttle body.

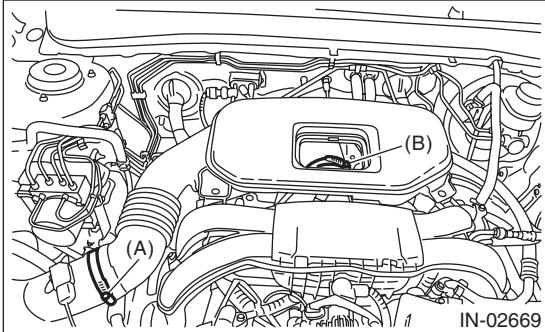


- 4) Disconnect the blow-by hose and remove the air intake boot assembly.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Clamp (A), (B)
3 N·m (0.3 kgf·m, 2.2 ft-lb)

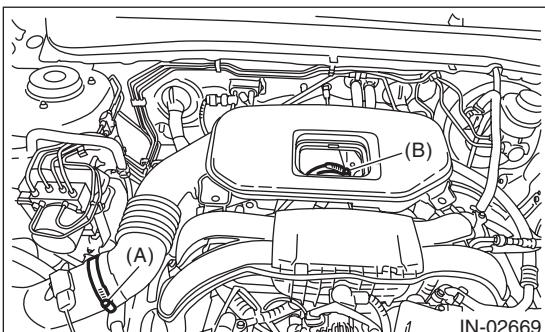

C: INSPECTION

- 1) Check that the air intake boot assembly does not have deformation, cracks or other damages.
- 2) Check there is no foreign matter in the air intake boot assembly.