

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(H4SO)-6, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H4SO)-7, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

MECHANICAL

ME(H4SO)

	Page
1. General Description	2
2. Compression	23
3. Idle Speed	24
4. Ignition Timing	25
5. Intake Manifold Vacuum	26
6. Engine Oil Pressure	27
7. Fuel Pressure	28
8. Valve Clearance	29
9. Engine Assembly	31
10. Engine Mounting	38
11. Preparation for Overhaul	41
12. V-belt	42
13. Crank Pulley	44
14. Timing Belt Cover	46
15. Timing Belt	47
16. Cam Sprocket	52
17. Crank Sprocket	53
18. Valve Rocker Assembly	54
19. Camshaft	57
20. Cylinder Head	61
21. Cylinder Block	68
22. Oil Switching Solenoid Valve	89
23. Intake and Exhaust Valve	91
24. Piston	92
25. Connecting Rod	93
26. Crankshaft	94
27. Engine Trouble in General	95
28. Engine Noise	101