


### 6. Oil Pressure Switch


#### A: REMOVAL

- 1) Disconnect the ground cable from battery.

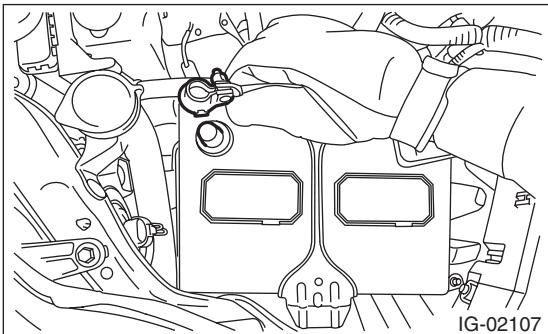


- 2) Remove the generator. <Ref. to SC(H4SO)-16, REMOVAL, Generator.>

- 3) Disconnect the terminal from oil pressure switch.

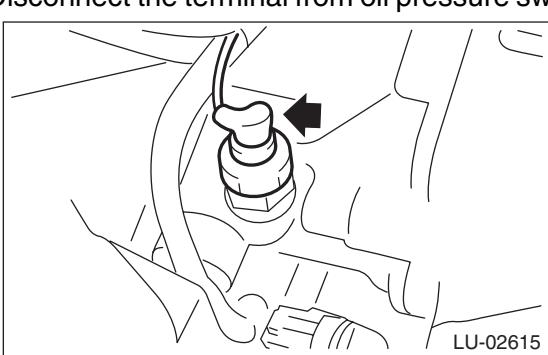

- 4) Remove the oil pressure switch.

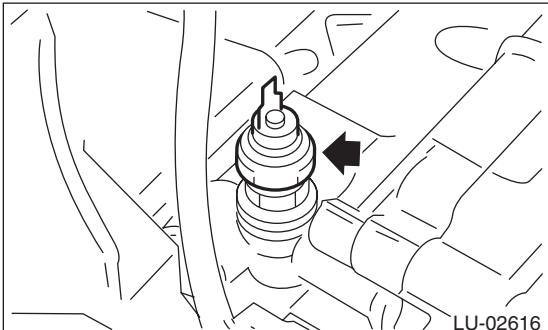


#### B: INSTALLATION

- 1) Apply liquid gasket to the oil pressure switch threads.

**Liquid gasket:**


**THREE BOND 1324 (Part No. 004403042) or equivalent**

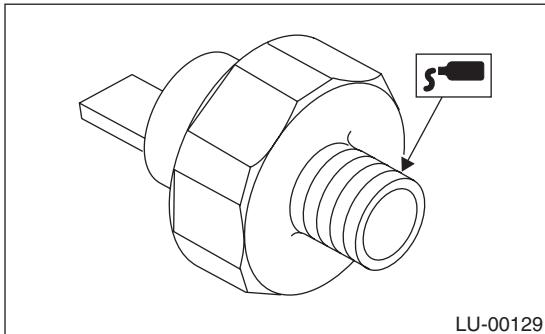


- 2) Install the oil pressure switch to cylinder block.

**Tightening torque:**

**25 N·m (2.5 kgf·m, 18.4 ft-lb)**

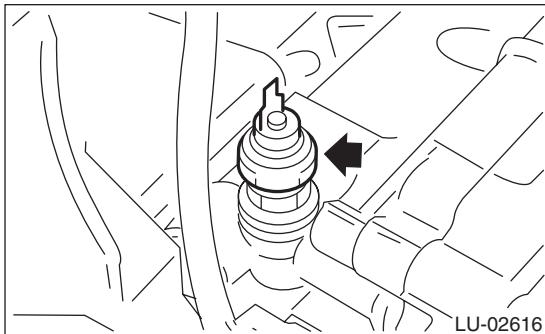


- 3) Connect the terminal to the oil pressure switch.

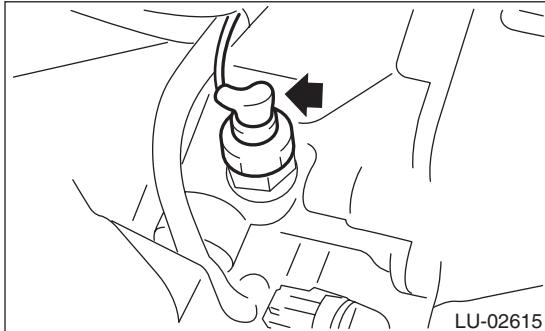

- 4) Install the generator. <Ref. to SC(H4SO)-16, INSTALLATION, Generator.>

- 5) Connect the ground cable to battery.

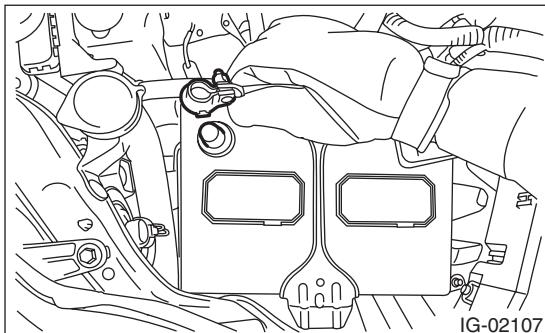

#### C: INSPECTION

- 1) Check that the oil pressure switch does not have deformation, cracks or damage.
- 2) Check the oil pressure switch installation portion for oil leakage and oil seepage.