

8. Oil Catch Tank

A: REMOVAL

For the removal procedures, refer to IN (H4DOTC) section. <Ref. to IN(H4DOTC)-23, REMOVAL, Oil Catch Tank.>

B: INSTALLATION

For the installation procedures, refer to IN (H4DOTC) section. <Ref. to IN(H4DOTC)-23, INSTALLATION, Oil Catch Tank.>

C: INSPECTION

For the inspection procedures, refer to IN (H4DOTC) section. <Ref. to IN(H4DOTC)-24, INSPECTION, Oil Catch Tank.>