



## 14. Timing Belt Cover

### A: REMOVAL

- 1) Remove the crank pulley. <Ref. to ME(H4SO)-44, REMOVAL, Crank Pulley.>
- 2) Remove the stopper rod.

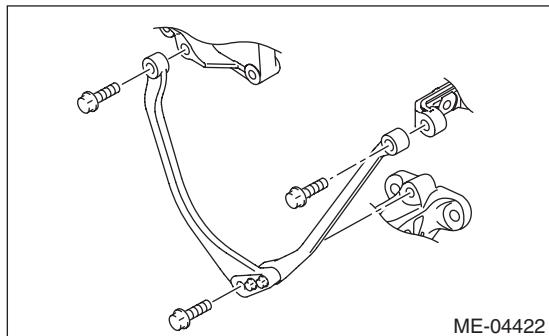

- 3) Remove the timing belt cover LH (A).
- 4) Remove the front timing belt cover (B).

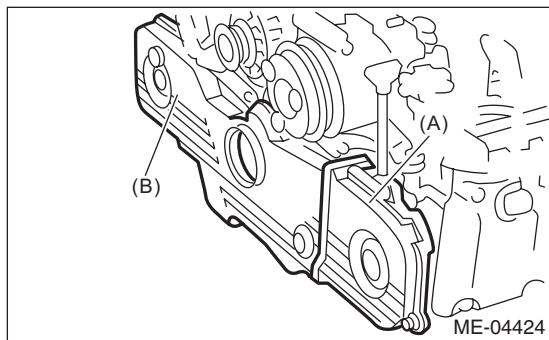

### B: INSTALLATION

- 1) Install the front timing belt cover (B).


**Tightening torque:**

**5 N·m (0.5 kgf-m, 3.7 ft-lb)**

- 2) Install the timing belt cover LH (A).

**Tightening torque:**


**5 N·m (0.5 kgf-m, 3.7 ft-lb)**

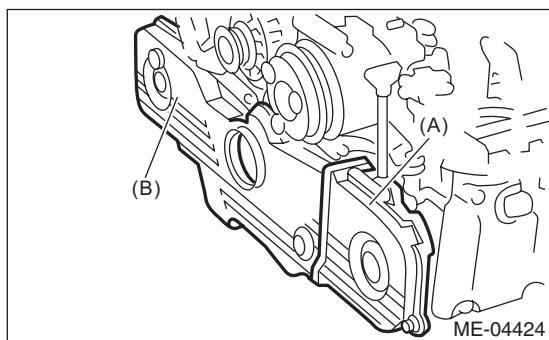

- 3) Install the stopper rod.

**Tightening torque:**

**36 N·m (3.7 kgf-m, 26.6 ft-lb)**

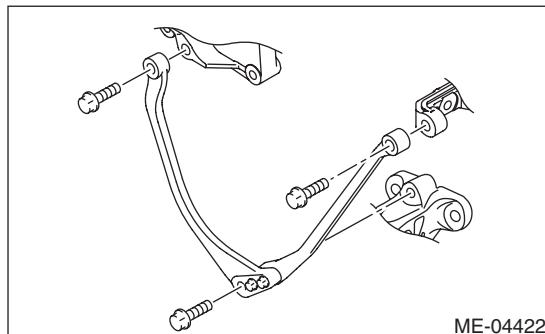

- 4) Install the crank pulley. <Ref. to ME(H4SO)-44, INSTALLATION, Crank Pulley.>

### C: INSPECTION

Check the timing belt cover for damage.