

General Description


SPEED CONTROL SYSTEMS

1. General Description

A: SPECIFICATION

| | | | |
|-------------------|--------|--------------|-----------------------------|
| Accelerator pedal | Stroke | At pedal pad | 54 — 59 mm (2.13 — 2.32 in) |
|-------------------|--------|--------------|-----------------------------|

B: COMPONENT

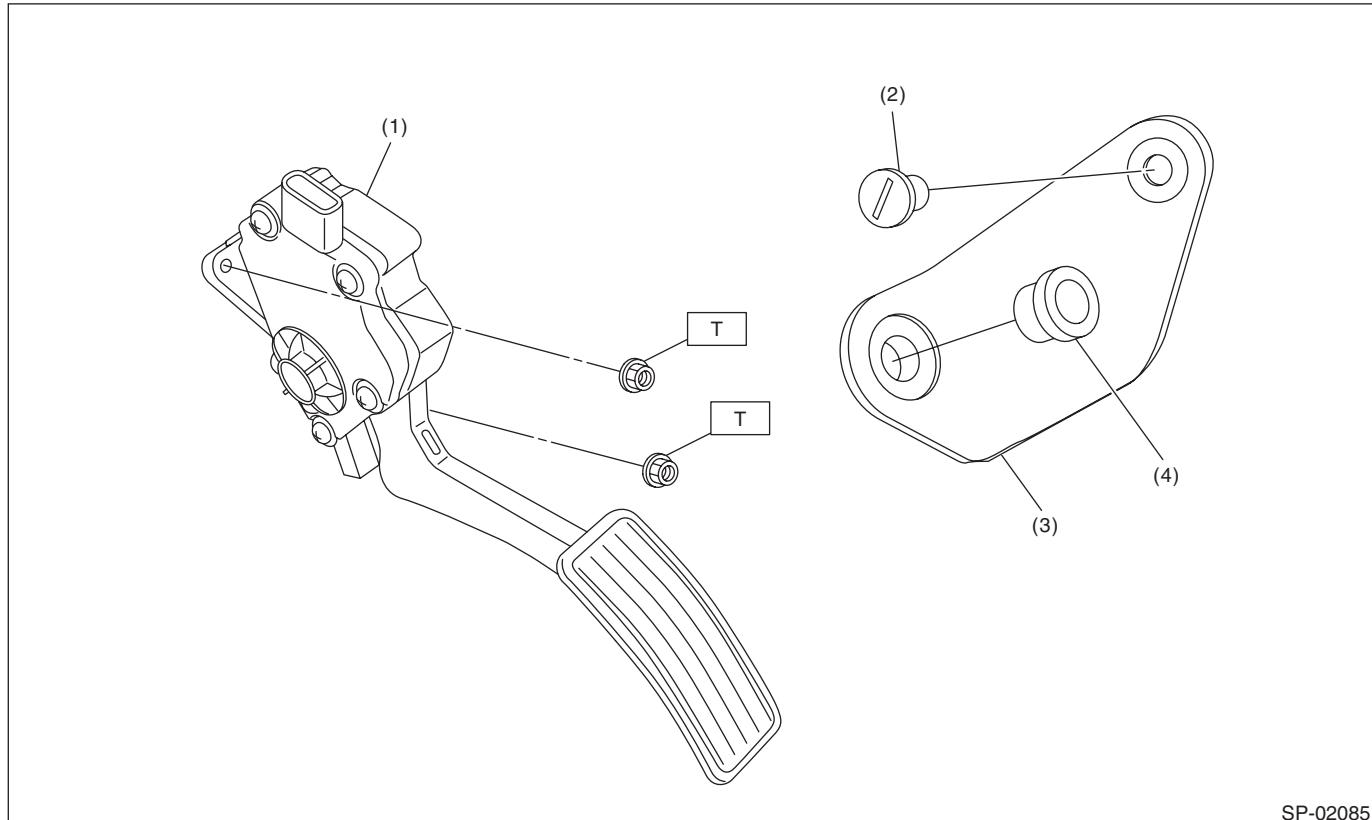

SP-02085

(1) Accelerator pedal ASSY
(2) Clip
(3) Accelerator plate
(4) Accelerator stopper


Tightening torque:N·m (kgf·m, ft·lb)
T: 18 (1.8, 13.3)

C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal or installation.
- Keep the parts in order and protect them from dust and dirt.
- Before removal or installation, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.

D: PREPARATION TOOL

1. SPECIAL TOOL
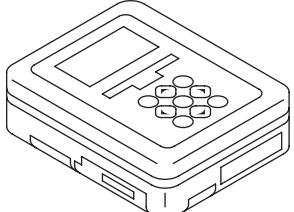
| ILLUSTRATION | TOOL NUMBER | DESCRIPTION | REMARKS |
|---|-------------|-------------------------------|--|
|  ST1B022XU0 | 1B022XU0 | SUBARU SELECT MONITOR III KIT | Used for inspecting the accelerator pedal. |

2. GENERAL TOOL

| TOOL NAME | REMARKS |
|----------------|-----------------------------|
| Circuit tester | Used for measuring voltage. |