

Shut Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

12. Shut Valve

A: REMOVAL


WARNING:

Place "NO OPEN FLAMES" signs near the working area.


CAUTION:

Be careful not to spill fuel.

- 1) Remove the fuel filler pipe. <Ref. to FU(H4DOTC)-75, REMOVAL, Fuel Filler Pipe.>
- 2) Remove the shut valve from the fuel filler pipe.

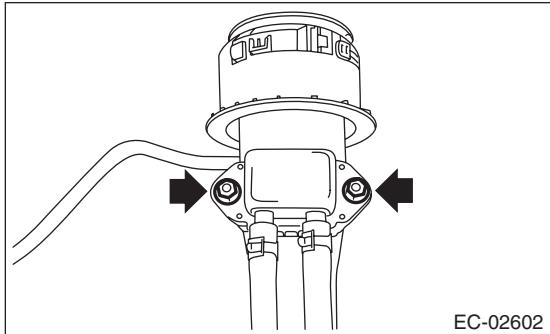

- 3) Disconnect the evaporation hose from shut valve and remove the shut valve.

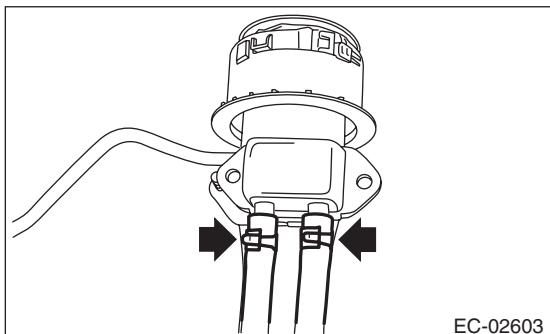


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.5 N·m (0.5 kgf·m, 3.3 ft-lb)

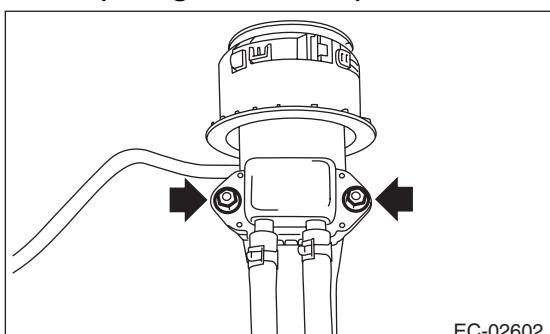

C: INSPECTION

- 1) Check that the shut valve does not have deformation, cracks or other damages.
- 2) Check that the evaporation hose has no cracks, damage or loose part.