

## 13.Drain Valve

### A: REMOVAL


Drain valve is integrated with canister. Refer to "Canister" for removal procedure. <Ref. to EC(H4DOTC)-5, REMOVAL, Canister.>

### B: INSTALLATION

Refer to "Canister" for the installation procedure. <Ref. to EC(H4DOTC)-6, INSTALLATION, Canister.>

### C: INSPECTION

Check the resistance between drain valve terminals.

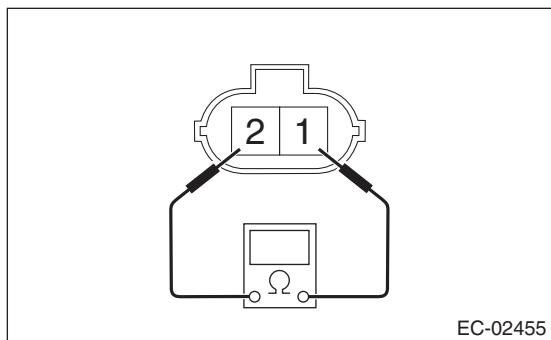

Terminal No.	Standard
1 and 2	20 — 30 Ω