

15.PCV Valve



A: REMOVAL

- 1) Remove the collector cover.
- 2) Remove the intercooler. <Ref. to IN(H4DOTC)-17, REMOVAL, Intercooler.>
- 3) Disconnect the vacuum hose (A) and vacuum hose (B) from the PCV valve and remove the PCV valve.

NOTE:

Pinch the clamp of the vacuum hose (B) by fitting the cut out in the ST with the protrusion on the clamp as shown in the figure, and unlock the clamp.

ST 18353AA000 CLAMP PLIERS

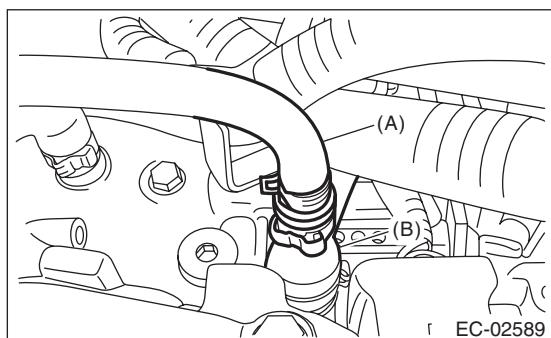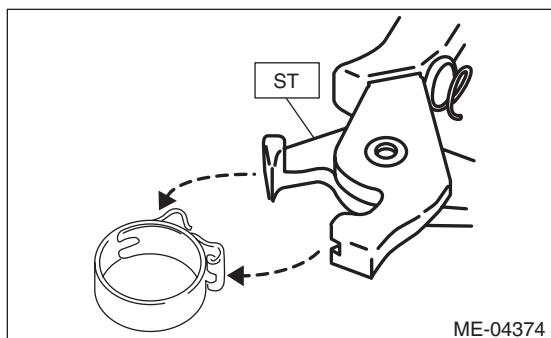



B: INSTALLATION

- 1) Connect the vacuum hose (A) and vacuum hose (B) to the PCV valve.

NOTE:

Use a new clamp for the vacuum hose (B), fit the cut out in the ST with the protrusion on the clamp as shown in the figure, and lock the clamp.

ST 18353AA000 CLAMP PLIERS

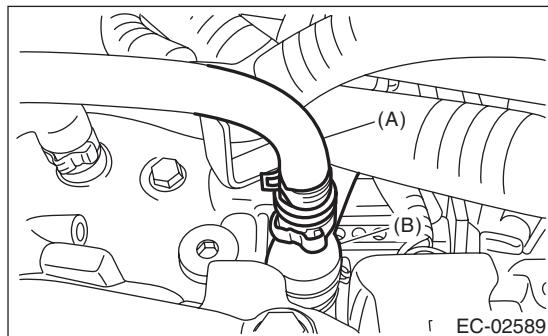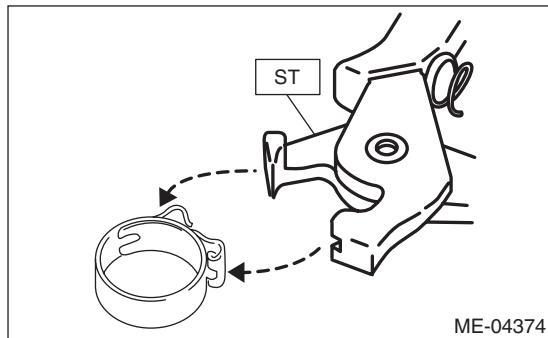

- 2) Install the intercooler. <Ref. to IN(H4DOTC)-18, INSTALLATION, Intercooler.>

- 3) Install the collector cover.


PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


C: INSPECTION

1. PCV VALVE

- 1) Check that the PCV valve has no deformation, cracks or other damages.
- 2) Check that air is discharged from (B) when air is blown into (A).

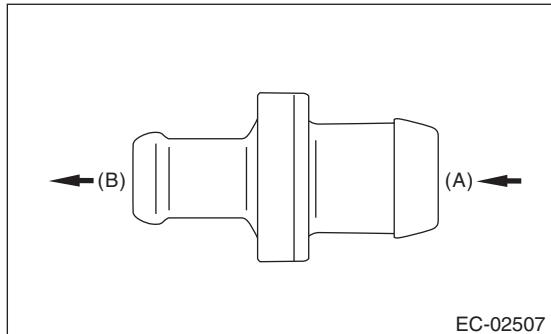

- 3) Check that air does not come out from (B) when air is blown into (A).

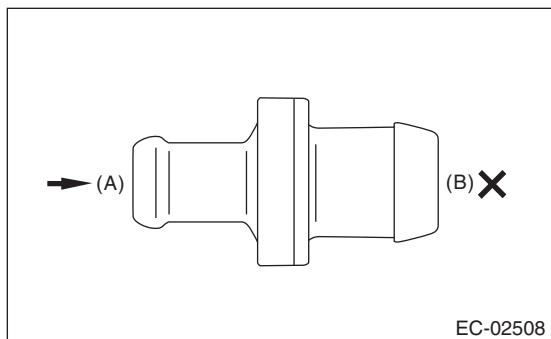

2. OTHER INSPECTIONS

Check the vacuum hose for cracks, damage or looseness.

INTAKE (INDUCTION)

IN(H4DOTC)

	Page
1. General Description	2
2. Air Cleaner Element	7
3. Air Cleaner Case	8
4. Air Intake Boot	10
5. Air Intake Duct	12
6. Intake Duct	13
7. Intercooler	17
8. Turbocharger	20
9. Oil Catch Tank	23
10. Scavenge Pump	25
11. Air By-pass Valve	26
12. Resonator Chamber	28