



## 22. Fuel Pump Control Unit

### A: REMOVAL


- 1) Disconnect the ground cable from battery.

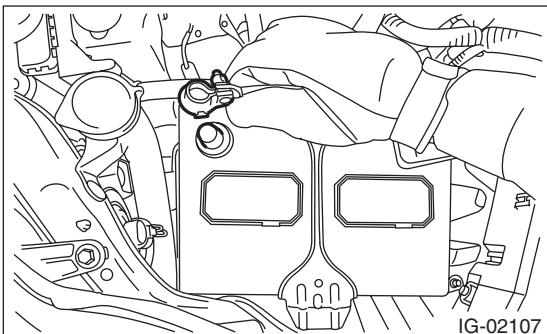

- 2) Remove the trunk trim panel assembly-side RH.  
<Ref. to EI-109, REMOVAL, Rear Quarter Trim.>
- 3) Remove the fuel pump control unit.

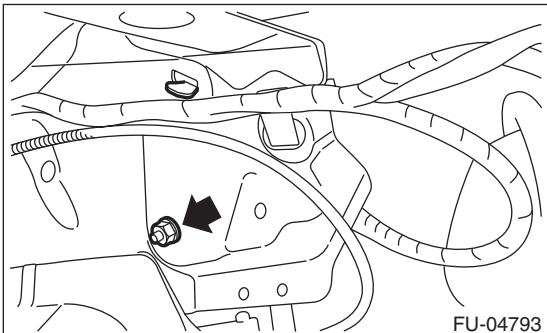

- 4) Disconnect the connector from fuel pump control unit.

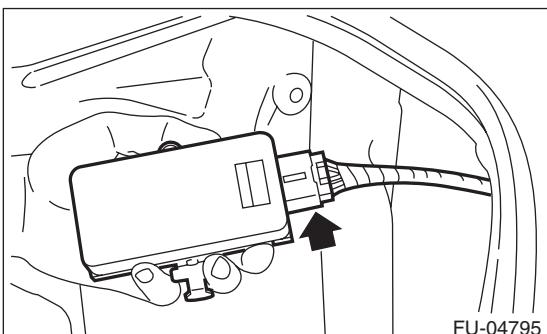

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

**5 N·m (0.5 kgf·m, 3.7 ft-lb)**

### C: INSPECTION

Check that the fuel pump control unit has no deformation, cracks or other damages.