

## 12. Resonator Chamber

### A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner Case.>

### B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H4DOTC)-8, INSTALLATION, Air Cleaner Case.>

### C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

# MECHANICAL

# ***ME(H4DOTC)***

---

	Page
1. General Description .....	2
2. Compression .....	20
3. Idle Speed .....	21
4. Ignition Timing .....	22
5. Intake Manifold Vacuum .....	23
6. Engine Oil Pressure .....	24
7. Fuel Pressure .....	25
8. Valve Clearance .....	26
9. Engine Assembly .....	30
10. Engine Mounting .....	37
11. Preparation for Overhaul .....	40
12. V-belt .....	41
13. Crank Pulley .....	43
14. Timing Belt Cover .....	45
15. Timing Belt .....	50
16. Cam Sprocket .....	59
17. Crank Sprocket .....	60
18. Camshaft .....	61
19. Cylinder Head .....	70
20. Cylinder Block .....	79
21. Intake and Exhaust Valve .....	103
22. Piston .....	104
23. Connecting Rod .....	105
24. Crankshaft .....	106
25. Engine Trouble in General .....	107
26. Engine Noise .....	113