

## 21. Intake and Exhaust Valve

### A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of the intake and exhaust valves.

<Ref. to ME(H4DOTC)-70, REMOVAL, Cylinder Head.> <Ref. to ME(H4DOTC)-71, INSTALLATION, Cylinder Head.>