

## 24. Crankshaft

### A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of the crankshaft. <Ref. to ME(H4DOTC)-79, REMOVAL, Cylinder Block.> <Ref. to ME(H4DOTC)-84, INSTALLATION, Cylinder Block.>