

8. Radiator Main Fan and Fan Motor


A: REMOVAL

- 1) Remove the collector cover.


NOTE:

Follow the steps below when removing the collector cover.

- (1) Pull up the two points at the rear (A).
- (2) Pull up the two points at the front (B) while moving them forward.

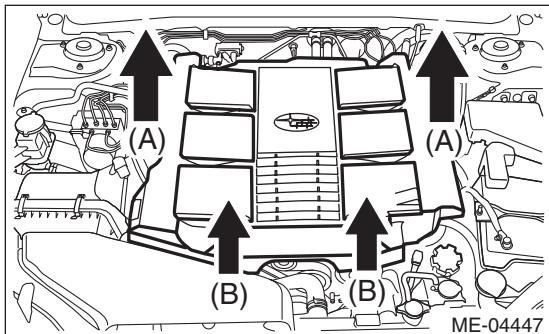


- 2) Disconnect the ground cable from battery.
- 3) Lift up the vehicle.
- 4) Remove the under cover. <Ref. to EI-35, REMOVAL, Front Under Cover.>
- 5) Drain engine coolant completely. <Ref. to CO(H6DO)-12, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 6) Disconnect the integrated connector of radiator main fan & fan motor and radiator sub fan & fan motor.

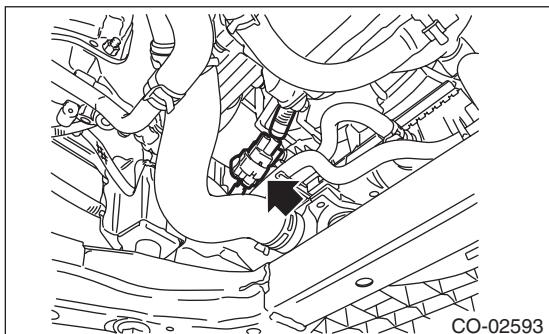


- 7) Lower the vehicle.
- 8) Remove the air intake duct. <Ref. to IN(H6DO)-8, REMOVAL, Air Intake Duct.>
- 9) Remove the grille bracket.

NOTE:



Remove ten clips when removing the grille bracket.

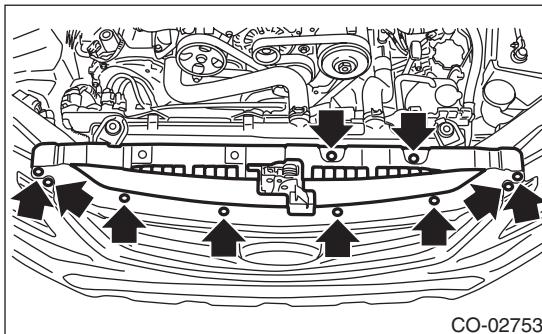

- 10) Remove the reservoir tank. <Ref. to CO(H6DO)-25, REMOVAL, Reservoir Tank.>
- 11) Remove radiator upper hoses LH and RH only on radiator side.

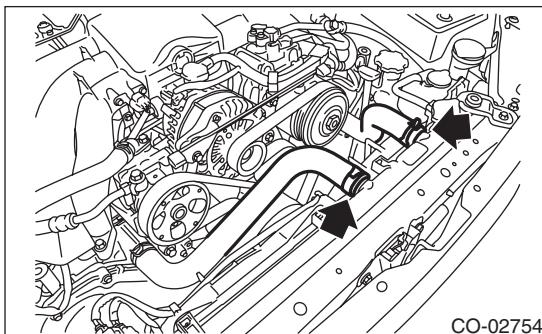

- 12) Remove the ATF hose from the clip of radiator fan shroud.
- 13) Remove bolts on the upper side of radiator fan shroud.

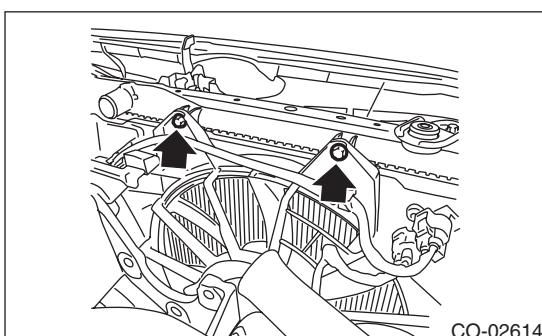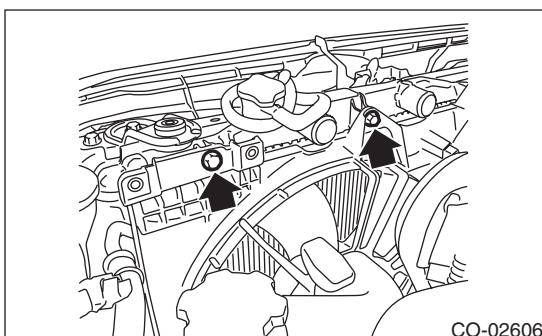

- 14) Remove the radiator fan shroud.

Radiator Main Fan and Fan Motor

COOLING

NOTE:


When pulling up the radiator fan shroud, be careful not to damage the radiator hose or ATF hose.

B: INSTALLATION


- 1) Tighten the bolts on the upper side of radiator fan shroud.

Tightening torque:

7.5 N·m (0.8 kgf·m, 5.5 ft·lb)

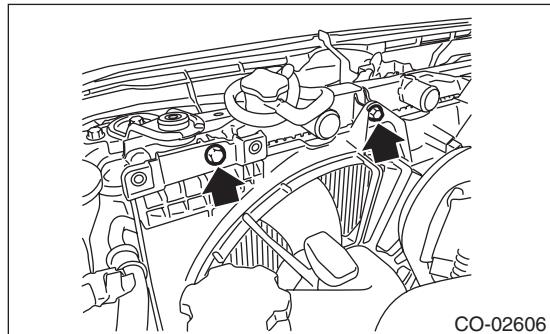


CO-02606

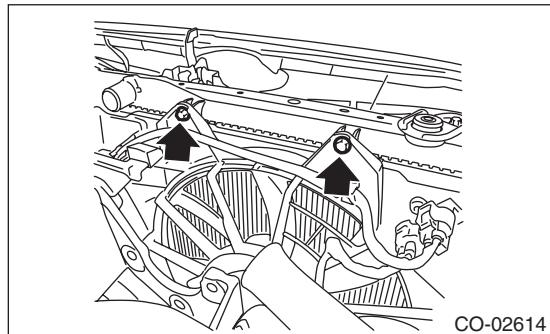

CO-02614


- 2) Install radiator upper hoses LH and RH to the radiator.

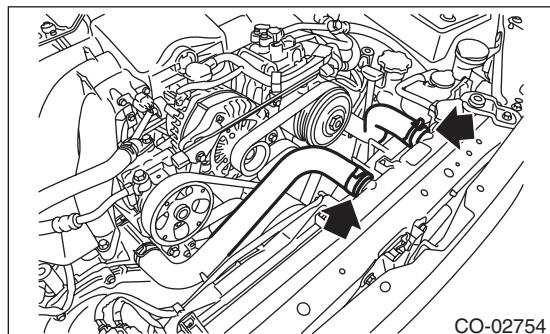

CO-02754

- 3) Install the reservoir tank. <Ref. to CO(H6DO)-25, INSTALLATION, Reservoir Tank.>

- 4) Attach the grille bracket.

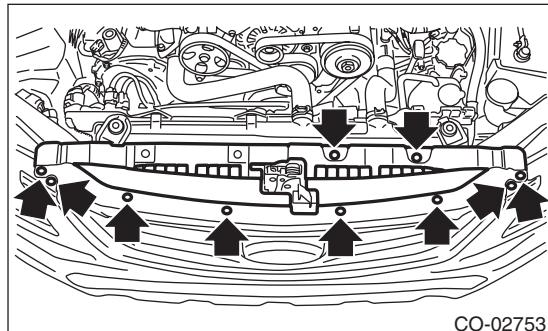


CO-02753

- 5) Install the air intake duct. <Ref. to IN(H6DO)-8, INSTALLATION, Air Intake Duct.>

- 6) Lift up the vehicle.

- 7) Connect the integrated connector of radiator main fan & fan motor and radiator sub fan & fan motor.

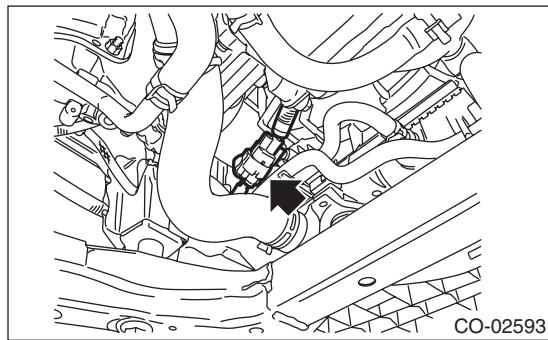

CO-02593

- 8) Install the under cover. <Ref. to EI-35, INSTALLATION, Front Under Cover.>

- 9) Lower the vehicle.


- 10) Fill engine coolant. <Ref. to CO(H6DO)-12, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

- 11) Connect the battery ground terminal.

- 12) Install the collector cover.


C: DISASSEMBLY

- 1) Disconnect the connector from the radiator fan control unit, and remove the harness.

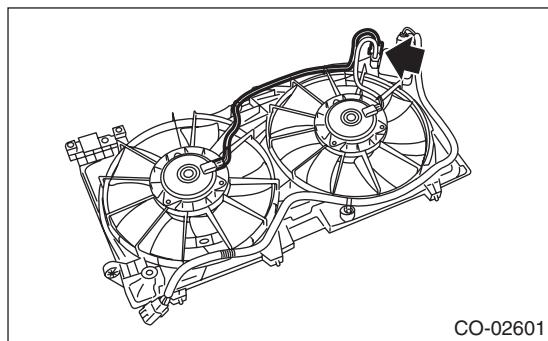


CO-02601

2) Remove the radiator main fan.

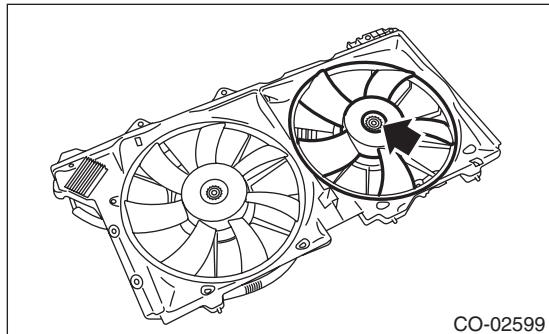

3) Remove the radiator main fan motor.

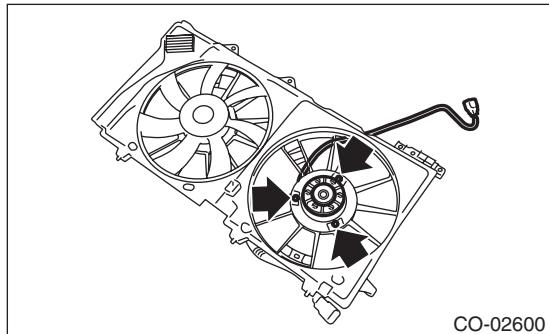


D: ASSEMBLY

Assemble in the reverse order of disassembly.


Tightening torque:

3.8 N·m (0.4 kgf-m, 2.8 ft-lb)

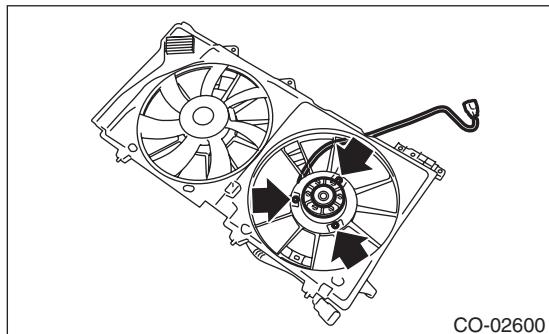

Tightening torque:

6.3 N·m (0.6 kgf-m, 4.6 ft-lb)

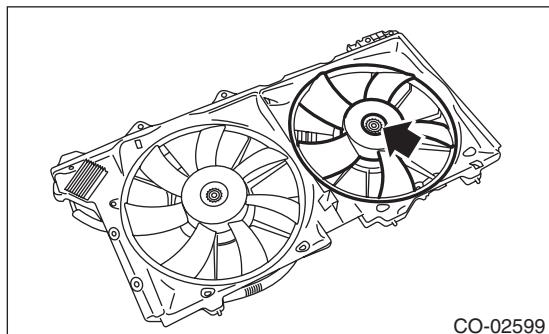

E: INSPECTION

Check that the radiator main fan, radiator main fan shroud and main fan motor do not have deformation, cracks or damage.