

9. Radiator Sub Fan and Fan Motor

A: REMOVAL


Refer to the Radiator Main Fan and Fan Motor.
<Ref. to CO(H6DO)-21, REMOVAL, Radiator Main Fan and Fan Motor.>

B: INSTALLATION


Refer to the Radiator Main Fan and Fan Motor.
<Ref. to CO(H6DO)-22, INSTALLATION, Radiator Main Fan and Fan Motor.>

C: DISASSEMBLY


- 1) Disconnect the connector from the radiator fan control unit, and remove the harness.

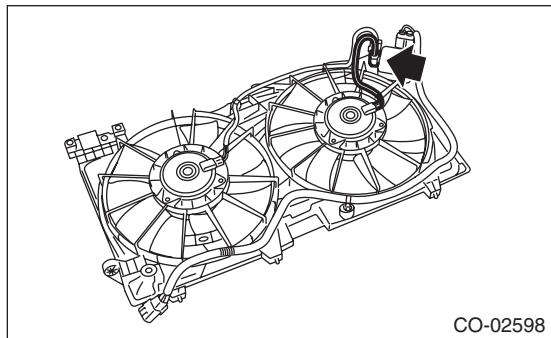


- 2) Remove the radiator sub fan.

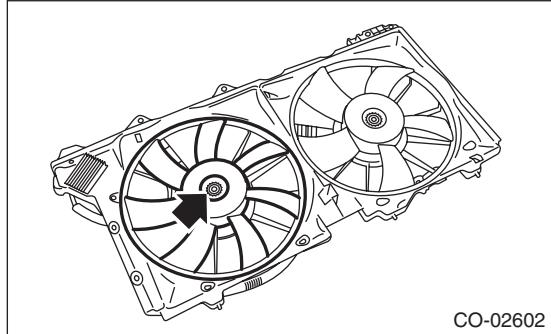


- 3) Remove the radiator sub fan motor.

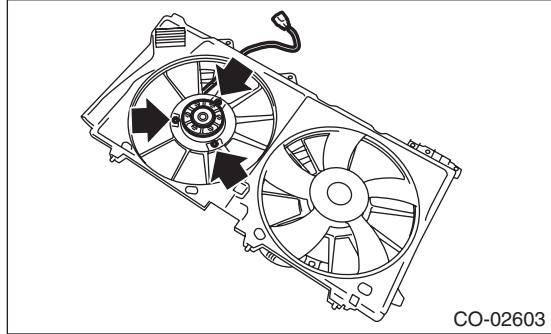

Tightening torque:
 $3.8 \text{ N}\cdot\text{m} (0.4 \text{ kgf-m}, 2.8 \text{ ft-lb})$

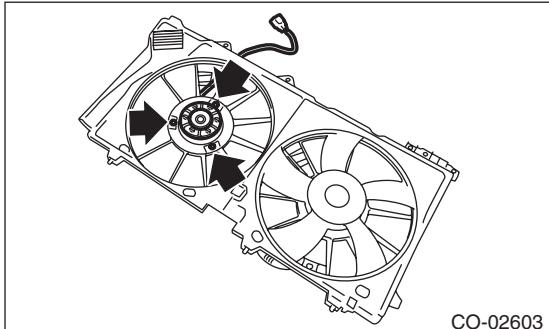

Tightening torque:
 $6.3 \text{ N}\cdot\text{m} (0.6 \text{ kgf-m}, 4.6 \text{ ft-lb})$

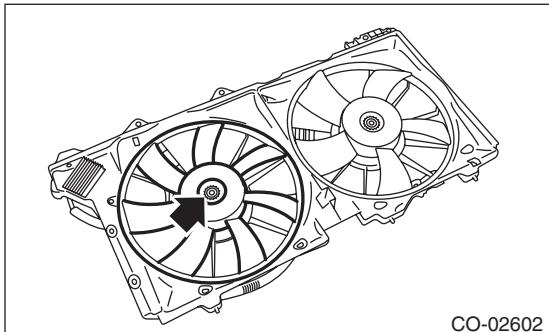

E: INSPECTION

Check that the radiator sub fan, radiator sub fan shroud and sub fan motor do not have deformation, cracks or damage.

D: ASSEMBLY

Assemble in the reverse order of disassembly.