

## **4. EGR Valve**

### **A: REMOVAL**

For removal procedure, refer to “FU(H6DO)” section. <Ref. to FU(H6DO)-41, REMOVAL, EGR Valve.>

### **B: INSTALLATION**

For installation procedure, refer to “FU(H6DO)” section. <Ref. to FU(H6DO)-41, INSTALLATION, EGR Valve.>

### **C: INSPECTION**

For inspection procedures, refer to the “FU(H6DO)” section. <Ref. to FU(H6DO)-41, INSPECTION, EGR Valve.>