






4. Electrical Component Location

A: LOCATION

1. CONTROL MODULE

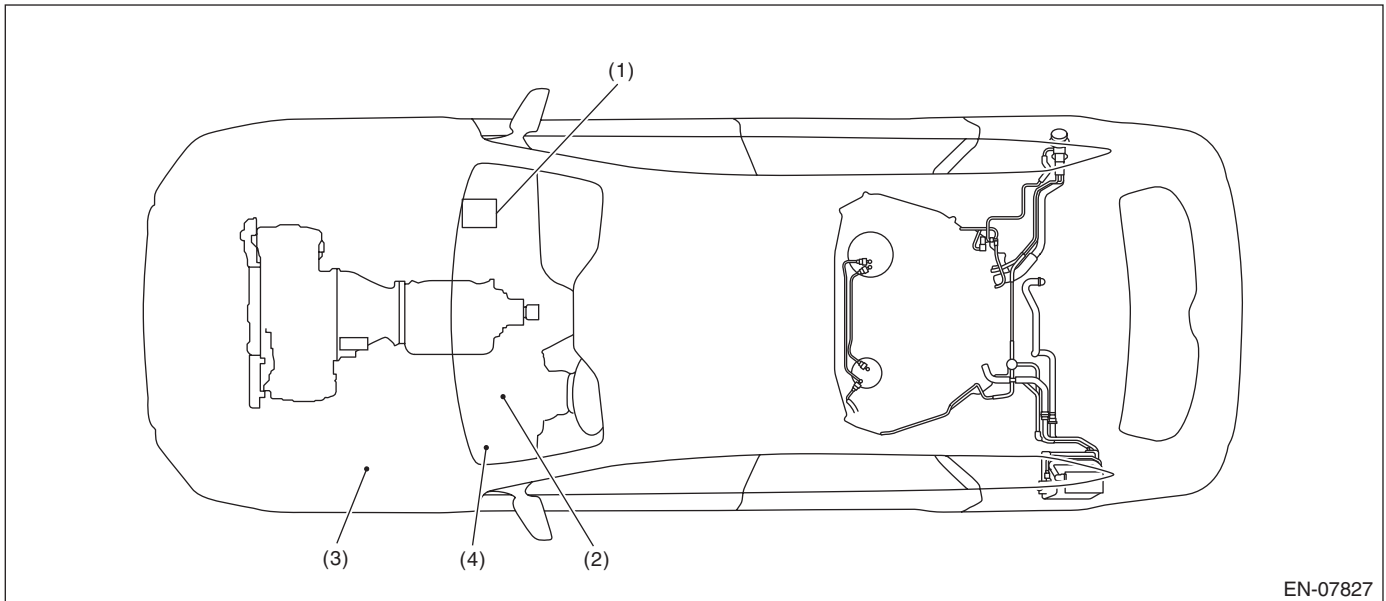


- | | | |
|---------------------------------|-------------------------------|-------------------------|
| (1) Engine control module (ECM) | (3) Delivery (test) mode fuse | (4) Data link connector |
| (2) Malfunction indicator light | | |

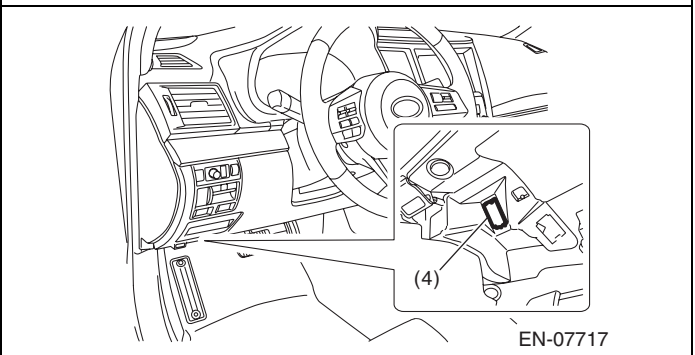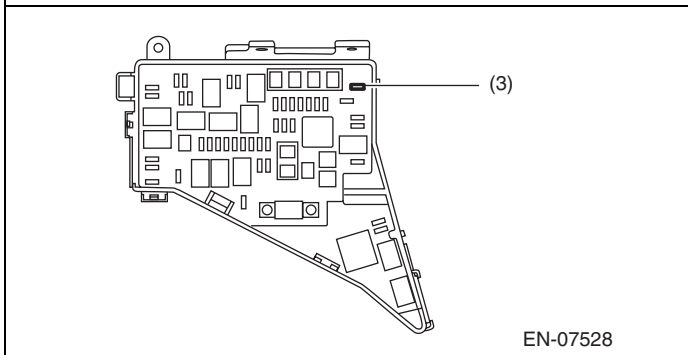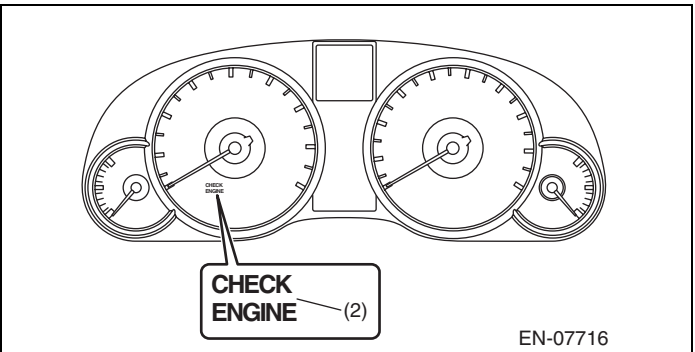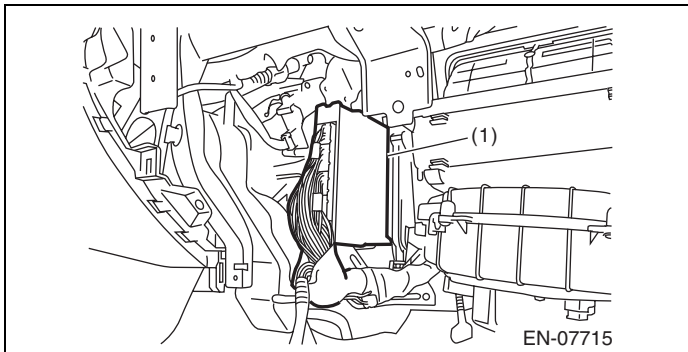

Electrical Component Location

ENGINE (DIAGNOSTICS)


2. SENSOR

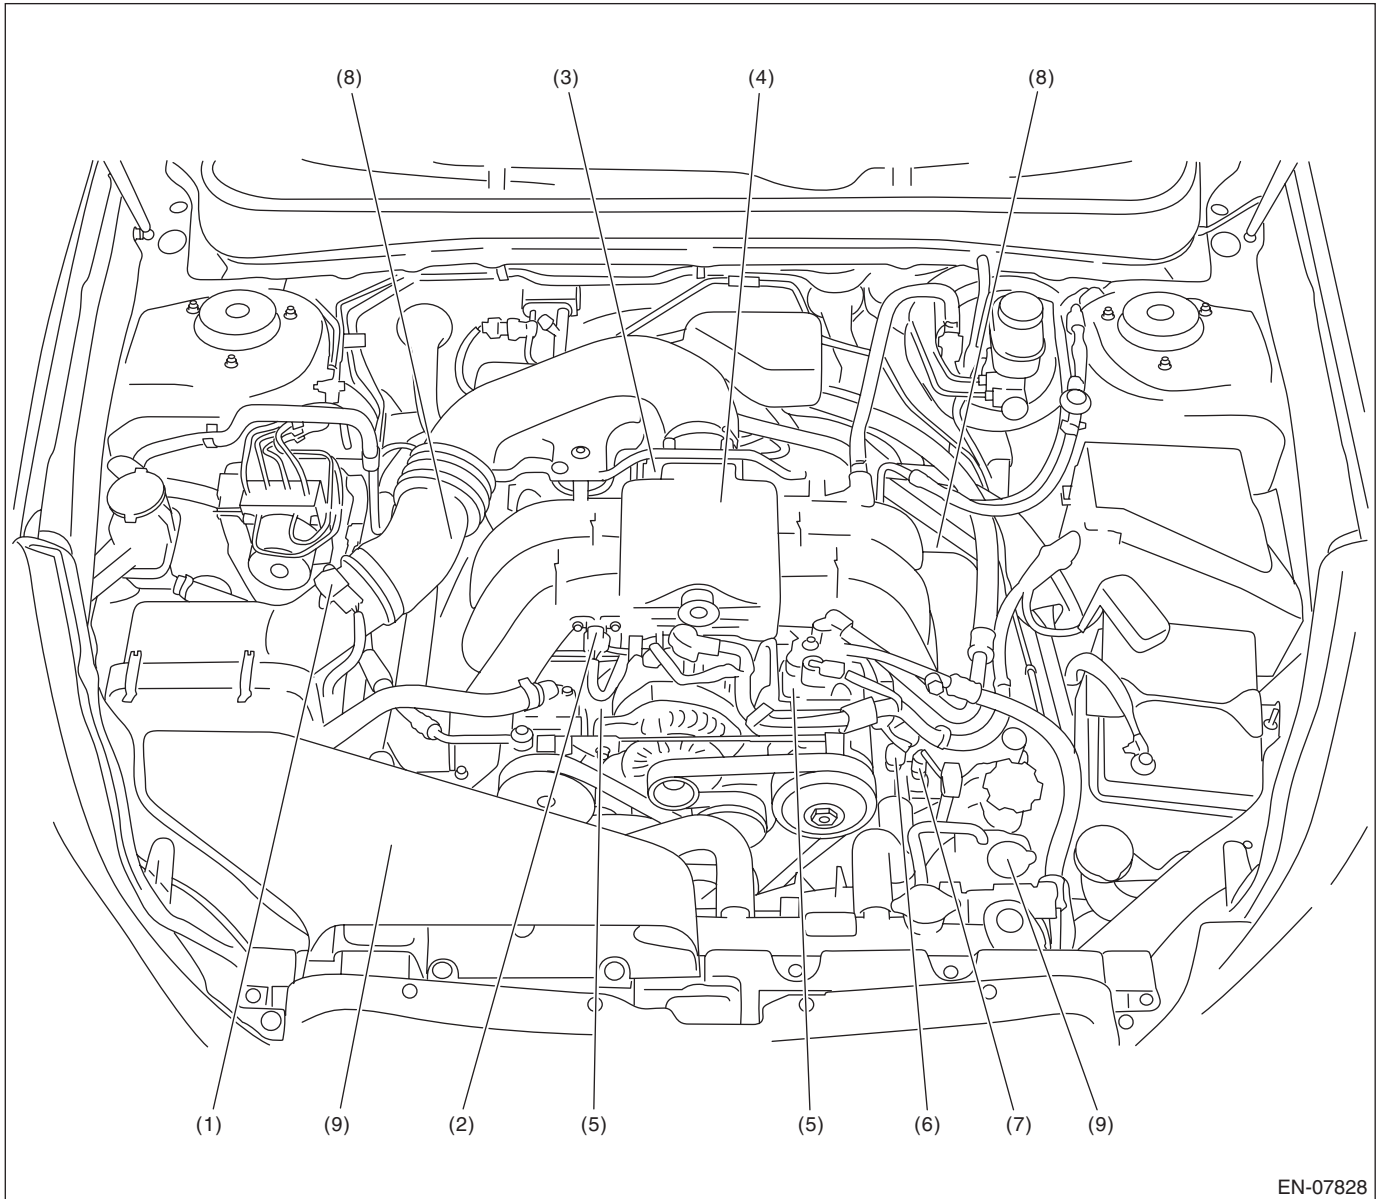


- | | | |
|---|---------------------------------------|--------------------------------------|
| (1) Mass air flow and intake air temperature sensor | (4) Crankshaft position sensor | (7) Oil temperature sensor |
| (2) Manifold absolute pressure sensor | (5) Knock sensor | (8) Intake camshaft position sensor |
| (3) Electronic throttle control | (6) Engine coolant temperature sensor | (9) Exhaust camshaft position sensor |

Electrical Component Location


ENGINE (DIAGNOSTICS)

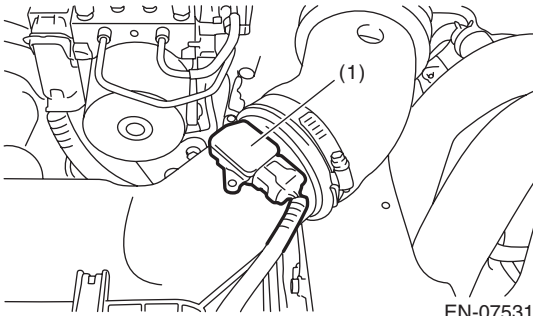


EN-07531

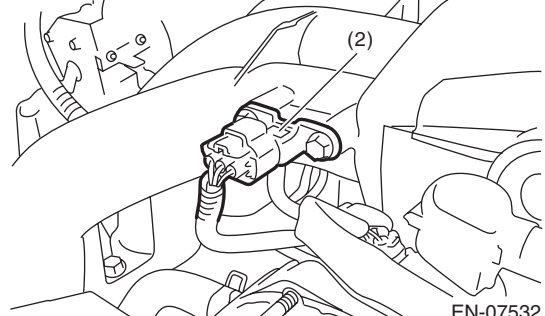


EN-07532

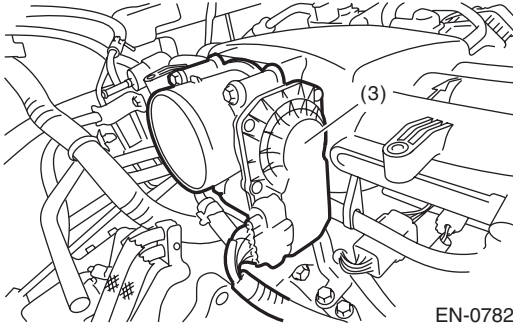


EN-07829

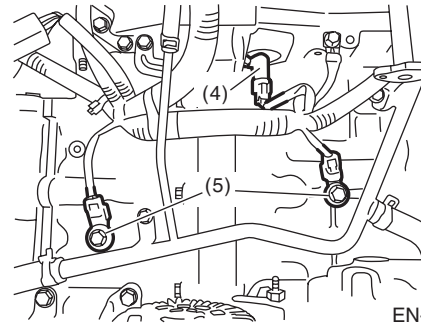


EN-07830

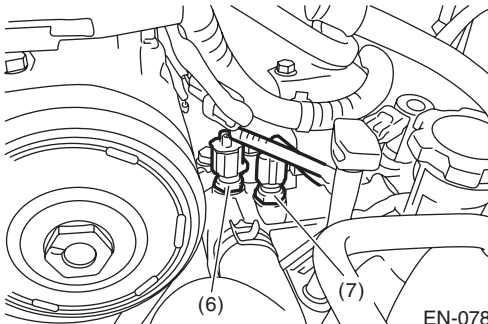

EN-07831

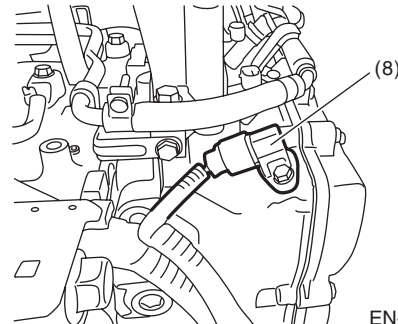

EN-07832

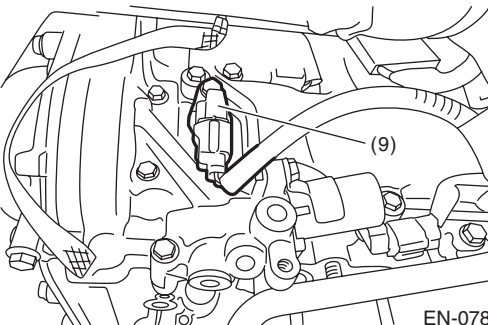


EN-07833

SUBARU.


Electrical Component Location

ENGINE (DIAGNOSTICS)

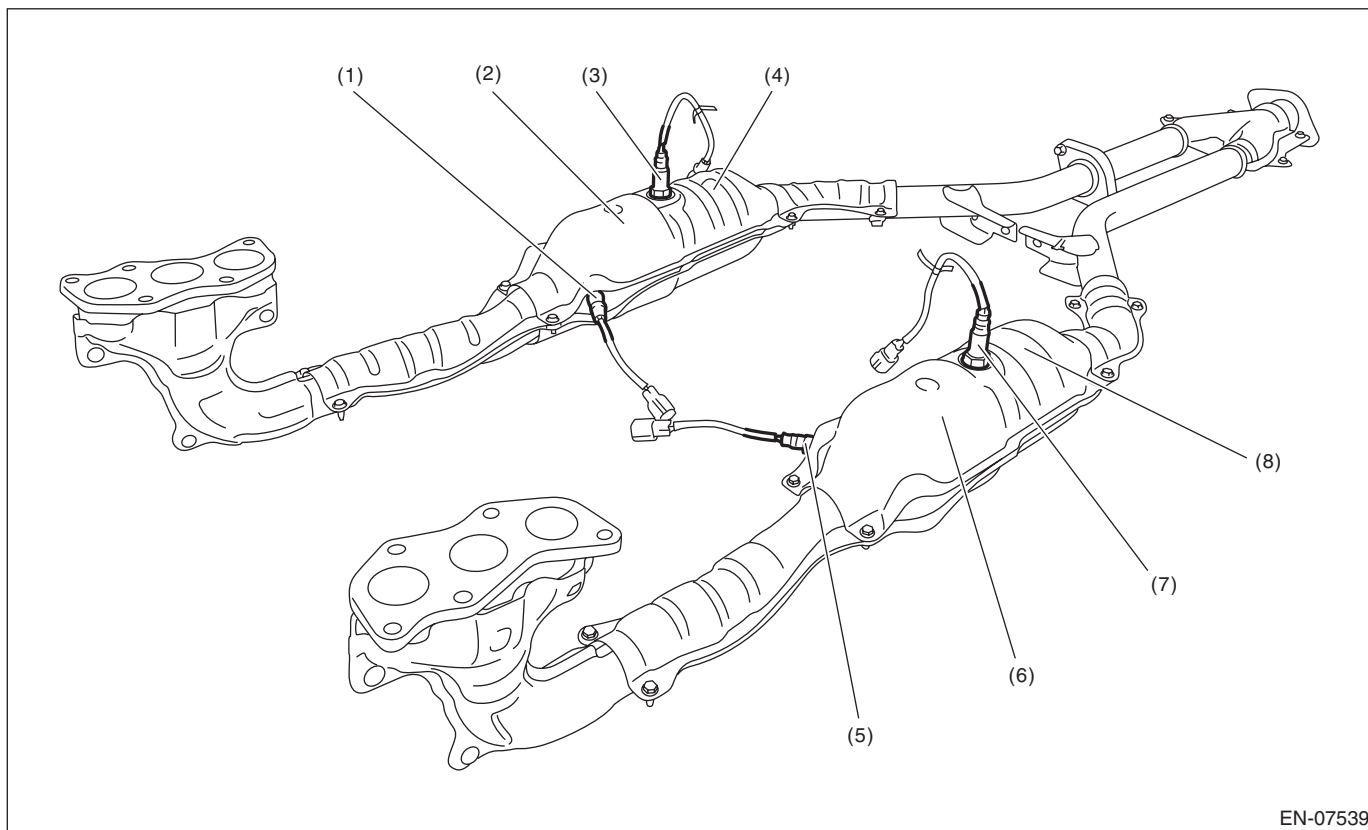

EN-07539

- | | | |
|----------------------------------|----------------------------------|---------------------------------|
| (1) Front oxygen (A/F) sensor RH | (4) Rear catalytic converter RH | (7) Rear oxygen sensor LH |
| (2) Front catalytic converter RH | (5) Front oxygen (A/F) sensor LH | (8) Rear catalytic converter LH |
| (3) Rear oxygen sensor RH | (6) Front catalytic converter LH | |



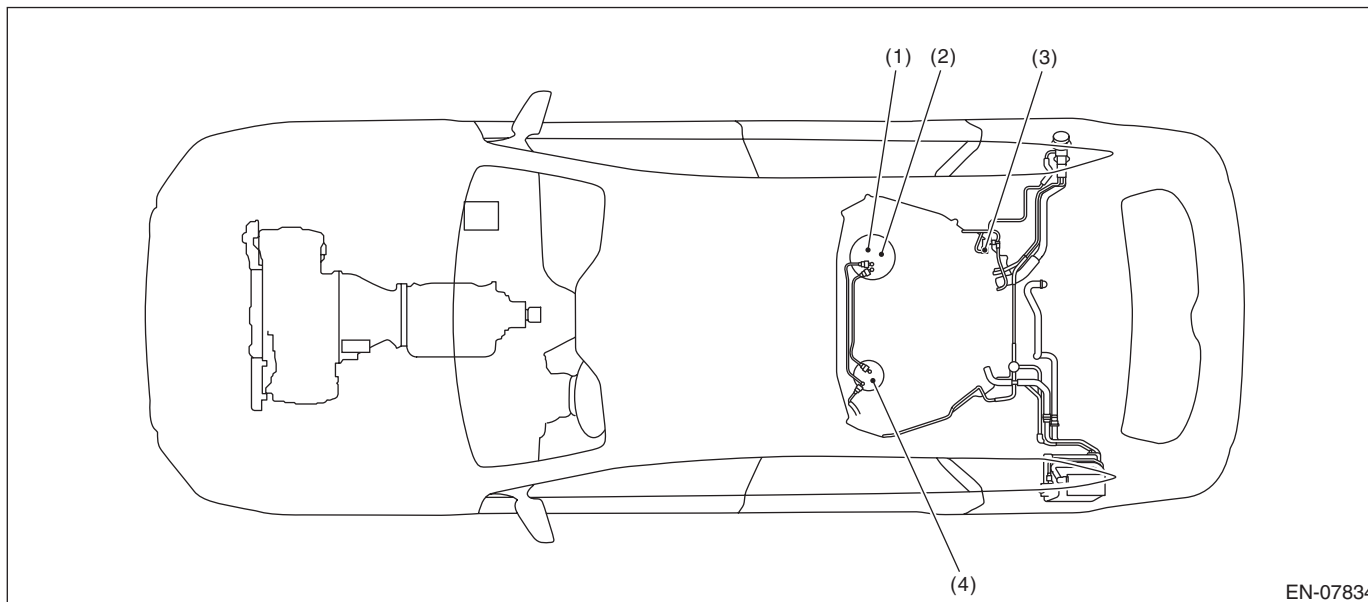


EN-07834

- | | | |
|-----------------------------|-------------------------------|---------------------------|
| (1) Fuel level sensor | (3) Fuel tank pressure sensor | (4) Fuel sub level sensor |
| (2) Fuel temperature sensor | | |

Electrical Component Location


ENGINE (DIAGNOSTICS)

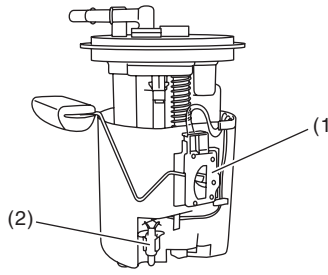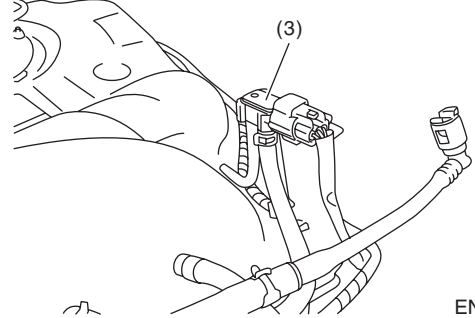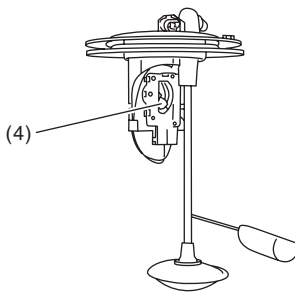 EN-07718	 EN-07719
 EN-07720	SUBARU®

Electrical Component Location

ENGINE (DIAGNOSTICS)

3. SOLENOID VALVE, ACTUATOR, EMISSION CONTROL SYSTEM PARTS AND IGNITION SYSTEM PARTS

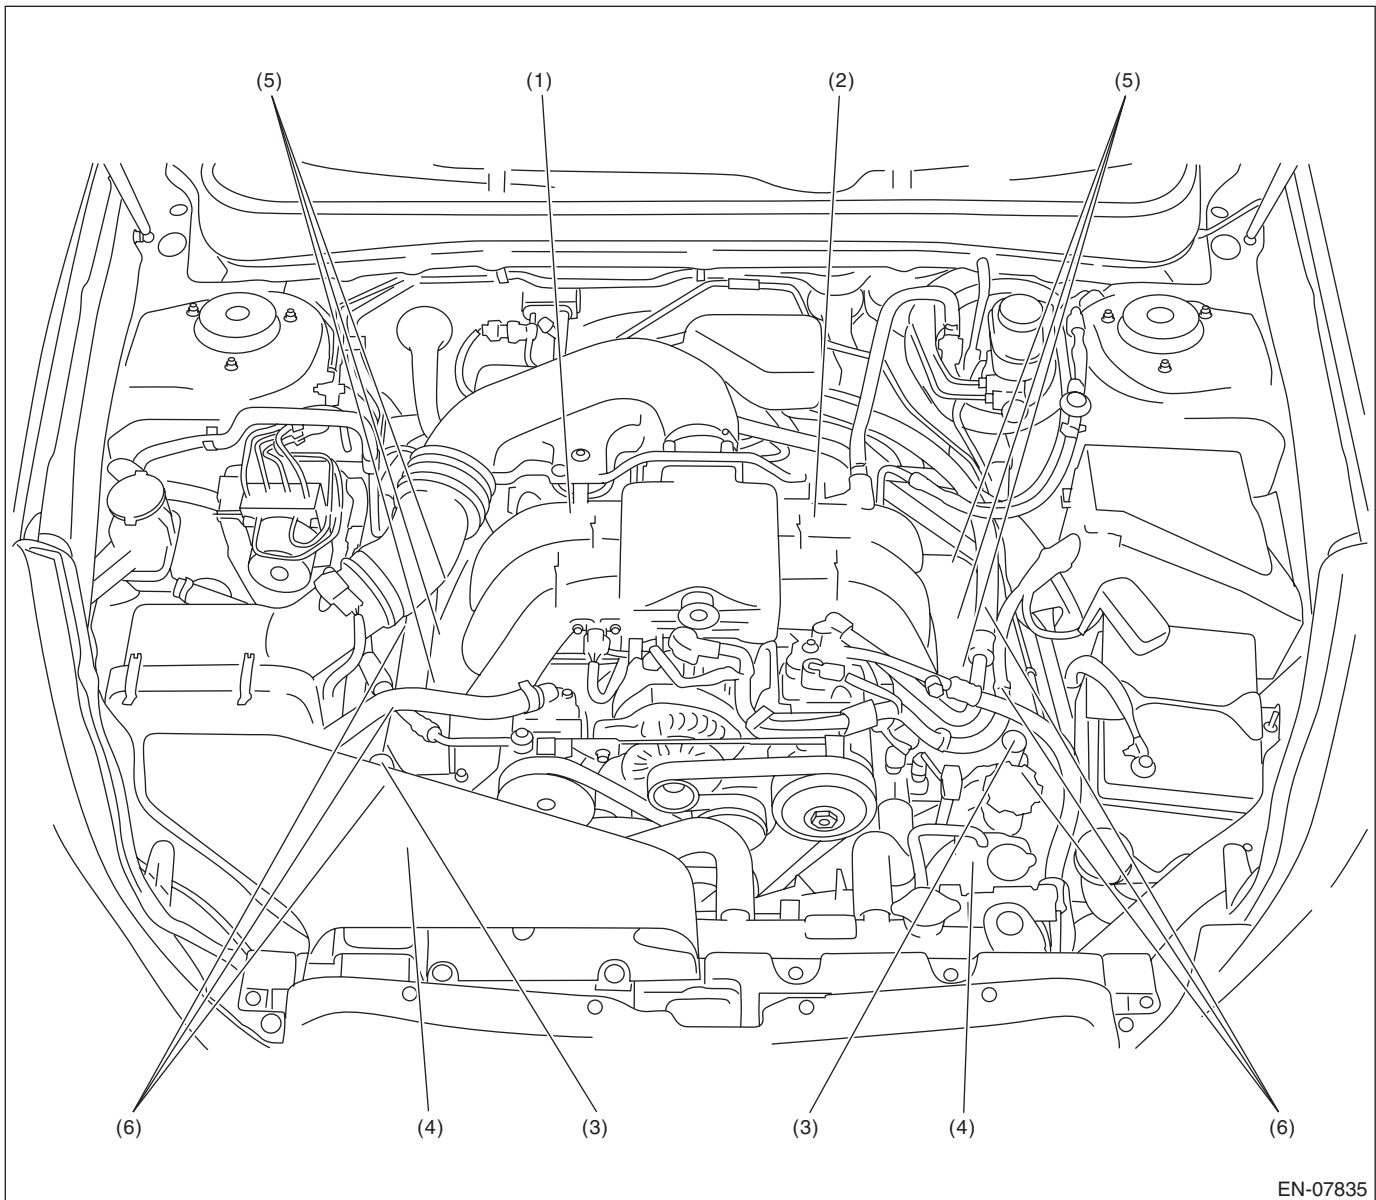

EN-07835

(1) Purge control solenoid valve

(3) Intake oil flow control solenoid valve

(5) Fuel injector


(2) EGR valve

(4) Exhaust oil flow control solenoid valve


(6) Ignition coil

Electrical Component Location


ENGINE (DIAGNOSTICS)

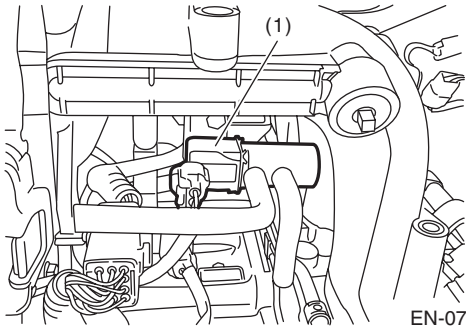


EN-07836

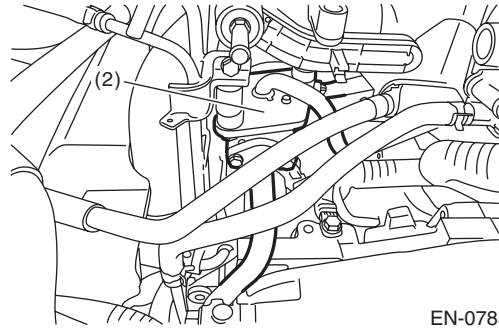


EN-07837

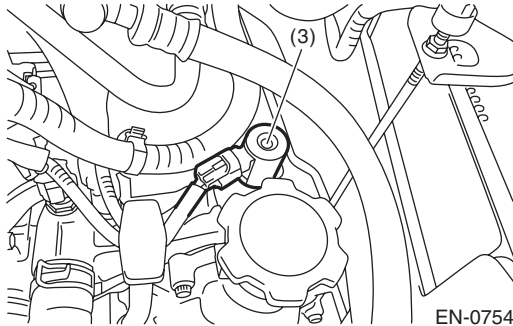


EN-07543

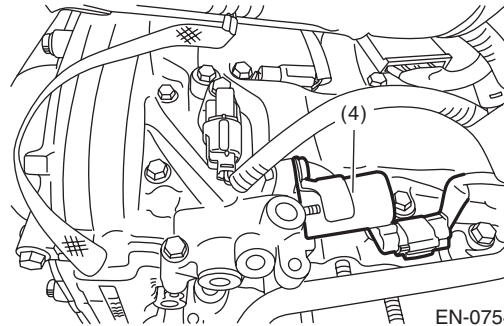

EN-07544

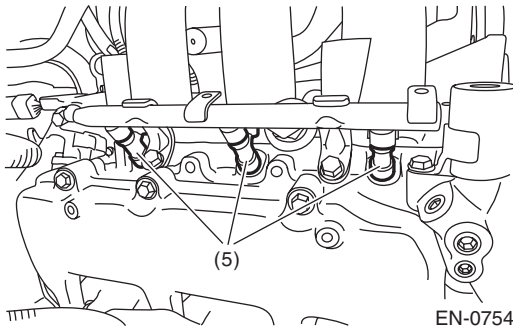


EN-07545

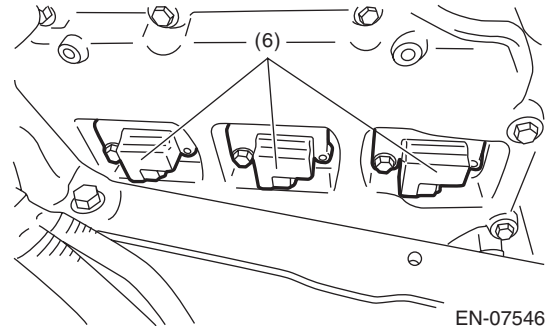

EN-07546


Electrical Component Location

ENGINE (DIAGNOSTICS)

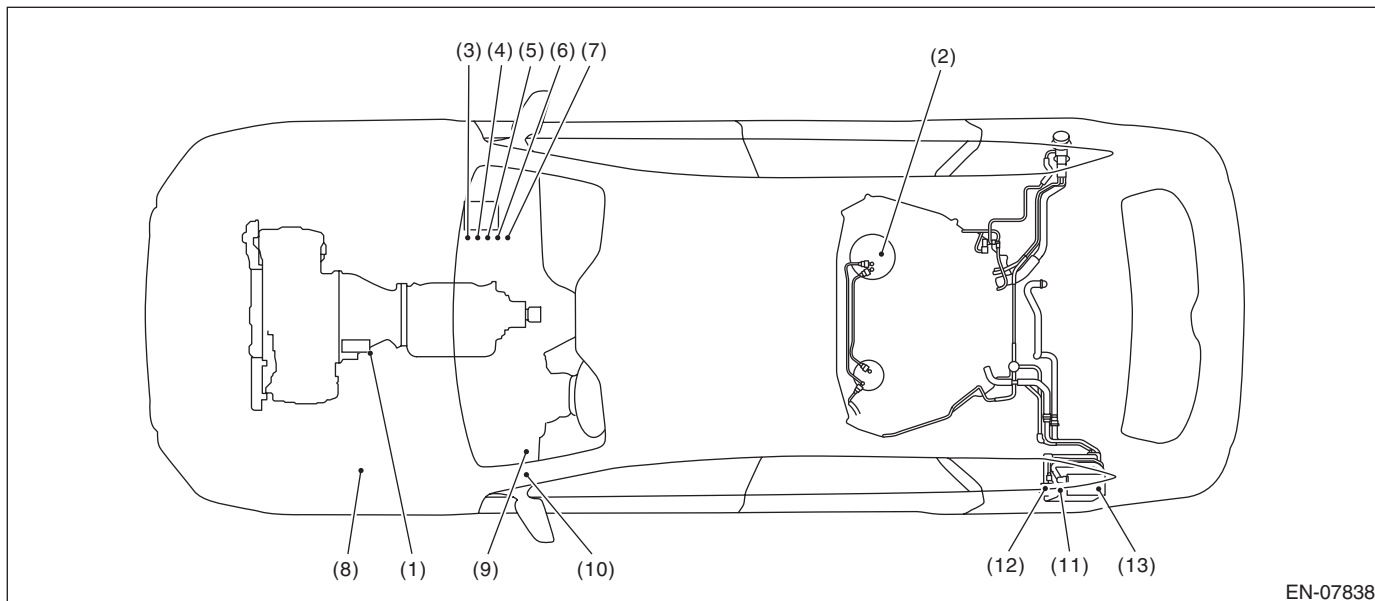


EN-07838


- | | | |
|------------------------------|---------------------------------------|----------------------|
| (1) Starter | (6) Electronic throttle control relay | (10) Inhibitor relay |
| (2) Fuel pump | (7) Fuel pump relay | (11) Canister |
| (3) Main relay | (8) Main fan relay | (12) Drain valve |
| (4) IG relay | (9) Starter relay | (13) Drain filter |
| (5) A/F, oxygen sensor relay | | |

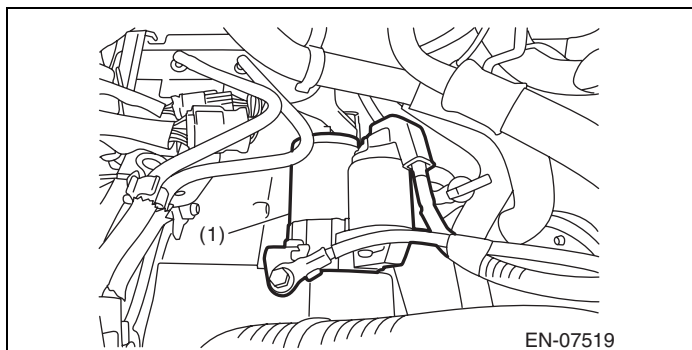


EN-07519

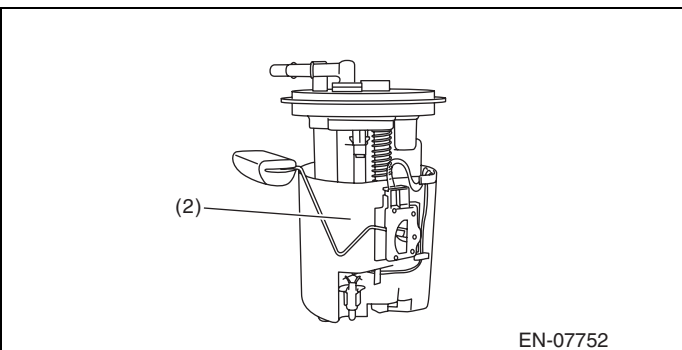

EN-07752

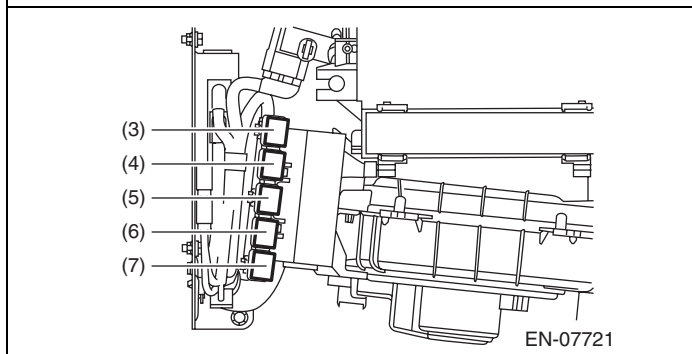

EN-07721

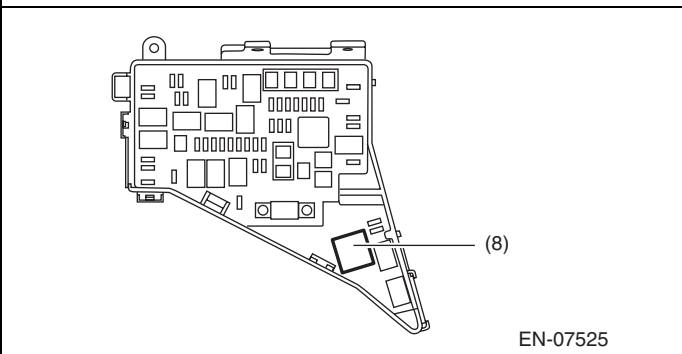

EN-07525

