


Mass Air Flow and Intake Air Temperature Sensor

FUEL INJECTION (FUEL SYSTEMS)


10. Mass Air Flow and Intake Air Temperature Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector (A) from air flow and intake air temperature sensor.

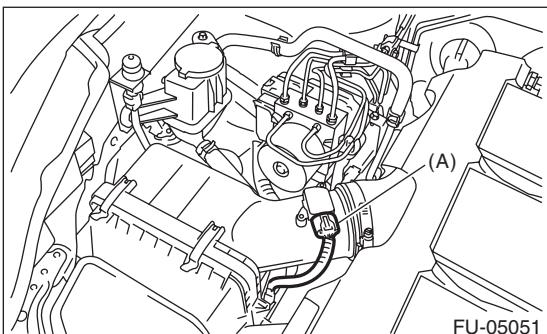

- 3) Remove the mass air flow and intake air temperature sensor.

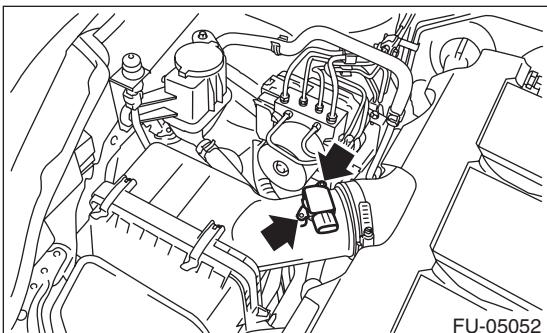

FU-05052

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

1 N·m (0.1 kgf·m, 0.7 ft-lb)

C: INSPECTION


1. CHECK MASS AIR FLOW SENSOR UNIT

- 1) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, circuit tester positive terminal to terminal No. 5 and the circuit tester negative terminal to terminal No. 4.

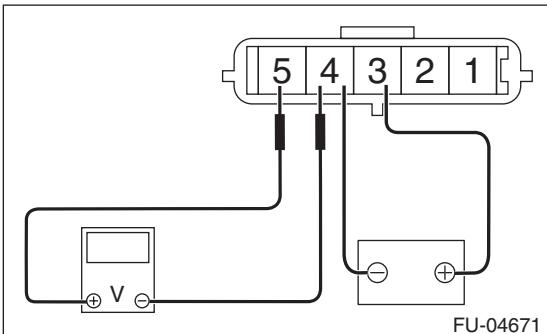

FU(H6DO)-40


- 2) Check that the voltage changes when air is blown to the mass air flow sensor unit from arrow direction.

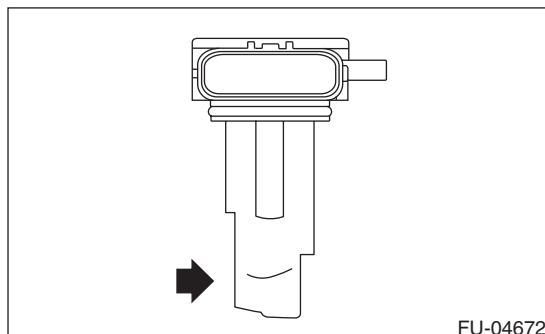

FU-04672

2. CHECK INTAKE AIR TEMPERATURE SENSOR UNIT

Measure the resistance between intake air temperature sensor terminals.

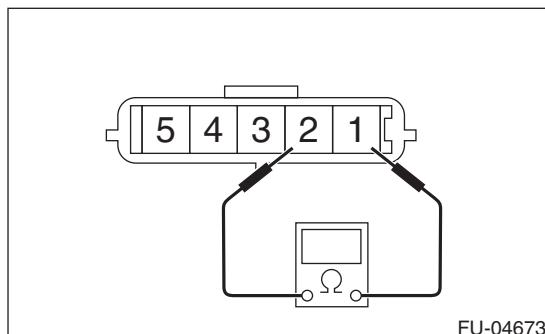

FU-04673

Temperature	Terminal No.	Standard
-20°C (-4°F)		16.0±2.4 kΩ
20°C (68°F)	1 and 2	2.45±0.24 kΩ
60°C (140°F)		0.58±0.087 kΩ

3. OTHER INSPECTIONS

- 1) Check that the mass air flow and intake air temperature sensor has no deformation, cracks or other damages.
- 2) Check that the mass air flow and intake air temperature sensor has no dirt.