

14. Oil Temperature Sensor


A: REMOVAL

- 1) Remove the collector cover.


NOTE:

Follow these procedures for removal of the collector cover.

- (1) Lift up the rear side holding two positions (A).
- (2) Lift up the front side holding two positions (B) while moving it in the forward direction of the vehicle.

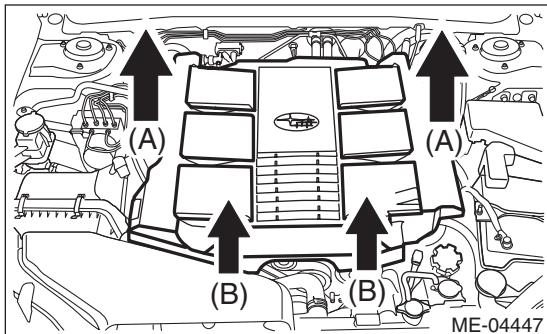

- 2) Disconnect the ground cable from battery.
- 3) Disconnect the connector from oil temperature sensor.

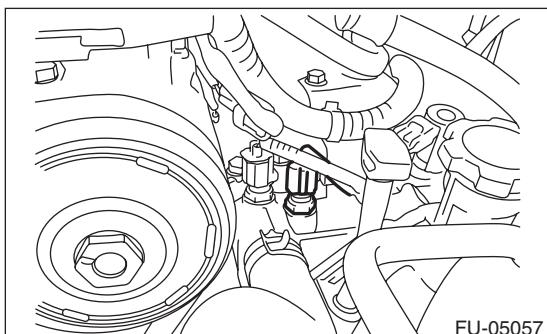

- 4) Remove the oil temperature sensor.

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

22 N·m (2.2 kgf·m, 16.2 ft-lb)

C: INSPECTION

- 1) Check that the oil temperature sensor has no deformation, cracks or other damages.

- 2) Check the resistance between the oil temperature sensor terminals.

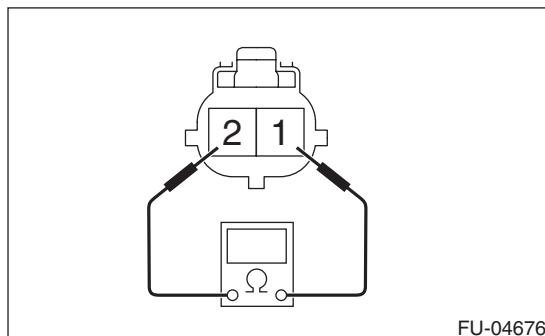

Terminal No.	Standard
1 and 2	$2.45 \pm 0.2 \Omega$ (when 20°C (68°F))