


General Description

INTAKE (INDUCTION)

1. General Description

A: COMPONENT

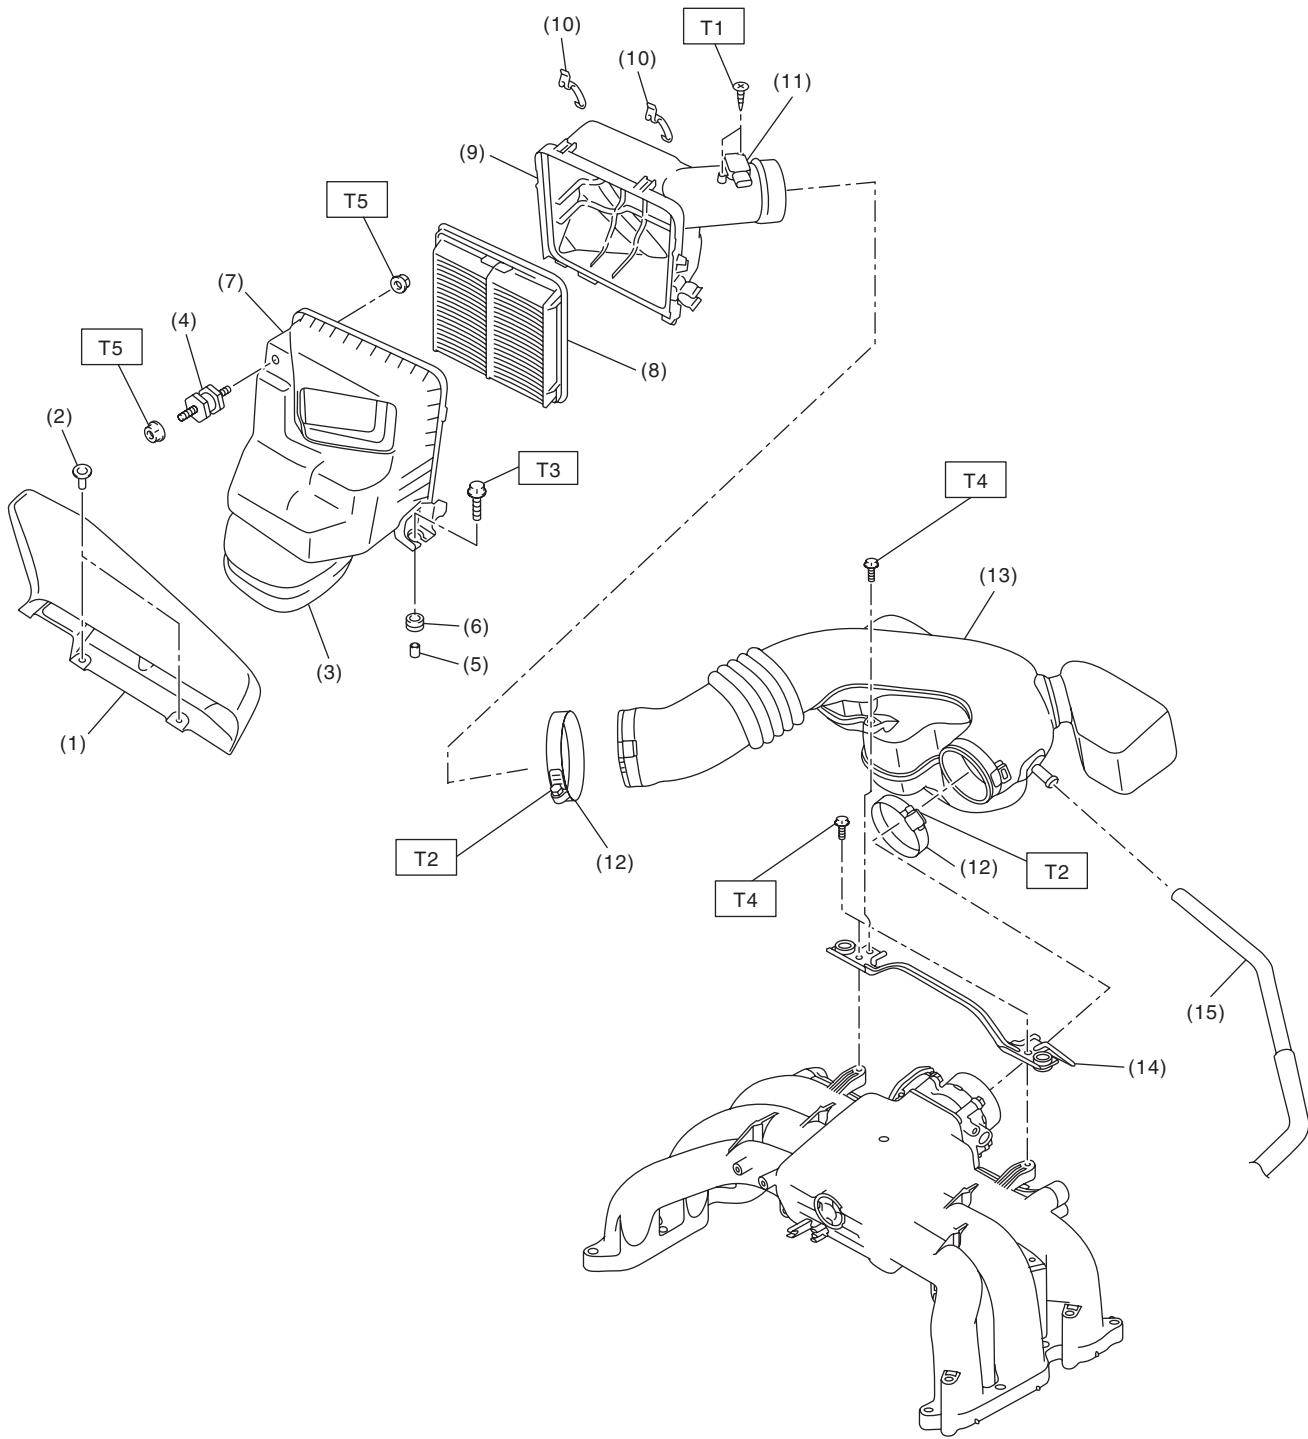

IN-02774

General Description

INTAKE (INDUCTION)

| | | |
|------------------------------|--|---|
| (1) Air intake duct | (9) Air cleaner case (rear) | Tightening torque:N·m (kgf·m, ft·lb) |
| (2) Clip | (10) Clip | T1: 1 (0.1, 0.7) |
| (3) Resonator chamber | (11) Mass air flow and intake air temperature sensor | T2: 3 (0.3, 2.2) |
| (4) Cushion | (12) Clamp | T3: 6 (0.6, 4.4) |
| (5) Spacer | (13) Air intake boot ASSY | T4: 6.5 (0.7, 4.8) |
| (6) Cushion | (14) Collector cover bracket | T5: 7.5 (0.8, 5.5) |
| (7) Air cleaner case (front) | (15) Blow-by hose | |
| (8) Air cleaner element | | |

B: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.