

22. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of the intake and exhaust valves.

<Ref. to ME(H6DO)-88, REMOVAL, Cylinder Head. > <Ref. to ME(H6DO)-89, INSTALLATION, Cylinder Head. >