

1. General Description

A: SPECIFICATION

Specifications for the 3.6 L DOHC non-turbo model are included in the SC (H4SO) section. <Ref. to SC(H4SO)-2, General Description.>

ENGINE (DIAGNOSTICS)

EN(H6DO)(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	6
4. Electrical Component Location	9
5. Engine Control Module (ECM) I/O Signal	18
6. Engine Condition Data	27
7. Data Link Connector	28
8. General Scan Tool	29
9. Subaru Select Monitor	34
10. Read Diagnostic Trouble Code (DTC)	42
11. Inspection Mode	43
12. Drive Cycle	48
13. Clear Memory Mode	54
14. System Operation Check Mode	55
15. Malfunction Indicator Light	56
16. Diagnostics for Engine Starting Failure	65
17. List of Diagnostic Trouble Code (DTC)	78
18. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	87
19. General Diagnostic Table	352