

Diagnostics with Phenomenon

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

18. Diagnostics with Phenomenon

A: INSPECTION

Symptoms	Faulty parts
Engine stalls when driving in "D" or "R" range, or selecting "N" → "D", "N" → "R".	<ul style="list-style-type: none">• Control valve• Engine control system
While driving in "D" range, vibration occurs immediately before the stop or engine stalls.	<ul style="list-style-type: none">• Control valve• TORQUE CONVERTER
Vehicle cannot shift while driving in "D" range.	<ul style="list-style-type: none">• Control valve• TCM• Shift mechanism• Power supply system
Excessive shock when selecting "N" → "D", and "N" → "R".	<ul style="list-style-type: none">• Control valve• TCM• F&R clutch pack• ATF deterioration or lack
Excessive shock at standing start in "D" range.	<ul style="list-style-type: none">• Control valve• TCM• F&R clutch pack• ATF deterioration or lack
Engine speed increases abruptly during driving in "D" or "R" range.	<ul style="list-style-type: none">• Control valve• Secondary pressure sensor• F&R clutch pack• ATF deterioration or lack
Vehicle can not start when depressing the accelerator pedal in "D" or "R" range, or acceleration is very poor. (without abrupt engine increase)	<ul style="list-style-type: none">• Control valve• F&R clutch pack• Shift mechanism• Parking mechanism• Engine control system• Electronic parking brake system• Power supply system
Shift indicator in combination meter displays the position which differs from select lever position.	<ul style="list-style-type: none">• Inhibitor switch• Select cable related• Combination meter
Manual mode enters even though the select lever and paddle shift switch is not operated.	<ul style="list-style-type: none">• Manual mode switch• Paddle shift switch• Select lever• TCM
Engine speed increases abruptly in "D" or "R" range, vehicle can not start.	<ul style="list-style-type: none">• F&R clutch pack• Select cable related
Manual mode can not be set	<ul style="list-style-type: none">• Select lever• TCM

AUTOMATIC TRANSMISSION

5AT

	Page
1. General Description	2
2. Automatic Transmission Fluid	29
3. Differential Gear Oil	31
4. Road Test	32
5. Stall Test	33
6. Time Lag Test	34
7. Line Pressure Test	35
8. Transfer Clutch Pressure Test	36
9. Automatic Transmission Assembly	37
10. Transmission Mounting System	47
11. Extension Case Oil Seal	48
12. Differential Side Retainer Oil Seal	49
13. Inhibitor Switch	50
14. Front Vehicle Speed Sensor	51
15. Rear Vehicle Speed Sensor	53
16. Turbine Speed Sensor 1	54
17. Control Valve Body	55
18. Transmission Control Module (TCM)	57
19. ATF Cooler Pipe and Hose	58
20. Air Breather Hose	61
21. Oil Charge Pipe	62
22. Torque Converter Assembly	63
23. Drive Plate	64
24. Extension Case	65
25. Transfer Clutch	67
26. Rear Drive Shaft	69
27. Reduction Driven Gear	70
28. Center Differential Carrier	73
29. Parking Pawl	75
30. Converter Case	77
31. Oil Pump Cover	79
32. Drive Pinion Shaft Assembly	82
33. Front Differential Assembly	87
34. AT Main Case	92
35. Transmission Control Device	102
36. Diagnostics with Phenomenon	104