


Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION


1. CONTROL MODULE

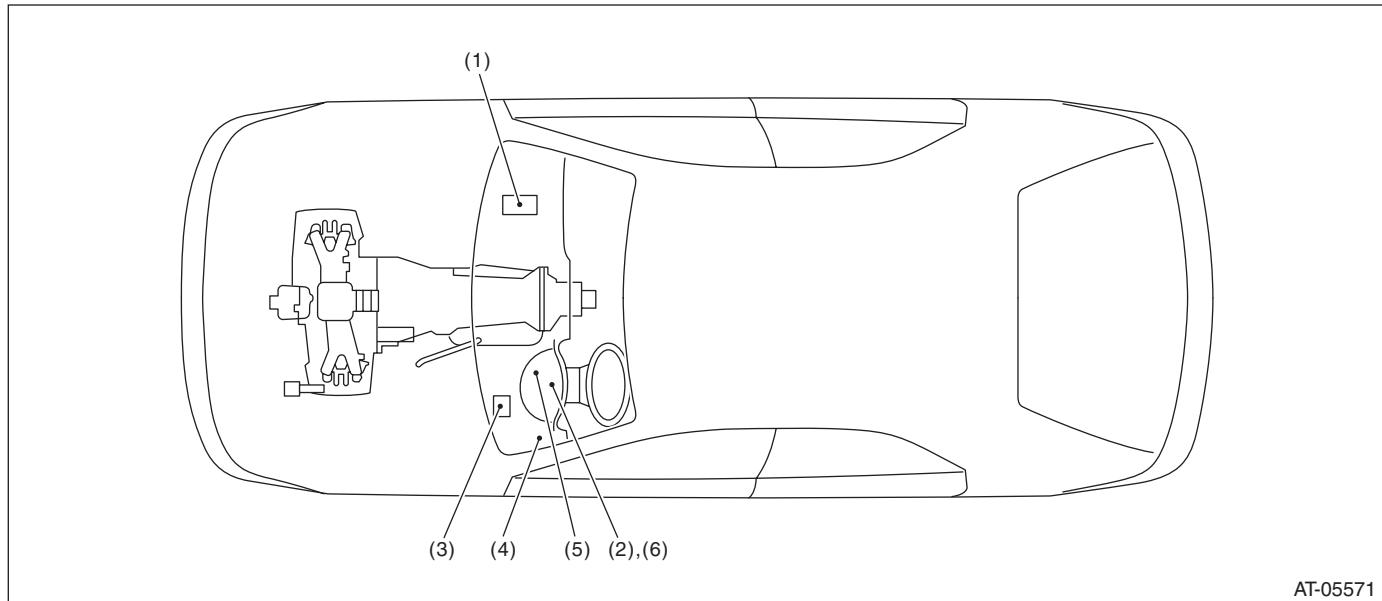


(1) Engine control module (ECM)	(3) Transmission control module (TCM)	(5) Body integrated unit
(2) AT OIL TEMP light	(4) Data link connector	(6) AWD light

Electrical Component Location


CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

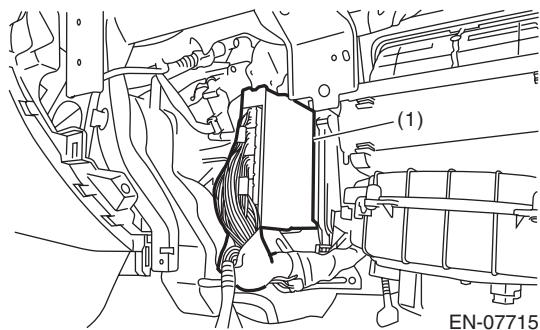


EN-07715

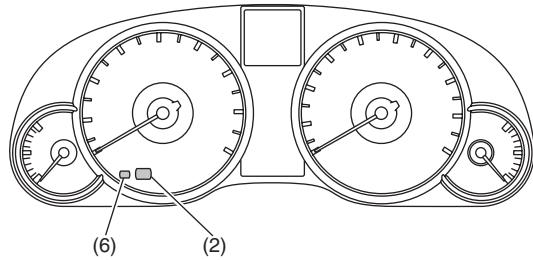


AT-06101

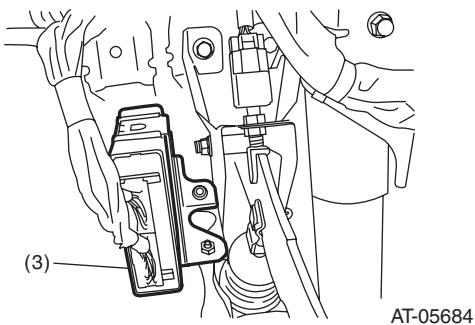

AT-05684

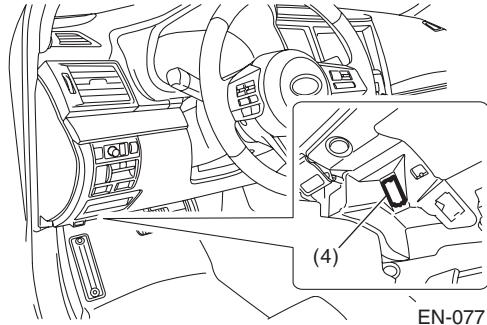

EN-07717

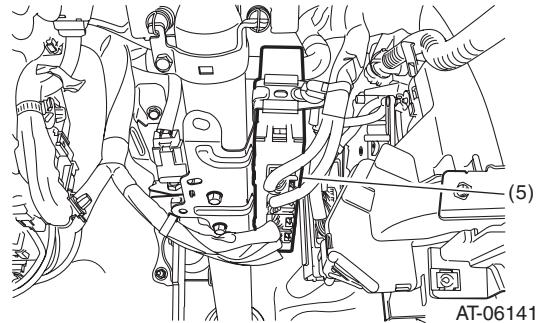


AT-06141

SUBARU

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

2. SENSOR

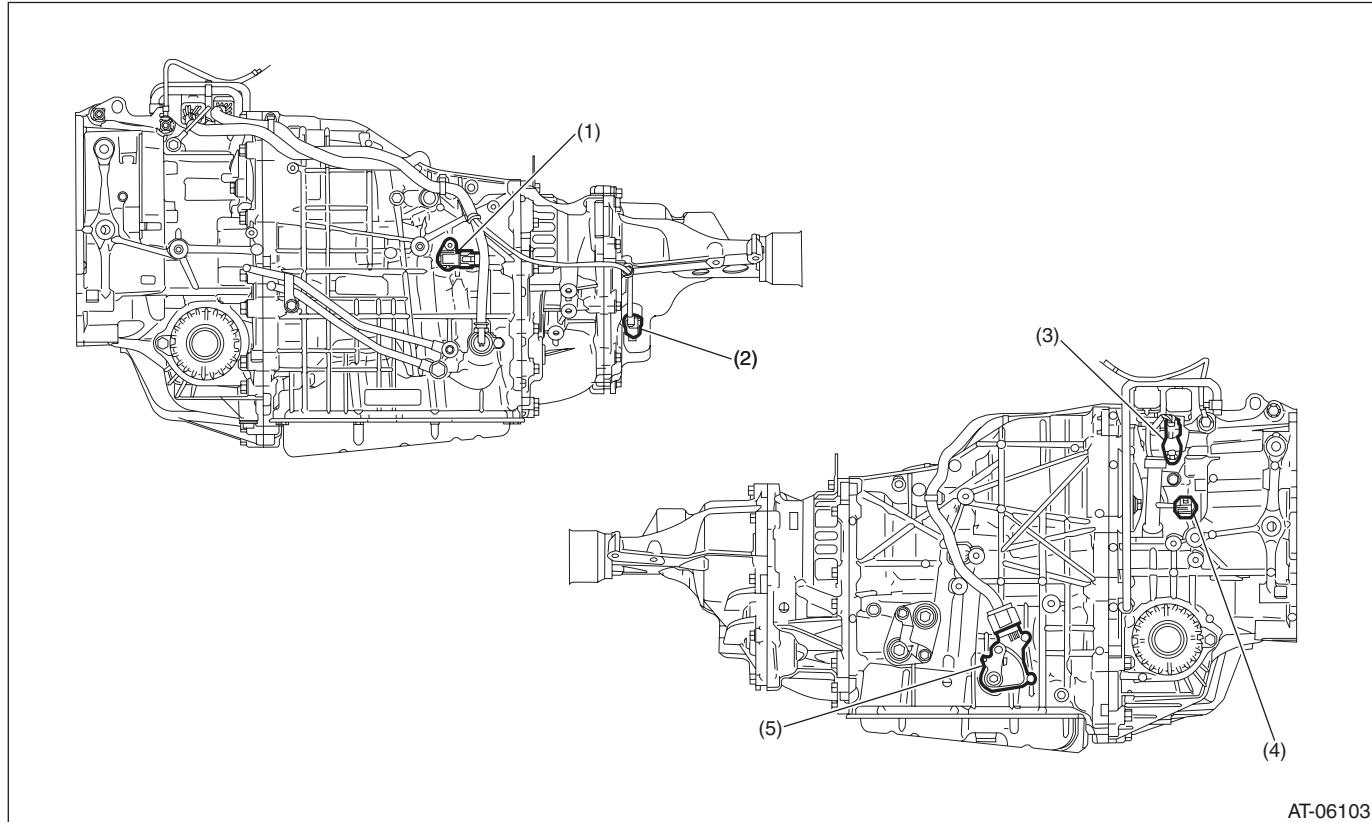

(1) Secondary speed sensor
(2) Front wheel speed sensor


(3) Primary speed sensor
(4) Secondary pressure sensor

(5) Inhibitor switch

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

3. SOLENOID

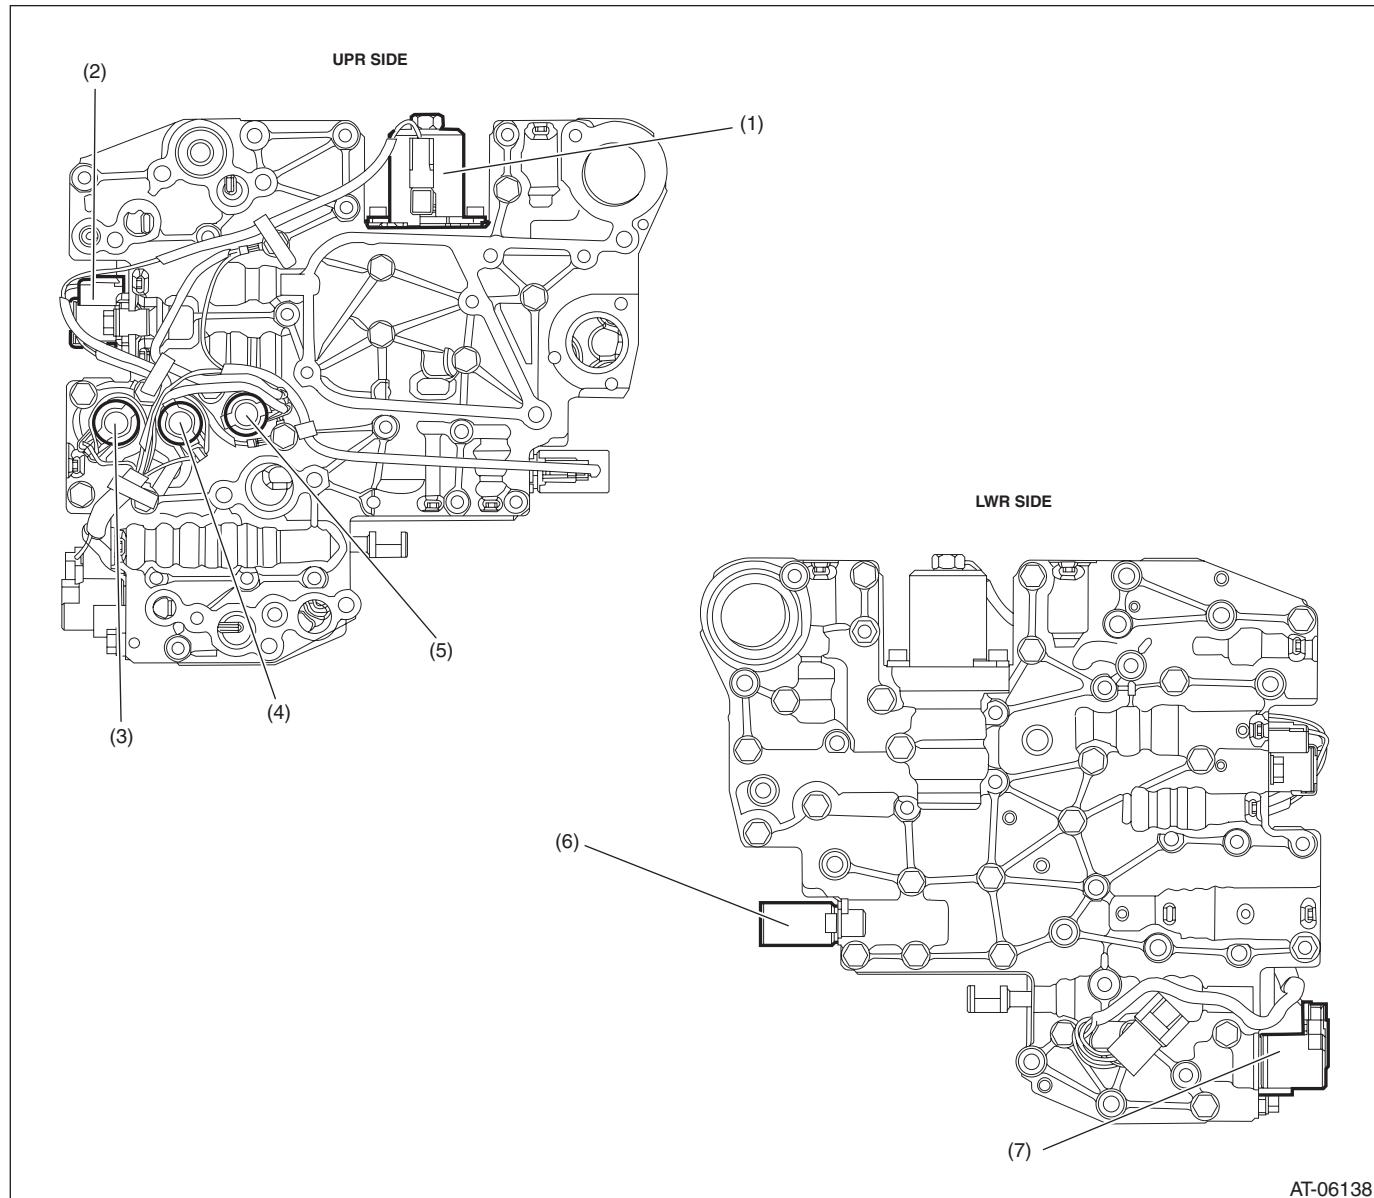

(1) Secondary solenoid	(4) Primary DOWN solenoid	(6) F&R solenoid
(2) AWD solenoid	(5) Primary UP solenoid	(7) Lock-up ON/OFF solenoid
(3) Lock-up duty solenoid		