

General Description

FRONT SUSPENSION

1. General Description

A: SPECIFICATION

Tire size		P205/60R16 P215/50R17	P225/50R17 225/45R18	P225/60R17 P215/70R16	
Front	Wheel arch height (Tolerance: +12 mm -24 mm (+0.47 in -0.94 in))	mm (in)	403 (15.9)	395 (15.6)	469 (18.5)
	Camber (Tolerance: $\pm 0^{\circ}45'$ Differences between RH and LH: 45' or less)		$-0^{\circ}30'$	$-0^{\circ}15'$	$0^{\circ}00'$
	Caster (Referential Value)		$5^{\circ}55'$	$6^{\circ}00'$	$5^{\circ}05'$
	Steering angle (Tolerance: $\pm 1.5^{\circ}$)	Inner wheel	37.6°	37.4°	38.4°
		Outer wheel	33.3°	33.0°	34.1°
	Toe-in	mm (in)	0 ± 3 (0 ± 0.12 in) Toe angle (sum of both wheels): $0^{\circ}\pm 0^{\circ}15'$		
Rear	Kingpin angle (Referential Value)		$14^{\circ}00'$	$14^{\circ}15'$	$12^{\circ}20'$
	Wheel arch height (Tolerance: +12 mm -24 mm (+0.47 in -0.94 in))	mm (in)	392 (15.4)	387 (15.2)	474 (18.7)
	Camber (Tolerance: $\pm 0^{\circ}45'$ Differences between RH and LH: 45' or less)		$-1^{\circ}00'$	$-1^{\circ}10'$	$0^{\circ}00'$
	Toe-in	mm (in)	*2		*1
Thrust angle (Tolerance: $\pm 0^{\circ}30'$)			0°		

*1: OUTBACK model

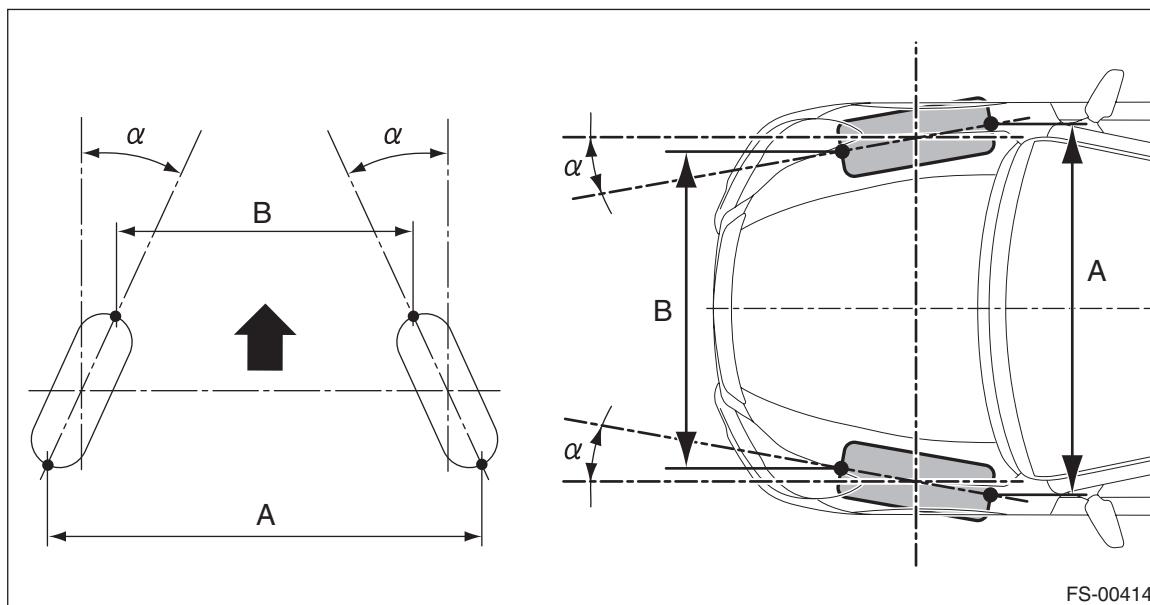
2 ± 3 mm (0.08 — 0.12 in) Toe angle (sum of both wheels): $0^{\circ}10'\pm 0^{\circ}15'$

*2: Except for OUTBACK model

0 ± 3 mm (0 ± 0.12 in) Toe angle (sum of both wheels): $0^{\circ}\pm 0^{\circ}15'$

NOTE:


- Front and rear toe-in and front camber can be adjusted. Adjust if the toe-in or camber tolerance exceeds specifications.
- Other items indicated in the specifications is not equipped with adjustment mechanisms. If other items exceed specifications, check the suspension parts and connections for deformation. If defective, replace with new parts.



A - B = Positive: Toe-in, Negative: Toe-out

α = Individual toe angles

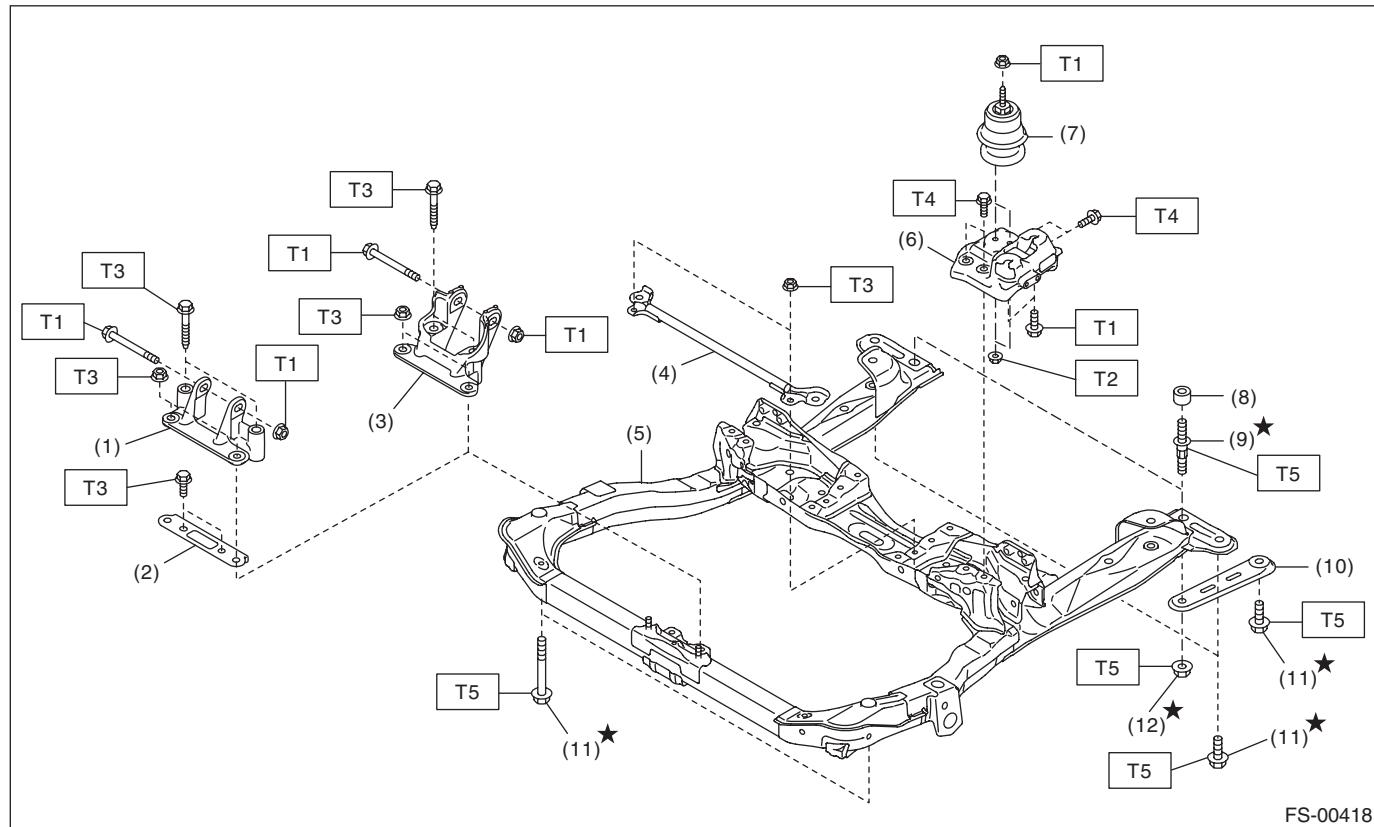B: COMPONENT




(1) Front mounting bracket (H6 model)	(7) Main cushion rubber
(2) Bracket	(8) Stopper
(3) Front mounting bracket (H4 model)	(9) Stud bolt
(4) Crossmember support	(10) Stiffener
(5) Cradle	(11) Bolt
(6) Main mounting bracket	(12) Self-locking nut

Tightening torque: N·m (kgf·m, ft·lb)

T1: 45 (4.59, 33.2)
T2: 55 (5.61, 40.6)
T3: 60 (6.12, 44.3)
T4: 65 (6.63, 47.9)
T5: 75 (7.65, 55.3)

General Description

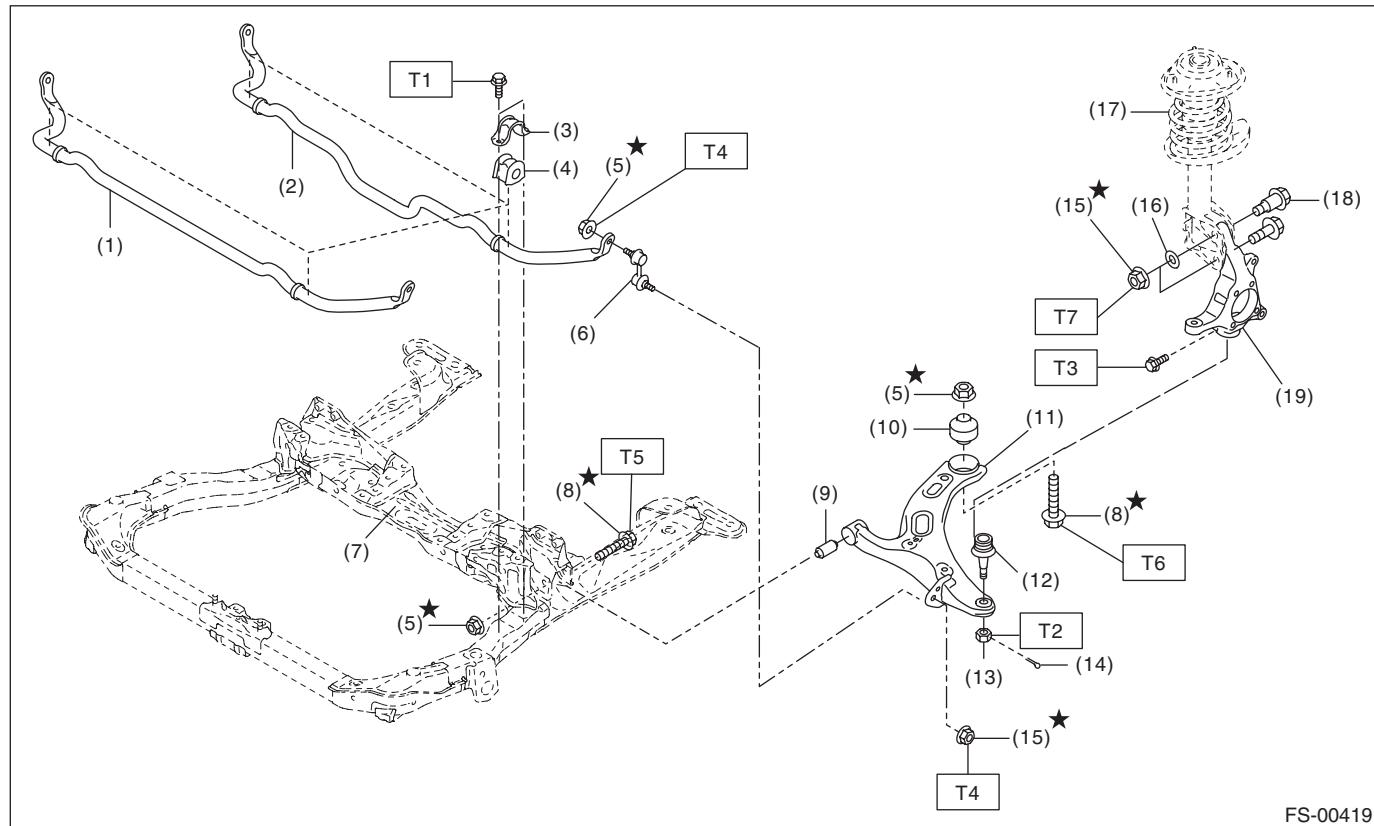FRONT SUSPENSION




(1) Stabilizer (H6 model)	(11) Front arm
(2) Stabilizer (H4 model)	(12) Ball joint
(3) Stabilizer bracket	(13) Castle nut
(4) Stabilizer bushing	(14) Cotter pin
(5) Self-locking nut	(15) Flange nut
(6) Stabilizer link	(16) Adjusting washer
(7) Cradle	(17) Front strut ASSY
(8) Bolt	(18) Adjusting bolt
(9) Front bushing	(19) Front axle housing
(10) Rear bushing	

Tightening torque: N·m (kgf·m, ft·lb)

T1: 25 (2.55, 18.4)
T2: 39 (3.98, 28.8)
T3: 50 (5.10, 36.9)
T4: 60 (6.12, 44.3)
T5: 95 (9.69, 70.1)
T6: 140 (14.28, 103.3)
T7: 155 (15.81, 114.3)

General Description

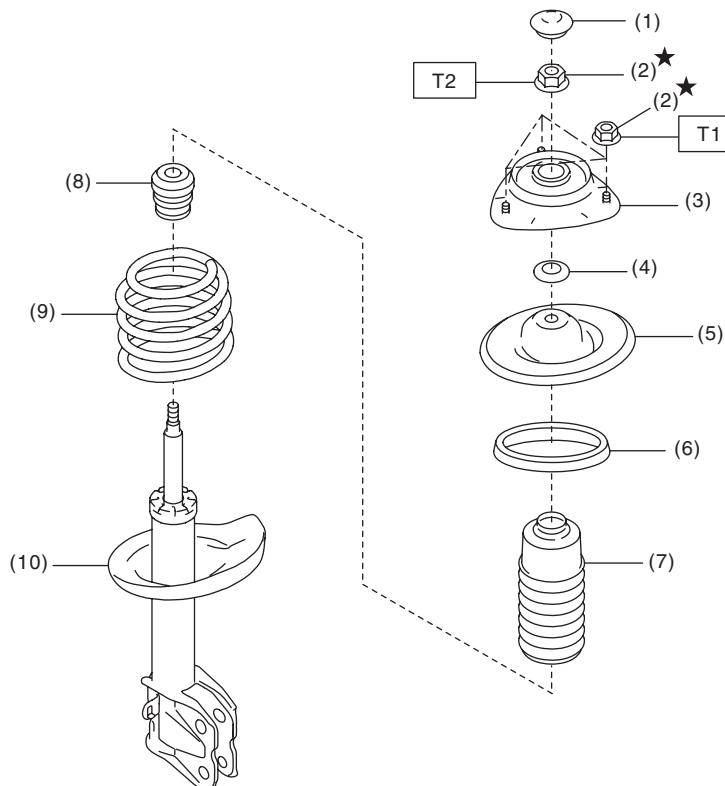FRONT SUSPENSION



FS-00429

(1) Dust seal	(6) Rubber seat (OUTBACK model only)	Tightening torque: N·m (kgf·m, ft·lb)
(2) Self-locking nut	(7) Dust cover	T1: 20 (2.04, 14.8)
(3) Strut mount	(8) Helper (except for Bilstein strut)	T2: 55 (5.61, 40.6)
(4) Spacer	(9) Coil spring	
(5) Upper spring seat	(10) Strut	

C: CAUTION





- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Use SUBARU genuine grease etc. or equivalent. Do not mix grease etc. of different grades or manufacturers.
- Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or cloth between the part and the vise.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.

General Description

FRONT SUSPENSION






D: PREPARATION TOOL

1. SPECIAL TOOL

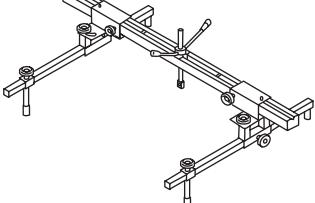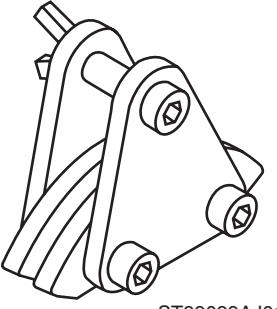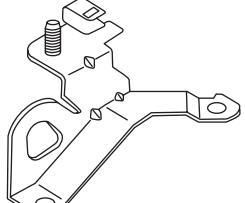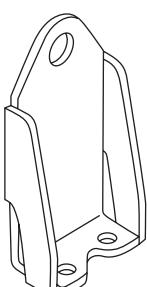ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST99099AJ000	99099AJ000	ENGINE HANGER	<ul style="list-style-type: none">Used for hanging power unit.Used together with CHAIN BALANCER (99099AJ010).
 ST99099AJ010	99099AJ010	CHAIN BALANCER	<ul style="list-style-type: none">Used for hanging power unit.Used together with ENGINE HANGER (99099AJ000).
 ST10004AA180	10004AA180 (SUBARU genuine part)	HANGER CP ENGINE RR	<ul style="list-style-type: none">Used for hanging power unit.For H4 non-turbo model.SUBARU genuine part
 ST18360AA020	18360AA020	HANGER	<ul style="list-style-type: none">Used for hanging power unit.For H6 model.


General Description

FRONT SUSPENSION

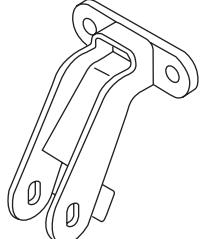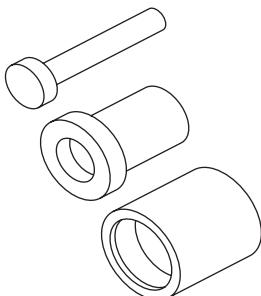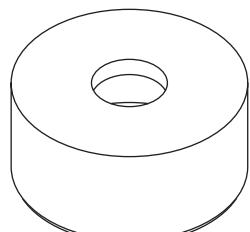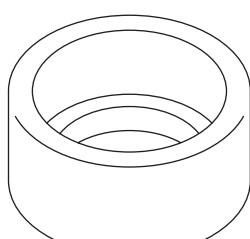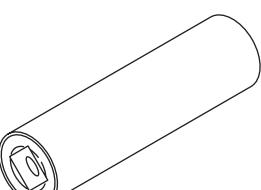ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST41099AJ000	41099AJ000	SPECIAL TOOL H4	Used for removing and installing front stabilizer. (for turbo model)
 ST-927680000	927680000	INSTALLER & REMOVER SET	Used for replacing front arm front bushing.
 ST20299AG000	20299AG000	REMOVER	<ul style="list-style-type: none"> Used for replacing front arm rear bushing. Used together with BASE (20299AG010).
 ST20299AG010	20299AG010	BASE	<ul style="list-style-type: none"> Used for replacing front arm rear bushing. Used together with REMOVER (20299AG000).
 ST20299AG020	20299AG020	STUD BOLT SOCKET	Used for removing and installing the stud bolt for front arm installing portion.

General Description

FRONT SUSPENSION

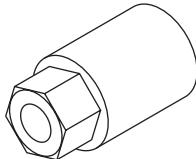ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST20399AG000	20399AG000	STRUT MOUNT SOCKET	Used for disassembling and assembling strut mount.

2. GENERAL TOOL

TOOL NAME	REMARKS
Alignment gauge	Used for measuring wheel alignment.
Alignment gauge adapter	Used for measuring wheel alignment.
Turning radius gauge	Used for measuring wheel alignment.
Toe-in gauge	Used for toe-in measurement.
Dial gauge	Used for damper strut measurement.
Coil spring compressor	Used for strut assembly/disassembly.
Chain sling	<ul style="list-style-type: none">Used for hanging power unit.Diameter: 6 mm (0.24 in) or 6.3 mm (0.25 in)Length: 0.8 — 1 m (2.6 — 3.3 ft)Chain inner width: 8.5 mm (0.33 in) or moreChain external width: 23.5 mm (0.93 in) or lessLoad capacity: 1.2 t (2646 lb) or more
Shackle	<ul style="list-style-type: none">Two units used for hanging power unit.Attached to both end of chain sling and connected to engine hook.Load capacity: 250 kg (551 lb) or more
Sling belt	<ul style="list-style-type: none">Used to remove and install the cradle.Width: 35 — 40 mm (1.38 — 1.57 in)Length: 2 m (6.6 ft)Load capacity: 1 t (2205 lb) or more
Shackle	<ul style="list-style-type: none">Used to remove and install the cradle.Load capacity: 500 kg (1103 lb) or more

2. Wheel Alignment

A: INSPECTION

Check the following items before performing the wheel alignment measurement.

- Tire inflation pressure
- Uneven wear of RH and LH tires, or difference of sizes
- Tire runout
- Excessive play and wear of ball joint
- Excessive play and wear of tie-rod end
- Excessive play of wheel bearing
- Right and left wheel base imbalance
- Deformation and excessive play of steering link
- Deformation and excessive play of suspension parts

Check, adjust and measure the wheel alignment in accordance with the following procedures.

1	Wheel arch height (front and rear wheels)	Inspection: <Ref. to FS-12, REAR WHEEL TOE-IN, INSPECTION, Wheel Alignment.> ↓
2	Camber (front and rear wheels)	Inspection: <Ref. to FS-11, CAMBER, INSPECTION, Wheel Alignment.> Adjustment: <Ref. to FS-13, FRONT CAMBER, ADJUSTMENT, Wheel Alignment.> ↓
3	Caster (front wheel)	Inspection: <Ref. to FS-11, CASTER, INSPECTION, Wheel Alignment.> ↓
4	Steering angle	Inspection: <Ref. to FS-11, FRONT WHEEL TOE-IN, INSPECTION, Wheel Alignment.> Adjustment: <Ref. to FS-14, STEERING ANGLE, ADJUSTMENT, Wheel Alignment.> ↓
5	Front wheel toe-in	Inspection: <Ref. to FS-11, STEERING ANGLE, INSPECTION, Wheel Alignment.> Adjustment: <Ref. to FS-15, FRONT WHEEL TOE-IN, ADJUSTMENT, Wheel Alignment.> ↓
6	Rear wheel toe-in	Inspection: <Ref. to FS-10, WHEEL ARCH HEIGHT, INSPECTION, Wheel Alignment.> Adjustment: <Ref. to FS-16, REAR WHEEL TOE-IN, ADJUSTMENT, Wheel Alignment.> ↓
7	Thrust angle	Inspection: <Ref. to FS-12, THRUST ANGLE, INSPECTION, Wheel Alignment.> Adjustment: <Ref. to FS-17, THRUST ANGLE, ADJUSTMENT, Wheel Alignment.>