

### 8. Inspection Mode

#### A: PROCEDURE

- 1) Start the engine, and operate and release the electronic parking brake a few times with the vehicle at a standstill.
- 2) Check if the warning light illuminates or blinks, or DTC is displayed.

**NOTE:**

If the DTC is displayed, perform the diagnosis using "Diagnostic Procedure with Diagnostic Trouble Code (DTC)". <Ref. to PB(diag)-37, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

- 3) Drive the vehicle at least 10 minutes, and operate and release the parking brake a few times.

**CAUTION:**

**Do not drive when the warning light illuminates or blinks.**