

General Diagnostic Table

PARKING BRAKE

6. General Diagnostic Table

A: INSPECTION

Symptoms	Possible cause	Corrective action
Brake drag	Parking brake actuator is faulty.	Replace.
	Parking brake cable does not move.	Replace.
	Parking brake shoe clearance is maladjusted.	Adjust.
	Return spring is faulty.	Replace.
Noise from brake	Return spring is faulty.	Replace.
	Shoe hold-down spring faulty.	Replace.

PARKING BRAKE (DIAGNOSTICS)

PB(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	8
4. Electrical Component Location	10
5. Control Module I/O Signal	12
6. Subaru Select Monitor	14
7. Read Diagnostic Trouble Code (DTC)	23
8. Inspection Mode	24
9. Clear Memory Mode	25
10. Warning Light Illumination Pattern	26
11. List of Diagnostic Trouble Code (DTC)	35
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	37
13. General Diagnostic Table	67