

## 5. Oil Seal

### A: NOTE

For replacement and inspection, refer to “5AT”,  
“CVT” or “6MT” section.

5AT model:

<Ref. to 5AT-48, Extension Case Oil Seal.>

CVT model:

<Ref. to CVT-88, Extension Case Oil Seal.>

6MT model:

<Ref. to 6MT-35, Oil Seal.>