


Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

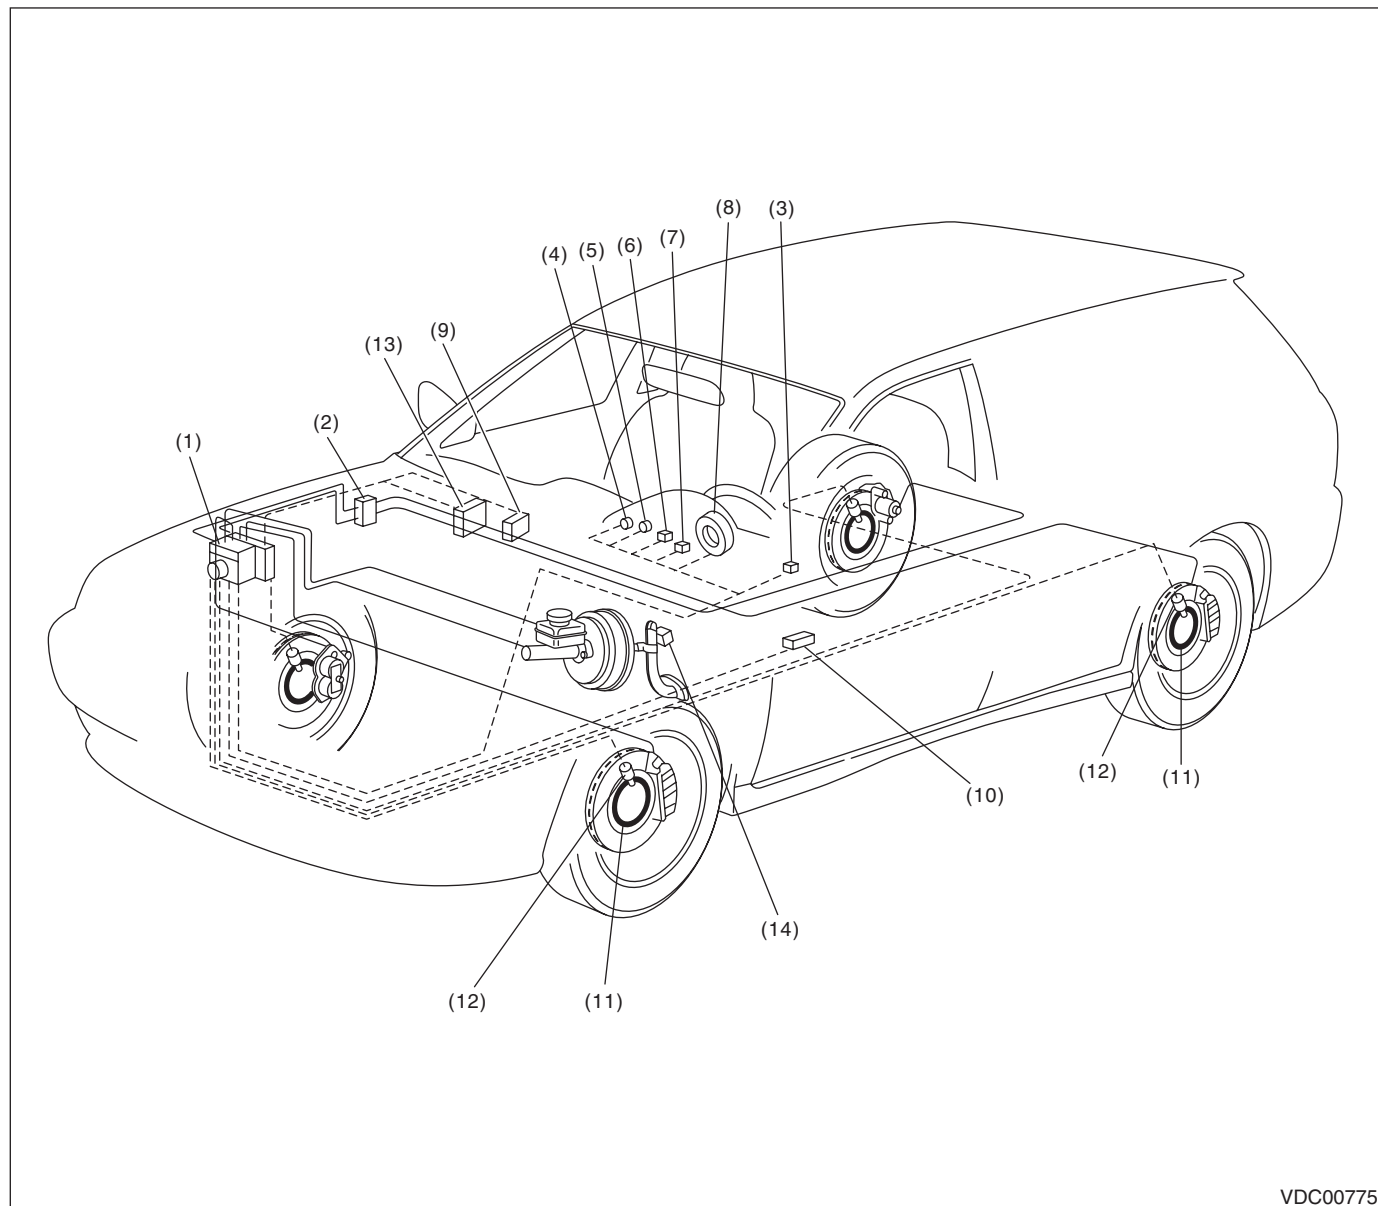

VDC00775

- | | | |
|---|---|----------------------------------|
| (1) VDC control module & hydraulic control unit (VDCCM&H/U) | (6) VDC warning light & VDC indicator light | (11) Magnetic encoder |
| (2) Connector | (7) VDC OFF indicator light | (12) ABS wheel speed sensor |
| (3) VDC OFF switch | (8) Steering angle sensor | (13) Engine control module (ECM) |
| (4) ABS warning light | (9) Transmission control module (TCM) | (14) Stop light & brake switch |
| (5) Brake warning light (EBD warning light) | (10) Data link connector | |

Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

