


## 2. Relay and Fuse

### A: LOCATION

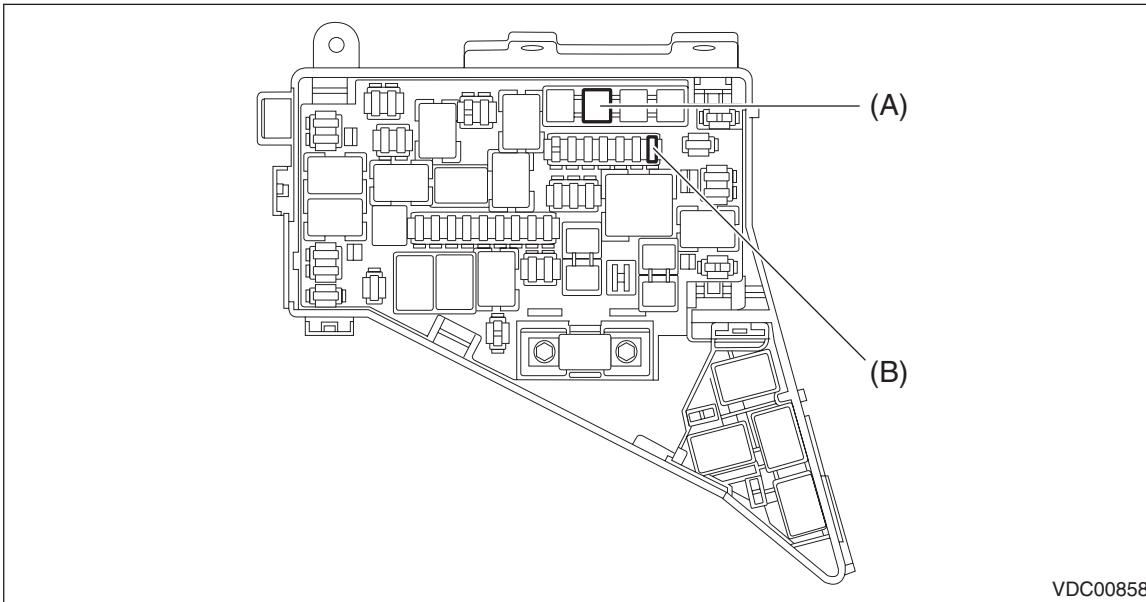

Main fuse box	Fuse 40 A (VDC CM&H/U)	(A)
	Fuse 30 A (VDC CM&H/U)	(B)

**NOTE:**

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

### B: INSPECTION

#### 1. CHECK FUSE.

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.