

## 3. Vehicle Dynamics Control System

### A: WIRING DIAGRAM

Refer to Vehicle Dynamics Control System in the wiring diagram. <Ref. to WI-227, WIRING DIAGRAM, Vehicle Dynamics Control System.>

### B: ELECTRICAL SPECIFICATION

Refer to the Control Module I/O Signal of the Vehicle Dynamics Control System (VDC) (DIAGNOSTICS). <Ref. to VDC(diag)-12, ELECTRICAL SPECIFICATION, Control Module I/O Signal.>

### C: INSPECTION

Refer to the Vehicle Dynamics Control System (VDC) (DIAGNOSTICS). <Ref. to VDC(diag)-90, INSPECTION, General Diagnostic Table.>

### D: NOTE

For operation procedures of each component of the vehicle dynamics control system, refer to the respective section.

- VDC control module&hydraulic control unit (VDCCM&H/U): <Ref. to VDC-9, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>
- Yaw rate & G sensor: <Ref. to VDC-22, Yaw Rate and G Sensor.>
- Steering angle sensor: <Ref. to VDC-23, Steering Angle Sensor.>
- Front ABS wheel speed sensor: <Ref. to VDC-27, Front ABS Wheel Speed Sensor.>
- Rear ABS wheel speed sensor: <Ref. to VDC-29, Rear ABS Wheel Speed Sensor.>
- Front magnetic encoder: <Ref. to VDC-31, Front Magnetic Encoder.>
- Rear magnetic encoder: <Ref. to VDC-32, Rear Magnetic Encoder.>
- VDC OFF switch: <Ref. to VDC-33, VDC OFF Switch.>