


9. Front Sub Sensor

A: REMOVAL


- 1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 2) Remove the front bumper face assembly.
 - (1) Remove the clips, turn over the front mud guard, and disconnect the fog light connector. (Model with fog light)

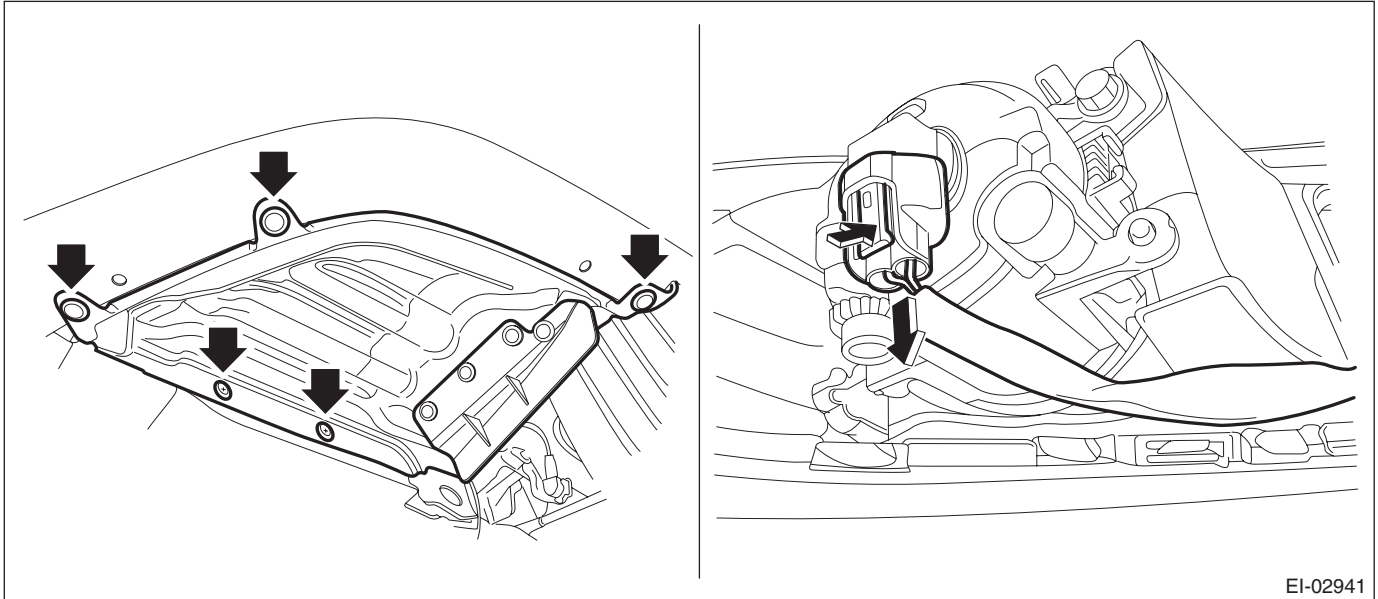

EI-02941

- (2) Remove the clips at the upper side of the bumper.
- (3) Remove the clips from the fender.

(4) Remove the clips at the lower side of bumper.

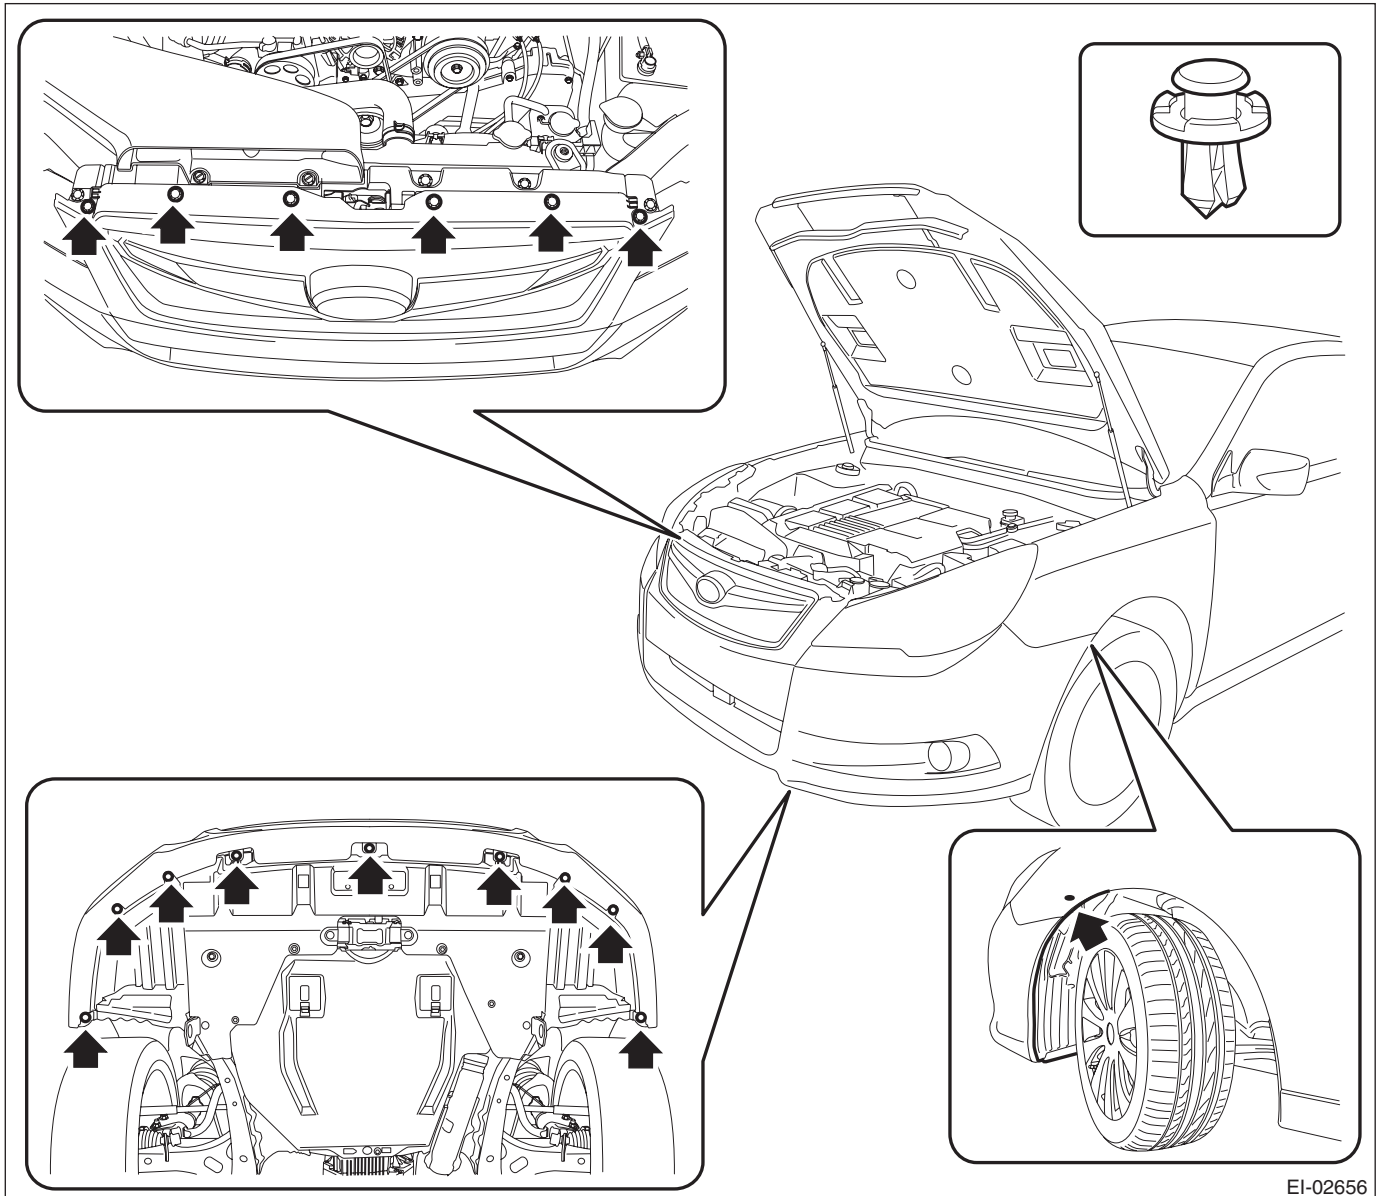

EI-02656


Front Sub Sensor

AIRBAG SYSTEM

(5) Detach the flange section on the bumper face side from the bracket side front UPR.

CAUTION:

Do not pull forcibly. It may damage the flange sections of the bumper face.

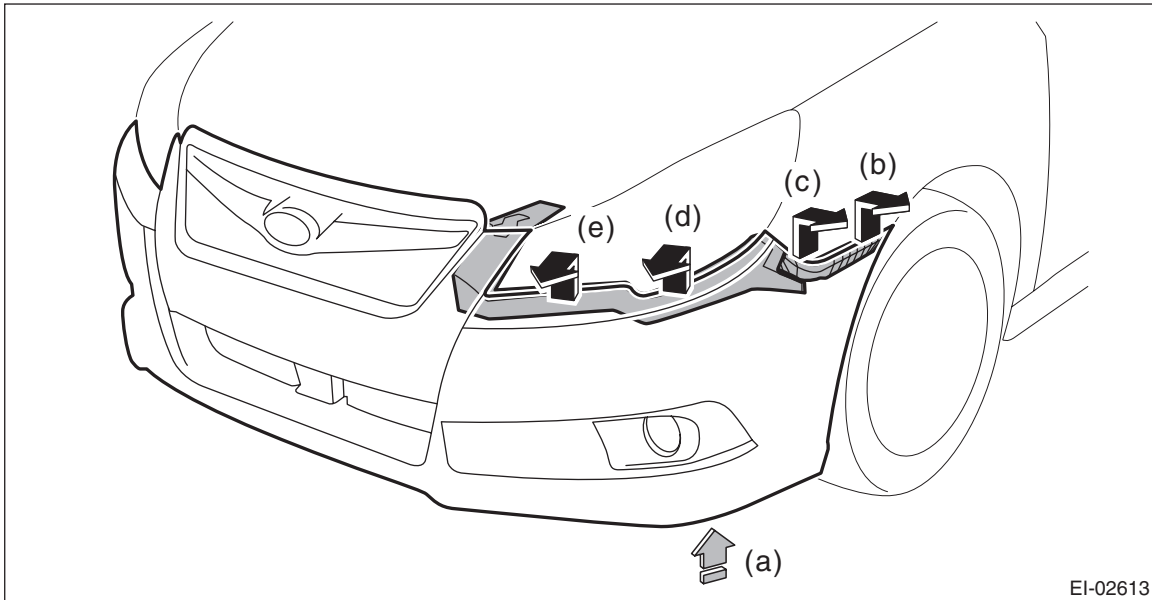

EI-02613

NOTE:

Pushing up the lower side (a) of the fog light, remove from (b) to (e).


Detach the opposite side in the same manner.

3) Remove the headlight assembly.

(1) Remove the fender cover assembly UPR.

a) Remove the clip.

b) Release the claws of the fender cover assembly UPR by pulling it forward and remove the fender cover.

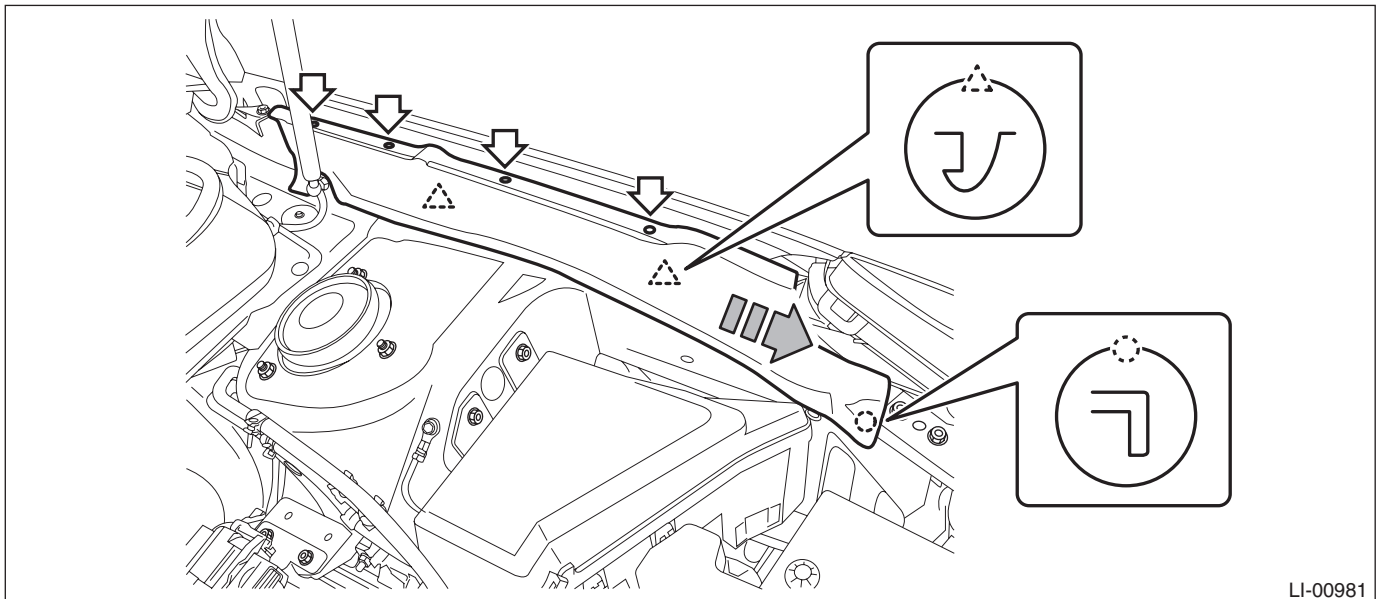


LI-00981


(2) Remove the headlight assembly.

NOTE:

When removing the RH headlight, remove the air intake duct.

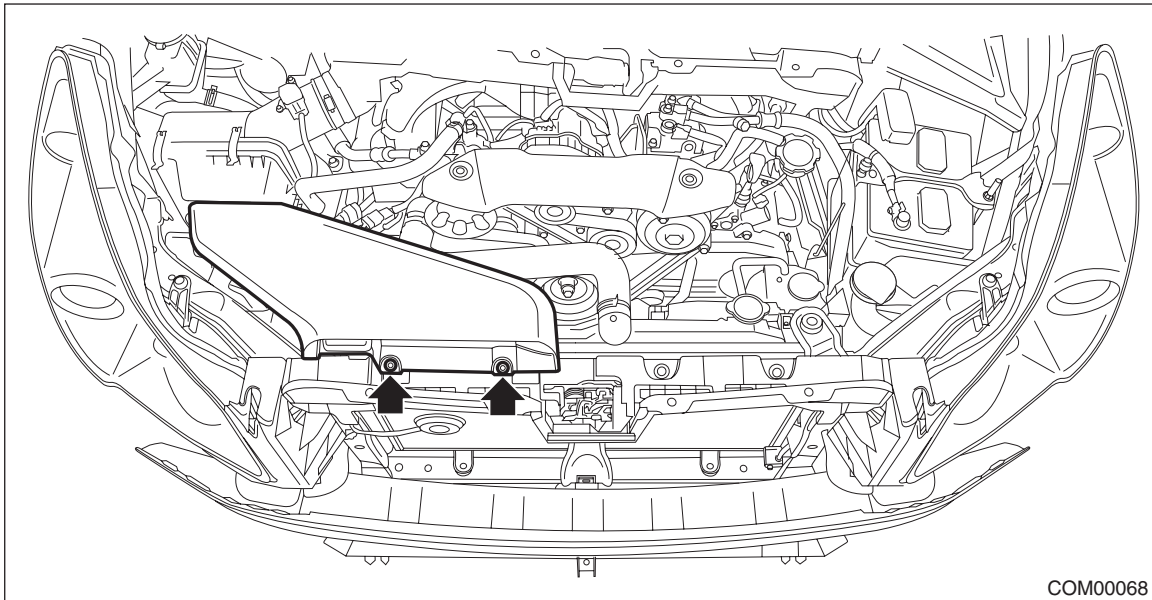

a) Remove the bolts and clips, and pull out the headlight assembly to the front of the vehicle.

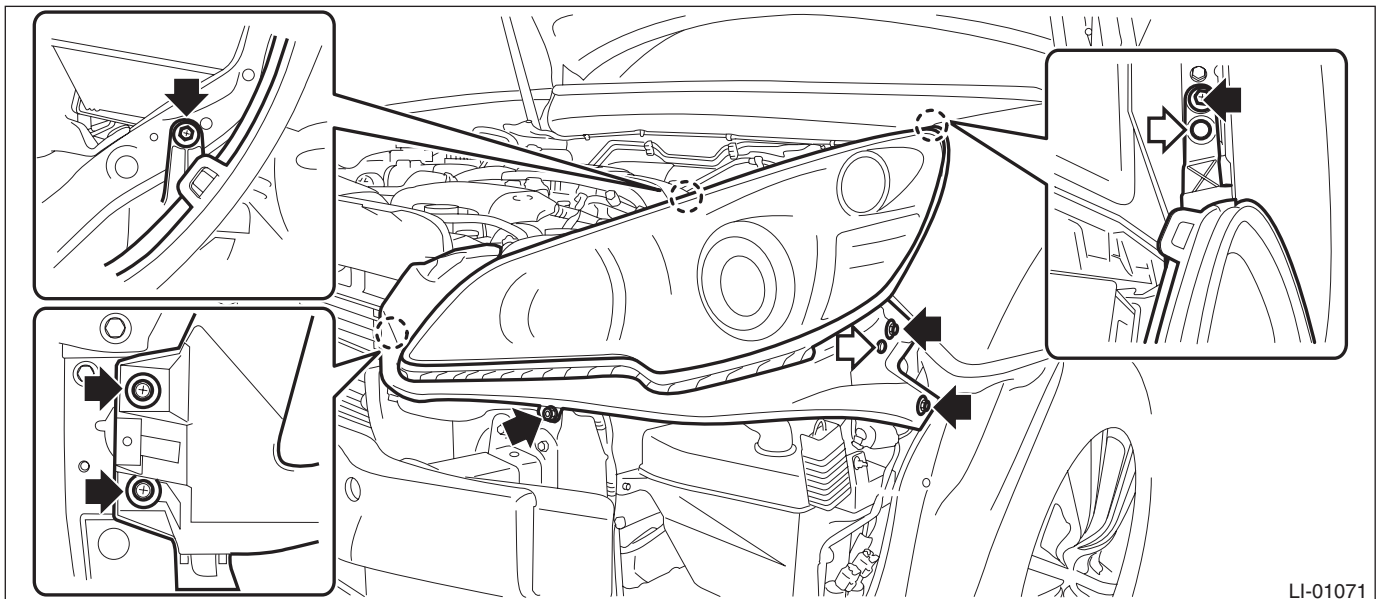


b) Disconnect the connector and remove the headlight assembly.


Front Sub Sensor

AIRBAG SYSTEM

- RH headlight connector

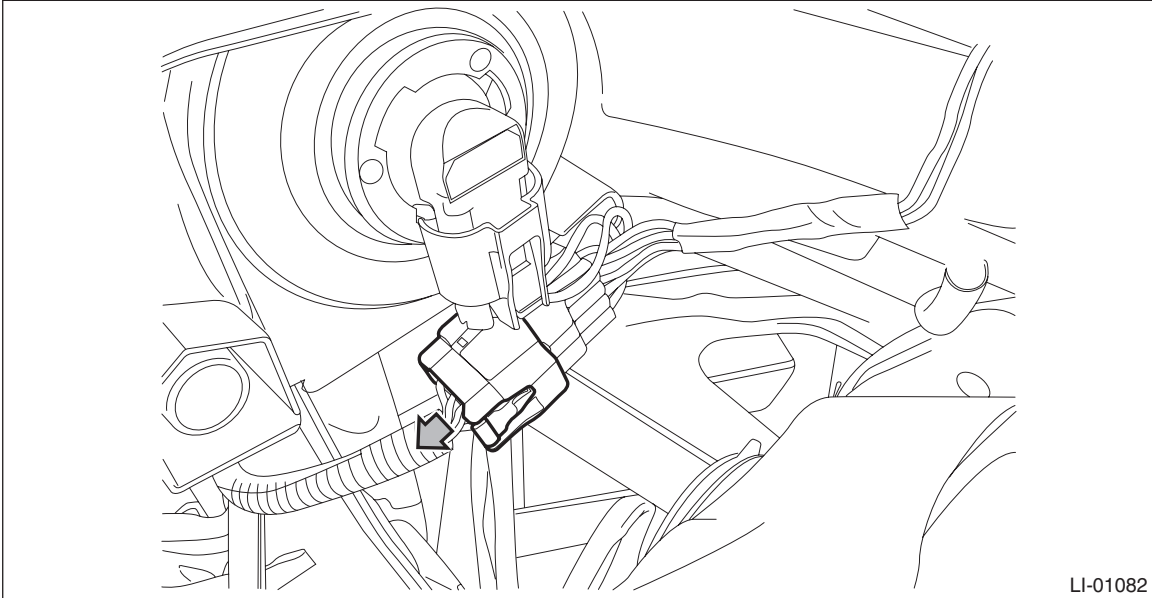


- LH headlight connector

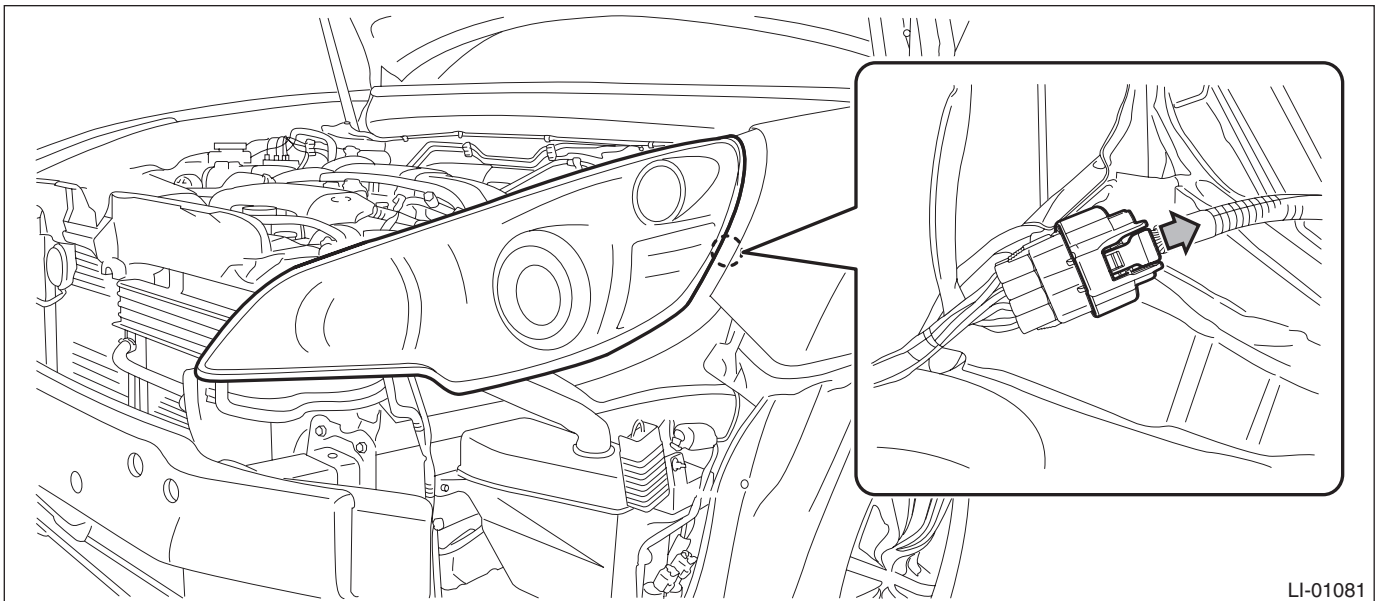

4) Remove the front sub sensor assembly.

(1) Remove the bolt, and remove the sensor cover plate.

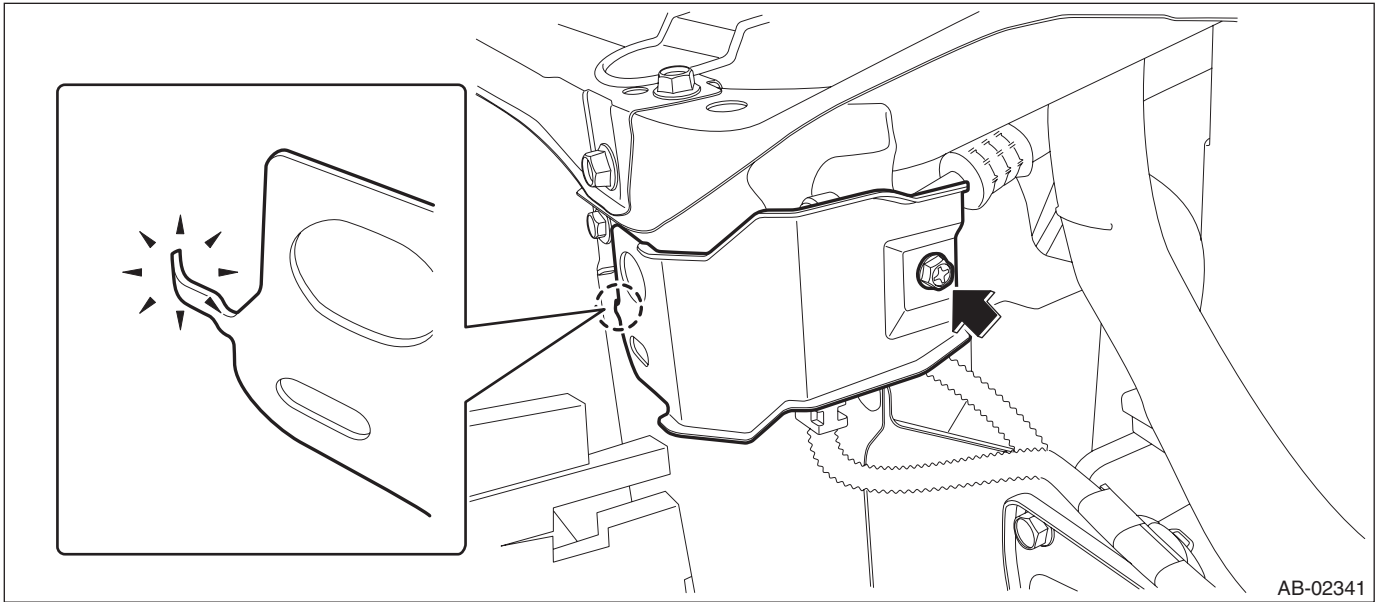

(2) Remove the front sub sensor by removing the bolt and disconnect the connector.

• LH side

Holding outer part of the slide lock, pull it in the direction of arrow.


• RH side

1. Push the lock arm.

2. Holding outer part, pull it one step in the direction of arrow.

3. Push the lock arm again.

4. Holding outer part, pull it in the direction of arrow to disconnect the connector.

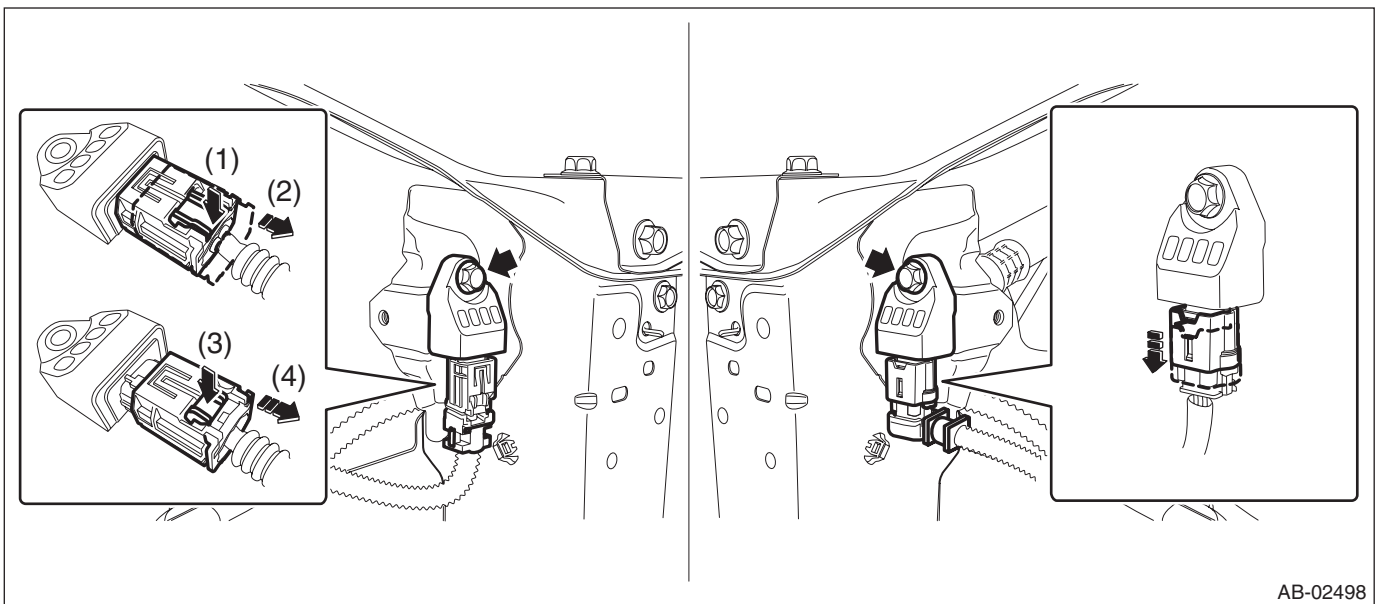

Front Sub Sensor

AIRBAG SYSTEM

B: INSTALLATION

CAUTION:

- If the airbag has been activated, replace the front sub sensor assembly with a new part.
- Do not reuse the bolt and nut.

Always replace with the specified new bolts and nuts.

- When installing the sensor, insert the set pin on the backside of the sensor into the hole on the body side securely.

- After the installation of headlight assembly, be sure to perform headlight beam adjustment.


1) Before installation, inspect the following items and replace any faulty part with a new one.

- Front sub sensor damage
- Connector damage
- Sensor cover plate deformation or damage

2) Install each part in the reverse order of removal.

CAUTION:

Install the bumper face so that the under cover front end (b) comes inside the front bumper face (a).

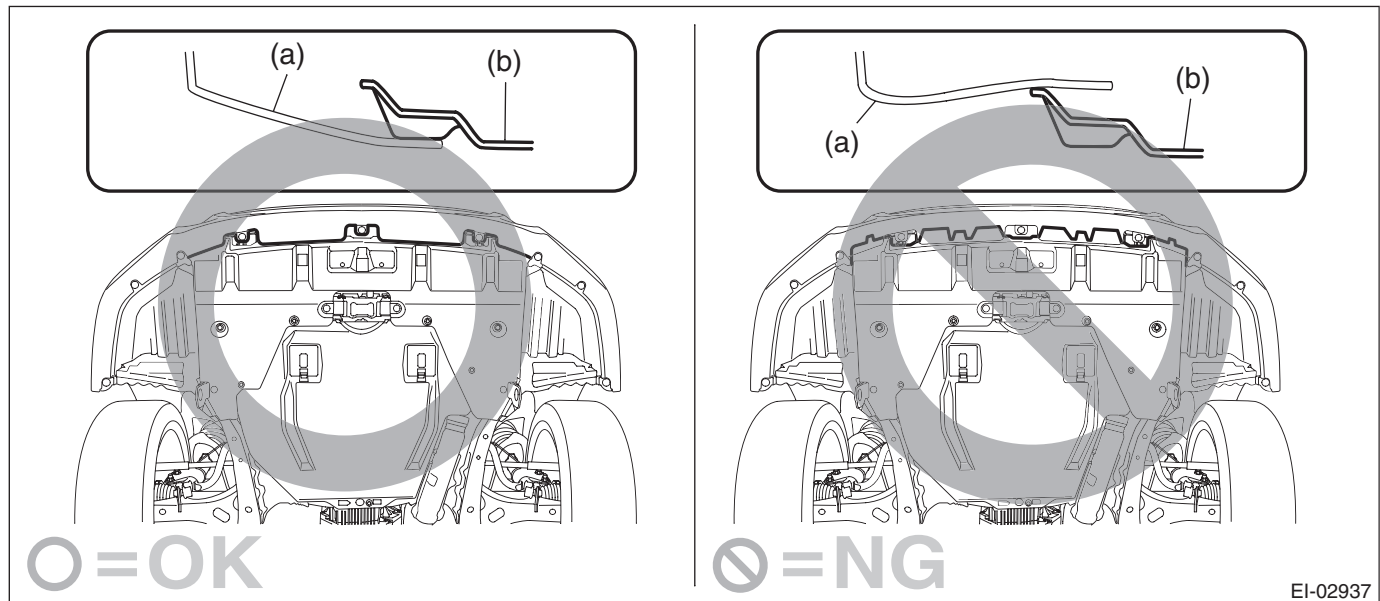

Tightening torque:

Front sub sensor: 13 N·m (1.33 kgf-m, 9.6 ft-lb)

Headlight ASSY: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)