

## 11. Display of Status Information

### A: OPERATION

When seat belt buckle switch malfunction occurs, or when seat belt buckle switch is replaced, check operation status of each sensor.

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Airbag System}.
- 3) On «Airbag System» display, select {Status Data}.

The following table is for support data.

Item	Display Contents
Seat position sensor LH	— <sup>*2</sup>
Seat position sensor RH	— <sup>*2</sup>
Seat belt buckle switch LH	— <sup>*6</sup>
Seat belt buckle switch RH	Fastened <sup>*3</sup> /Not fastened <sup>*4</sup> /Other <sup>*5</sup> /Initial Setting <sup>*1</sup> /— <sup>*6</sup>
Passenger's airbag control status	ON <sup>*7</sup> /OFF <sup>*8</sup> /Initial Setting <sup>*1</sup>

\*1: Displayed when it is initial

\*2: Seat position sensor not supported

\*3: Seat belt fastened

\*4: Seat belt not fastened

\*5: Displayed when data other than belt fastened or not fastened, such as breakdown, is input

\*6: Seat belt buckle switch not supported

\*7: Passenger's airbag operating state

\*8: Passenger's airbag non-operating state

#### NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.