

# Basic Diagnostic Procedure

## BODY CONTROL SYSTEM (DIAGNOSTICS)

### 1. Basic Diagnostic Procedure

#### A: PROCEDURE

##### CAUTION:

- Subaru Select Monitor is required for reading DTC, performing diagnosis and reading current data.
- Remove foreign matter (dust, water, oil, etc.) from the body integrated unit connector during removal and installation.
- Registration of the immobilizer is necessary after the replacement of the control module, etc. For details, refer to the “PC application help for Subaru Select Monitor”.

##### NOTE:

- To check harness for open or short circuits, shake the suspected trouble spot or connector.
- Check List for Interview <Ref. to BC(diag)-3, Check List for Interview.>

Step	Check	Yes	No
1 <b>CHECK PRE-INSPECTION.</b> Ask the customer when and how the trouble occurred using the interview check list. <Ref. to BC(diag)-3, Check List for Interview.>	Did you interview the customer?	Go to step 2.	Interview the customer.
2 <b>BASIC INSPECTION.</b> Check components which might affect body control. <Ref. to BC(diag)-4, INSPECTION, General Description.>	Is the component that might influence the body control problem normal?	Go to step 3.	Repair or replace each component.
3 <b>CHECK DTC.</b> 1) Read the DTC. <Ref. to BC(diag)-11, OPERATION, Read Diagnostic Trouble Code (DTC).>  NOTE: If the communication function of the Subaru Select Monitor cannot be executed properly, check the communication circuit. <Ref. to LAN(diag)-48, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> 2) Record all DTCs and freeze frame data.	Is DTC displayed on Subaru Select Monitor?	Go to step 5.	Go to step 4.
4 <b>PERFORM GENERAL DIAGNOSTICS.</b> Inspect using the “General Diagnostics Table”. <Ref. to BC(diag)-39, General Diagnostic Table.>	Is result of inspection OK?	The body control system is normal.	Go to step 5.
5 <b>PERFORM DIAGNOSIS.</b> 1) Correct the cause of trouble. 2) Perform the Clear Memory Mode. <Ref. to BC(diag)-12, OPERATION, Clear Memory Mode.> 3) Read the DTC. <Ref. to BC(diag)-11, OPERATION, Read Diagnostic Trouble Code (DTC).>	Is DTC displayed on Subaru Select Monitor?	Repeat step 5 until DTC is not shown.	Finish the diagnosis.