

General Diagnostic Table

BODY CONTROL SYSTEM (DIAGNOSTICS)

14. General Diagnostic Table

A: INSPECTION

Using the Subaru Select Monitor, read DTC, or check the following data on the current data display to make judgments.

Item	Operation	Specifications		Note
		YES	NO	
Diagnostic code	DTC is not displayed when inspecting all DTCs.	DTC is not displayed.	Perform the diagnosis according to DTC.	—
Remaining fuel level	Fuel gauge displays correctly	System is normal.	Check the combination meter system and LAN system.	When "Fuel level resistance" and "Fuel level resistance 2" are different values on current data of the body integrated unit, the body integrated unit may have inner malfunction.
	Remaining fuel level warning light is not illuminating.	System is normal.		
Clearance light (Low beam) (High beam)	Clearance light and low/high beams illuminate normally when the switch is operated. Indicator in the meter illuminates at the same time.	System is normal.	Check the lighting system, combination meter system and LAN system.	
Fog light	Front fog light illuminates when the switch is operated. Indicator in the meter illuminates at the same time.	System is normal.	Check the lighting system, combination meter system and LAN system.	
Rear defogger	Rear defogger operates when the switch is operated. The indicator illuminates at the same time.	System is normal.	Check the rear window defogger system and A/C system.	
Wiper deicer	Wiper deicer operates when the switch is operated. The indicator illuminates at the same time. When the ambient temperature is 5°C (41°F) or higher, press the switch 3 seconds or more to forcibly activate the system.	System is normal.	Check the wiper deicer system and A/C system.	Wiper deicer operates when "Wiper deicer setting" of the body integrated unit is set to on.
DRL	After starting the engine and releasing the parking brake, the DRL illuminates.	System is normal.	Check the lighting system and LAN system.	
Rear wiper	Rear wiper operates when the switch is operated.	System is normal.	Check wiper or washer system.	Depending on user customizing "Sedan/Wagon setting" of the body integrated unit, vehicle sensory time varies.
Key interlock	<ul style="list-style-type: none"> Key cannot be removed in other than P range. Key can be removed in other than P range. 	System is normal.	Check the body control system.	
Shift Lock	The select lever can be moved from the P range to other ranges only when the brake pedal is depressed with IG ON.	System is normal.	Check the body control system.	
Key warning switch alarm	When the driver's door is open without the key removed, the buzzer sounds.	System is normal.	Check the combination meter and body control system.	

General Diagnostic Table

BODY CONTROL SYSTEM (DIAGNOSTICS)

Item	Operation	Specifications		Note
		YES	NO	
Seat belt warning alarm	Indicator in the meter blinks and the alarm sounds when the driver's seat belt is not fastened. Indicator in the clock blinks when the passenger's seat is occupied without the passenger's seat belt fastened. When the vehicle speed exceeds 15 km/h (9 MPH) with the belt unfastened, the buzzer sounds.	System is normal.	Check the seat belt system and combination meter LAN system.	
Door lock	The doors lock/unlock when the door switch is operated. Rear gate/trunk opens when the rear gate/trunk release switch is operated.	System is normal.	Check the security & lock and body control system.	If user customizing "Sedan/Wagon setting" is different, trunk and rear gate do not open.
Keyless entry	The lock locks/unlocks when the keyless transmitter is operated. Trunk/rear gate unlocks when trunk/rear gate unlock button is operated.	System is normal.	Check the keyless entry and body control system.	
Answer back	Answer-back operates when the keyless entry locks/unlocks.	System is normal.	Check the security & lock system, and LAN system.	
Room light	The light illuminates/goes off according to the door open/close.	System is normal.	Check the room light system, security & lock system, and LAN system.	
Map light	The light illuminates/goes off according to the door open/close. (Except for rear gate)	System is normal.	Check the spot map light, security & lock system, and LAN system.	
Luggage/trunk light	The light illuminates/goes off according to the rear gate open/close.	System is normal.	Check the luggage/trunk light, security & lock system, and LAN system.	
Key illumination	The light illuminates/goes off according to the driver's door open/close.	System is normal.	Check the ignition switch illumination, security & lock, and LAN system.	
Illumination control	Illumination volume control is available.	System is normal.	Check the illumination control switch, combination meter, and body control system.	Illumination volume control is not available when user customizing "Illumination Control On/Off" of the body integrated unit is set to off.
Engine start	Engine starts.	System is normal.	Check the engine system, immobilizer, and LAN system.	
Vehicle security	Security monitoring/security canceling can be performed by operating the keyless entry.	System is normal.	Check the security & lock system, and LAN system.	Security monitoring starts and at the same time the warning buzzer sounds, when impact sensor is not connected and user customizing "Impact Sensor" of the body integrated unit is set to on.

WIRING SYSTEM SECTION**WIRING SYSTEM****WI**

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

WIRING SYSTEM

WI

	Page
1. Basic Diagnostic Procedure	3
2. Working Precautions	14
3. Power Supply Circuit	15
4. Ground Circuit	24
5. Airbag System	37
6. Air Conditioning System	41
7. AT Control System	50
8. Audio System	57
9. Back-up Light System	66
10. CAN Communication System	69
11. Charging System	72
12. Clearance Light and Illumination Light System	73
13. Clock System	80
14. Combination Meter System	81
15. Coolant Temperature System	86
16. Cruise Control System	88
17. CVT Control System	94
18. Engine Electrical System	102
19. Front Accessory Power Supply Socket System	148
20. Front Fog Light System	149
21. Front Wiper and Washer System	151
22. Fuel Gauge System	153
23. Headlight System	154
24. Horn System	157
25. Immobilizer System	158
26. Interior Light System	159
27. Keyless Entry System	163
28. Navigation System	167
29. Occupant Detection System	173
30. Oil Pressure Warning Light System	174
31. Parking Brake / Brake Fluid Level Warning Light System	175
32. Power Seat System	179
33. Power Window System	181
34. Radiator Fan System	189
35. Rear Accessory Power Supply Socket System	192
36. Rear Defogger System	193
37. Rearview Camera System	194
38. Rearview Mirror System	197
39. Rear Wiper and Washer System	199
40. Remote Control Mirror System	201
41. Remote Engine Start System	203
42. Seat Belt Warning System	206
43. Seat Heater System	210
44. Security System	212
45. Shift Lock Control System	215

46.	Speedometer System	216
47.	Starter System	217
48.	Stop Light System	220
49.	Sunroof Control System	223
50.	Tire Pressure Monitoring System	224
51.	Turn Signal Light and Hazard Light System	225
52.	Vehicle Dynamics Control System	227
53.	Wiper Deicer System	230
54.	Harness Components Location	231
55.	Front Wiring Harness	233
56.	Bulkhead Wiring Harness (In Engine Compartment)	234
57.	Bulkhead Wiring Harness (In Compartment)	240
58.	Engine Wiring Harness and Transmission Cord	247
59.	Instrument Panel Wiring Harness	253
60.	Rear Wiring Harness	256
61.	Door Cord	262
62.	Rear Wiring Harness and Trunk Lid Cord	264
63.	Rear Wiring Harness and Rear Gate Cord	266