


2. Relay and Fuse

A: LOCATION

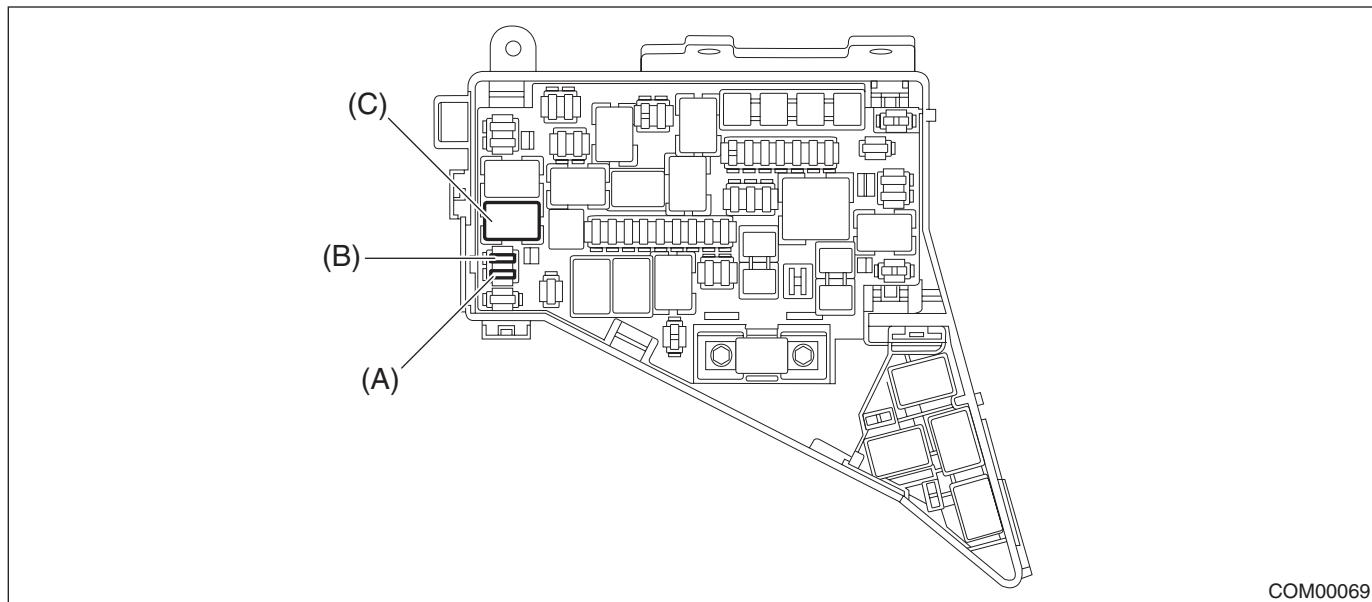

COM00069

Main fuse box	Fuse 7.5A (Hi pitch (RH) side horn)	(A)
	Fuse 7.5A (Lo pitch (LH) side horn)	(B)
	HORN RELAY	(C)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>


B: INSPECTION

1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

2. CHECK RELAY

- 1) Check the resistance between relay terminals.

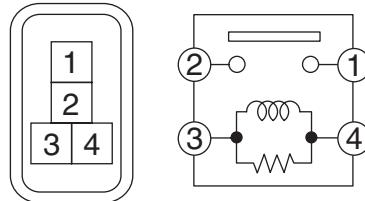Terminal No.	Inspection conditions	Specification	Circuit
1 — 2	Always	1 MΩ or more	
1 — 2	Apply battery voltage between 4 — 3 terminals.	Less than 1 Ω	 SR-00180

- 2) Replace the relay if the inspection result is not within the standard value.