


## 4. Horn

### A: REMOVAL

1) Disconnect the ground cable from battery.

2) Remove the bumper face assembly.

(1) Remove the clips, turn over the front mud guard, and disconnect the fog light connector. (Model with fog light)

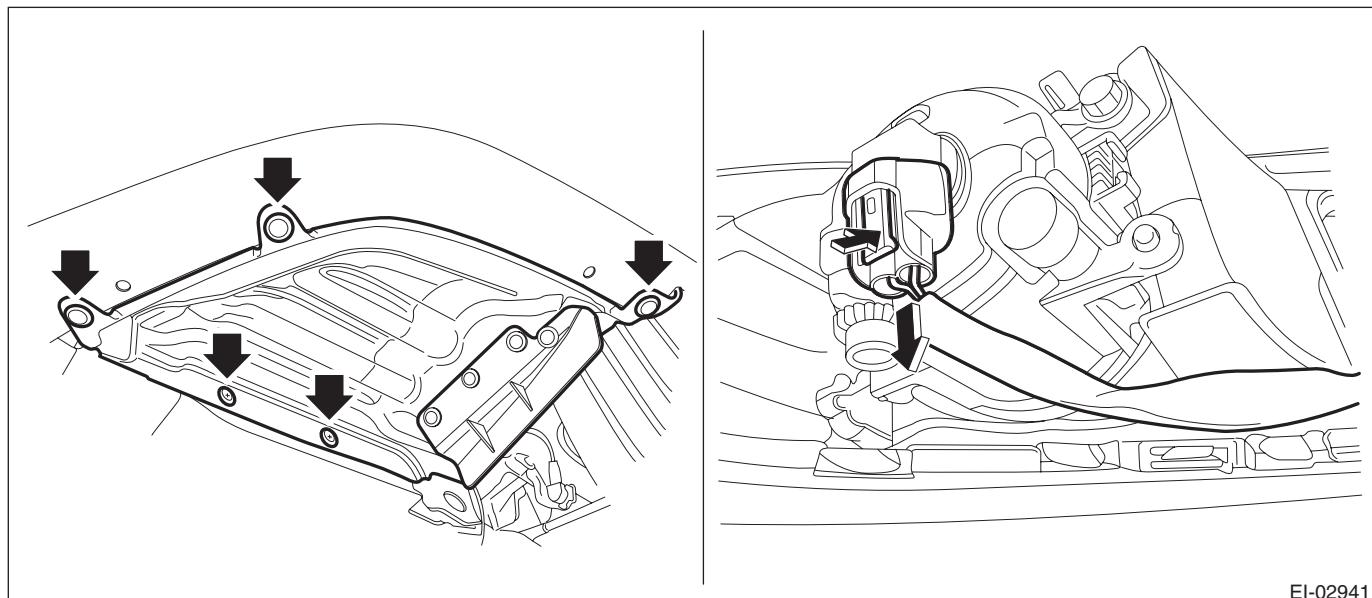

EI-02941


(2) Remove the clips at the upper side of the bumper.

(3) Remove the clips from the fender.

## Horn

### COMMUNICATION SYSTEM

(4) Remove the clips at the lower side of bumper.

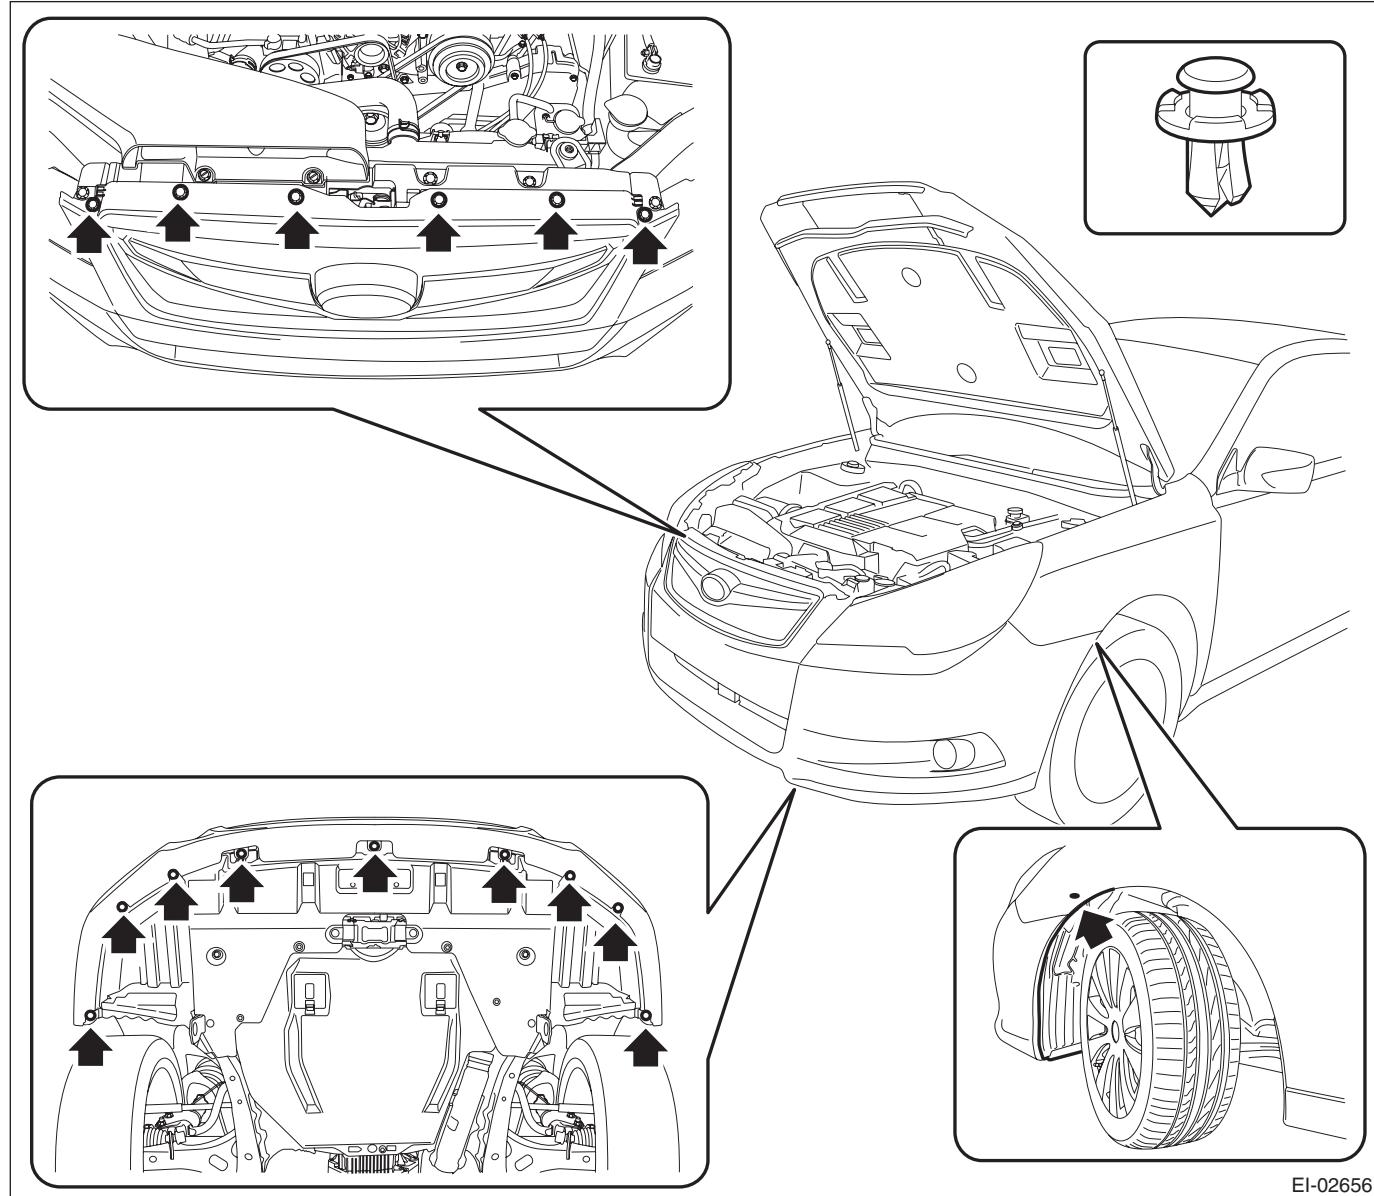


EI-02656

(5) Detach the flange section on the bumper face side from the bracket side front UPR.

**CAUTION:**

**Do not pull forcibly. It may damage the flange sections of the bumper face.**

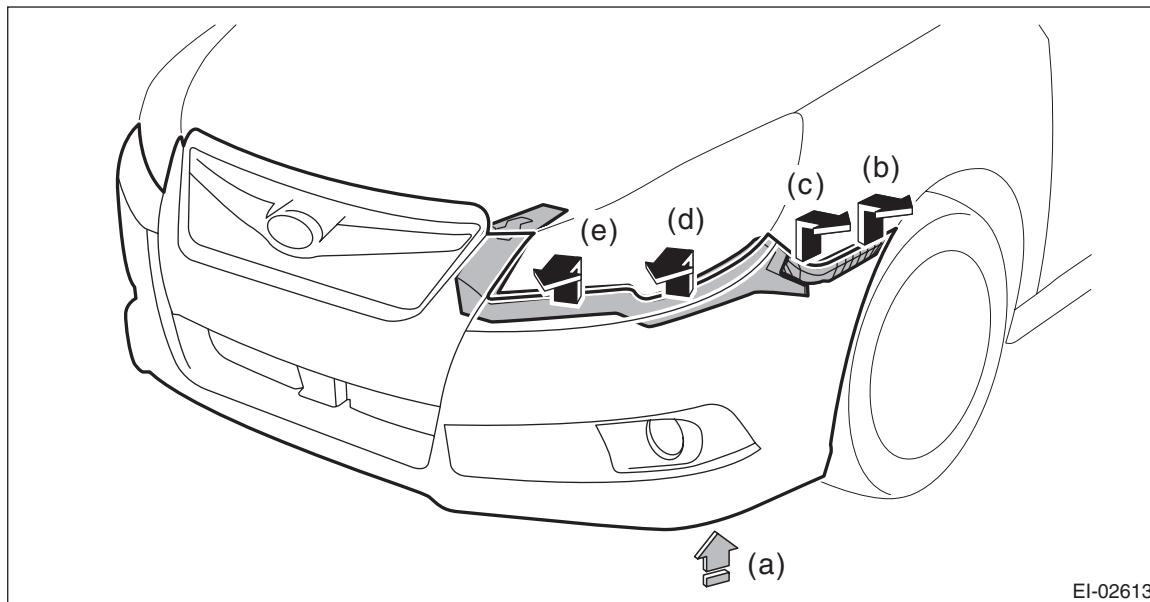


**NOTE:**

Pushing up the lower side (a) of the fog light, remove from (b) to (e).

Detach the opposite side in the same manner.


3) Remove the clips and remove the air intake duct.

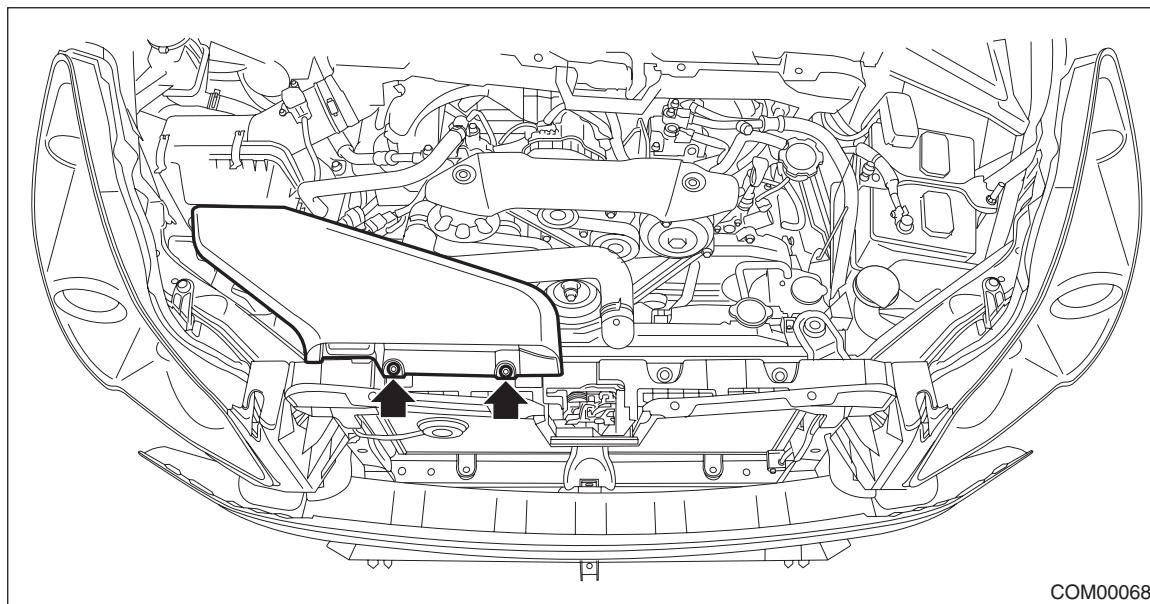

## Horn

### COMMUNICATION SYSTEM


4) Remove the clips and remove the grille bracket.

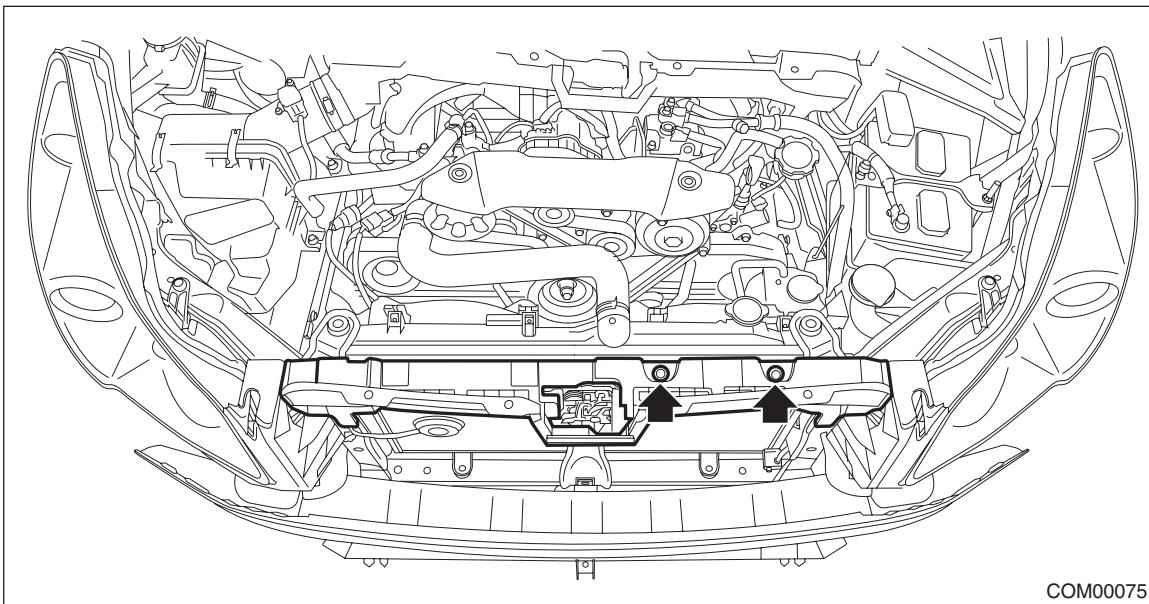

5) Remove the Lo pitch side horn.

(1) Disconnect the connector.


(2) Remove the horn bracket mounting bolt, and remove the Lo pitch side horn.

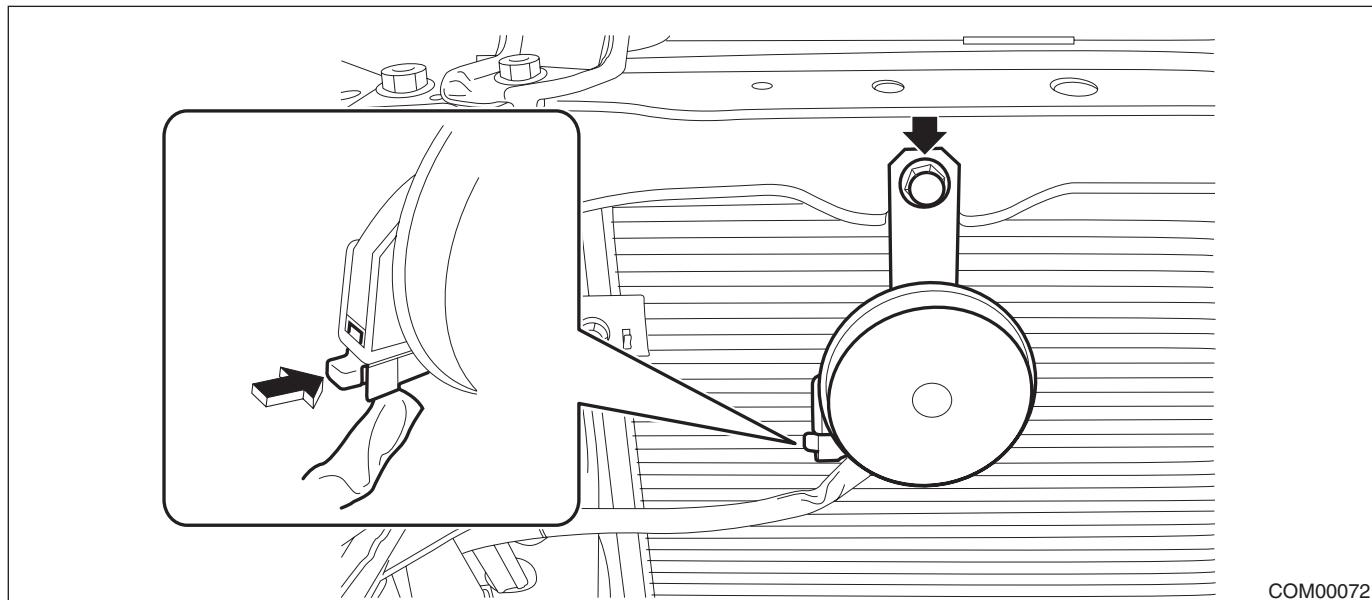

6) Remove the Hi pitch side horn.

(1) Disconnect the connector.

(2) Remove the horn bracket mounting bolt, and remove the Hi pitch side horn.

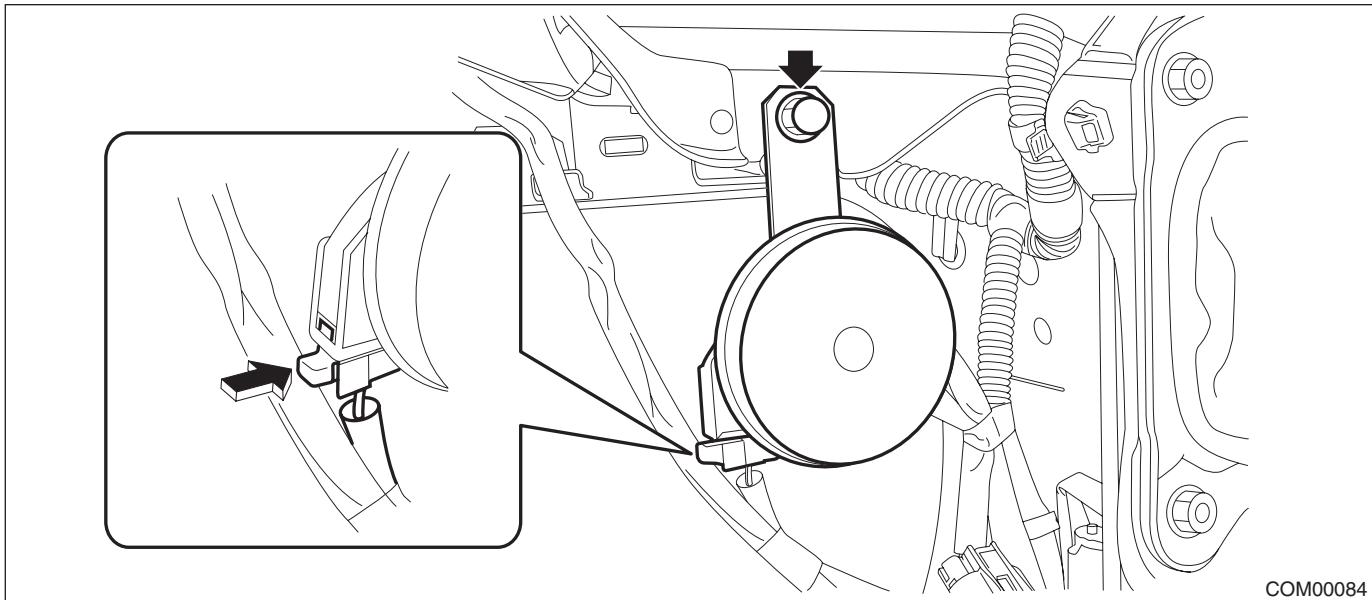


## B: INSTALLATION

Install each part in the reverse order of removal.

### CAUTION:

Install the bumper face so that the under cover front end (b) comes inside the front bumper face (a).

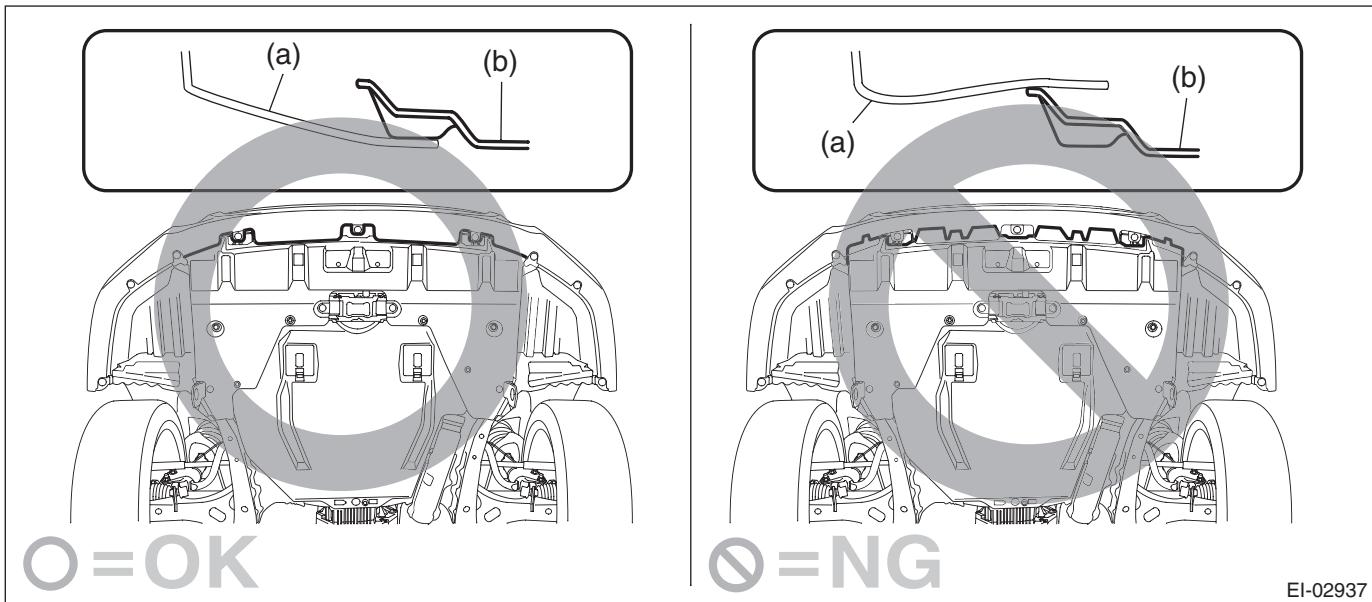


**Tightening torque:**

**Horn assembly: 18 N·m (1.84 kgf·m, 13.3 ft-lb)**

## C: INSPECTION

### 1. CHECK HORN ASSEMBLY.

- 1) Remove the horn assembly (Hi pitch side and Lo pitch side). <Ref. to COM-5, REMOVAL, Horn.>
- 2) Check the horn sounds when applying the battery voltage to the horn assembly.

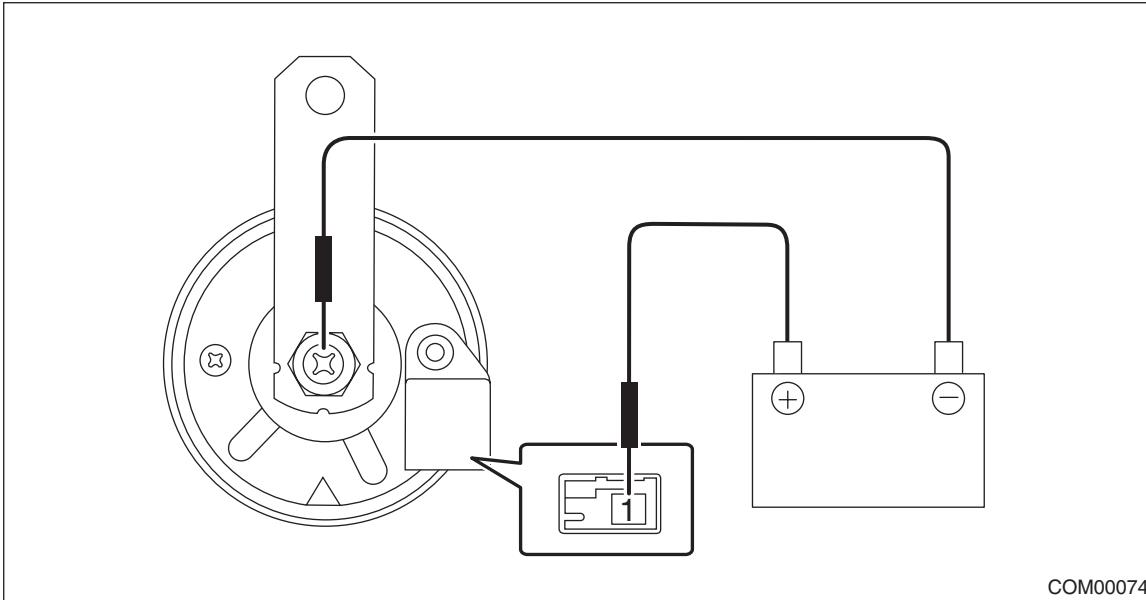

Terminal No.	Inspection conditions	Specification
1 (+) — horn case (-)	Connect battery to the terminals	Sound

- 3) If it does not operate normally by the inspection, replace the horn assembly.