

5. Horn Switch

A: REMOVAL

CAUTION:

Before handling the airbag module, refer to “CAUTION” of “General Description” in the “AB” section.
<Ref. to AB-9, CAUTION, General Description.>


NOTE:

Horn switch is a unit with the driver's airbag module.


- 1) Position the front wheels straight ahead. (After moving a vehicle 5 m (16 ft) or more with front wheels positioned straight ahead, make sure that the vehicle moves straight ahead.)
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 4) Remove the driver's airbag module assembly.

Preparation tool: TORX® T30

- (1) Loosen the TORX® bolts located on the sides of the steering wheel.

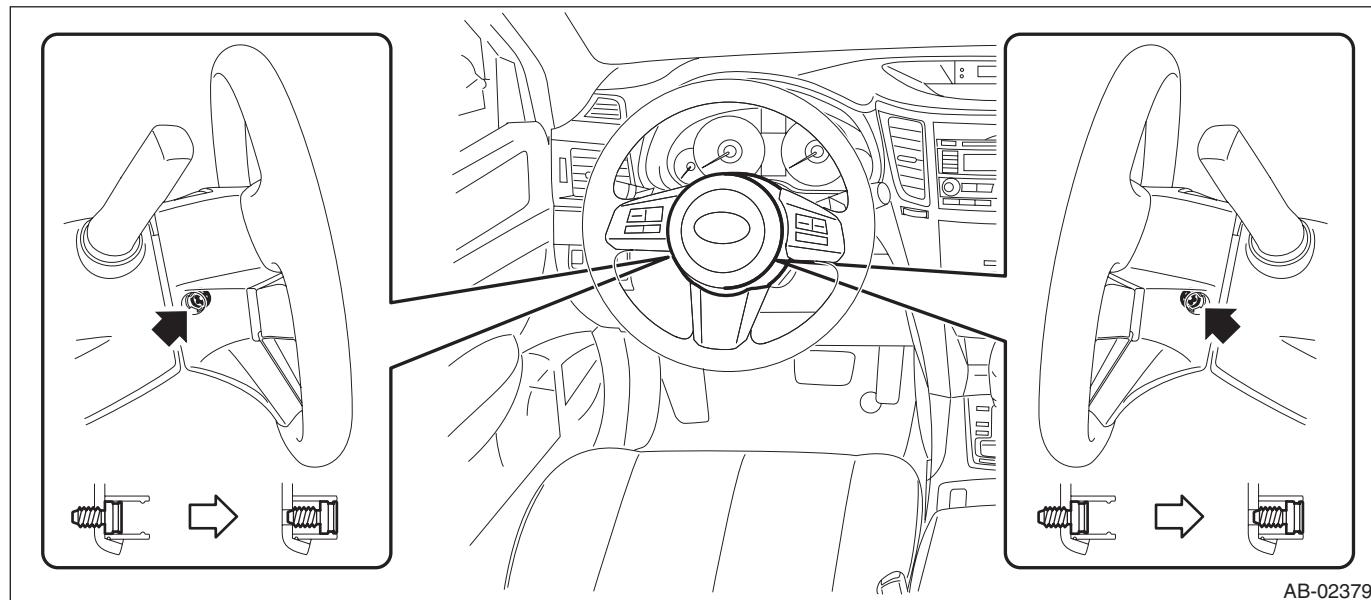

- (2) Disconnect the horn harness and airbag connector and remove the airbag module assembly.

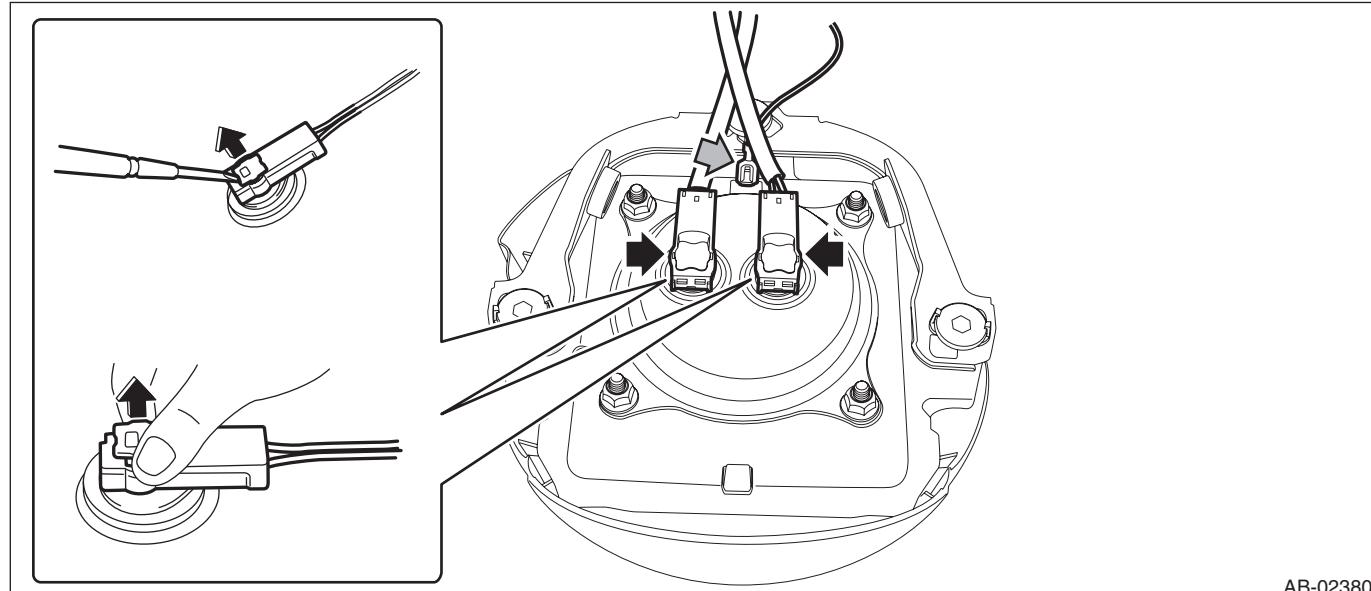

B: INSTALLATION

CAUTION:

- Before handling the airbag module, refer to “CAUTION” of “General Description” in the “AB” section. <Ref. to AB-9, CAUTION, General Description.>
- Do not allow harness and connectors to interfere or get tangled up with other parts.

- 1) Install the driver's airbag module. <Ref. to AB-35, INSTALLATION, Driver's Airbag Module.>
- 2) Install each part in the reverse order of removal.

Tightening torque:


Driver's airbag module: 10 N·m (1.02 kgf·m, 7.4 ft-lb)

C: INSPECTION

1. CHECK HORN SWITCH.

- 1) Remove the horn switch. <Ref. to COM-11, REMOVAL, Horn Switch.>
- 2) Measure the resistance between horn switch terminal and airbag module bracket.

Preparation tool: Circuit tester

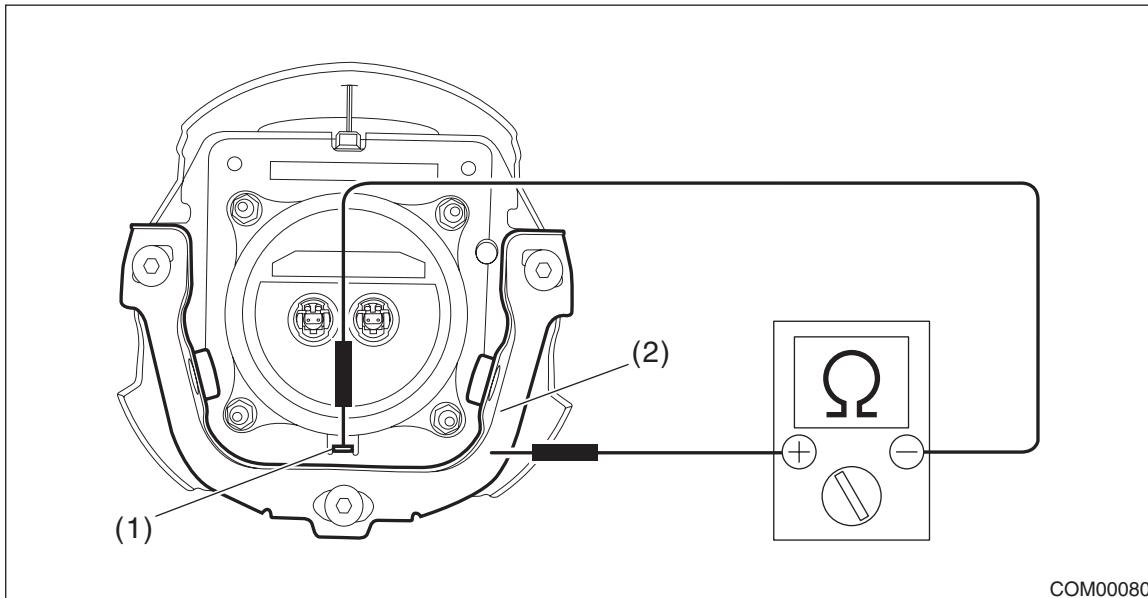

(1) Horn switch terminal

(2) Airbag module bracket


Terminal No.	Inspection conditions	Specification
Horn switch terminal — airbag module bracket	The airbag module bracket being pushed	Less than 1 Ω
	The airbag module bracket being separated	1 MΩ or more

- 3) If it is out of the standard value by the inspection, replace the driver's airbag module.

2. CHECK ROLL CONNECTOR.

- 1) Remove the roll connector. <Ref. to AB-96, REMOVAL, Roll Connector.>
- 2) Measure the resistance between roll connector terminals.

Preparation tool: Circuit tester

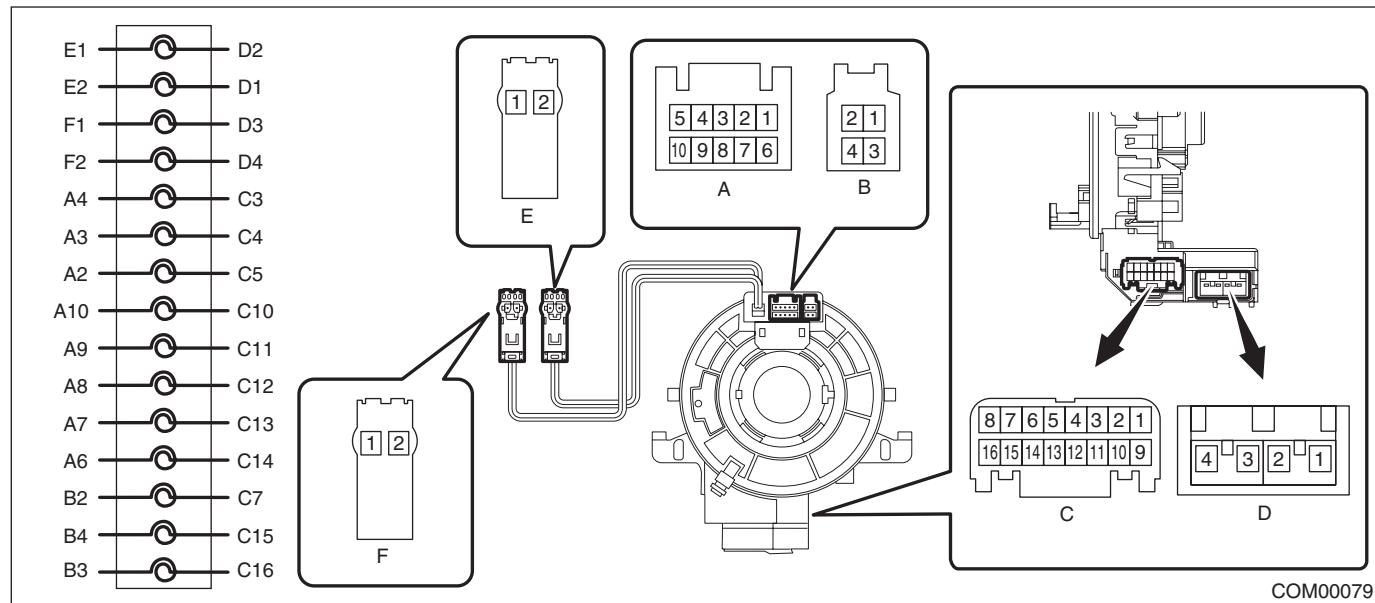

Terminal No.	Inspection conditions	Specification
A10 — C10	Always	Less than 1 Ω

- 3) If it is out of the standard value by the inspection, replace the roll connector.

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Relay and Fuse	8
3. Power Window System	10
4. Power Window Control Switch	12
5. Front Door Glass	18
6. Front Regulator and Motor Assembly	20
7. Remote Control Mirror System	22
8. Scalp Cap	23
9. Outer Mirror Assembly	27
10. Outer Mirror	29
11. Remote Control Mirror Switch	31
12. Rear Door Glass	33
13. Rear Regulator and Motor Assembly	35
14. Windshield Glass	37
15. Rear Gate Glass	45
16. Rear Window Glass	49
17. Rear Window Defogger System	52
18. Rear Quarter Glass	55
19. Rearview Mirror	57
20. Rearview Mirror (RCD Model)	58
21. Wiper Deicer System	62