

4. Cruise Control Module

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

B: REMOVAL

- H4 non-turbo model: <Ref. to FU(H4SO)-41, REMOVAL, Engine Control Module (ECM).>
- H4 turbo model: <Ref. to FU(H4DOTC)-58, REMOVAL, Engine Control Module (ECM).>
- H6 model: <Ref. to FU(H6DO)-52, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

- H4 non-turbo model: <Ref. to FU(H4SO)-41, INSTALLATION, Engine Control Module (ECM).>
- H4 turbo model: <Ref. to FU(H4DOTC)-58, INSTALLATION, Engine Control Module (ECM).>
- H6 model: <Ref. to FU(H6DO)-52, INSTALLATION, Engine Control Module (ECM).>