


11. Protector Tape

A: INSTALLATION

Apply the protector tape by the following steps.

1. REAR DOOR PROTECTOR (OUTBACK MODEL)

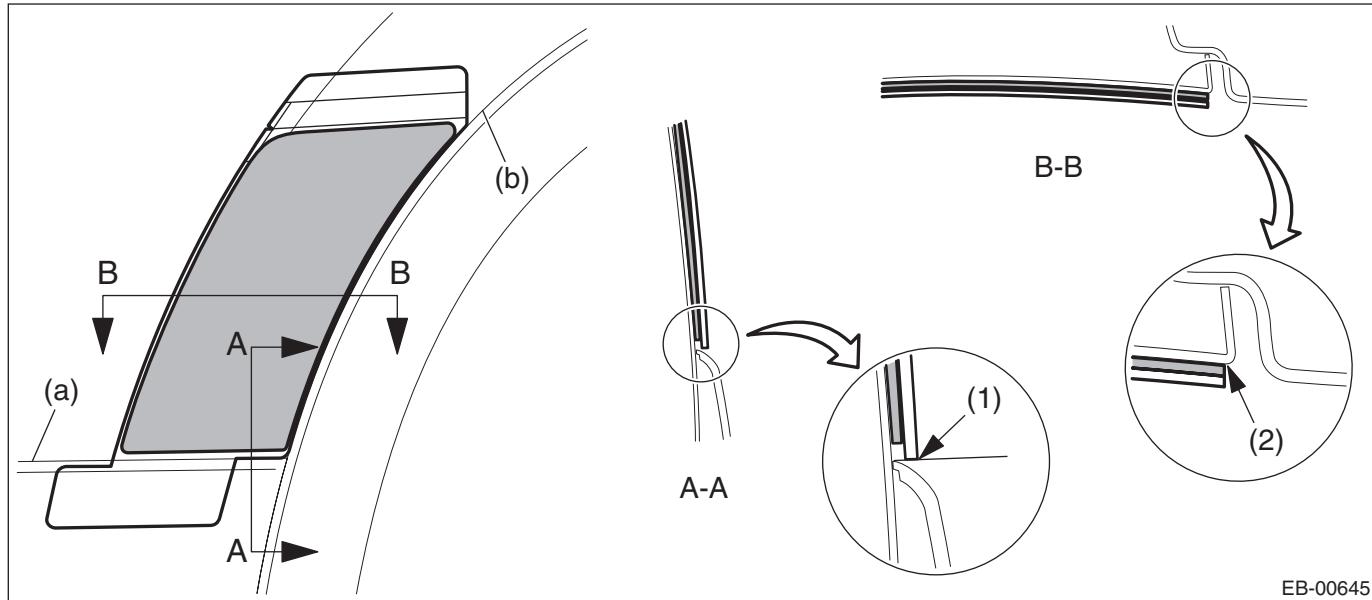

(a) Rear door garnish end

(b) Rear door panel end

(1) Align the application sheet to the end of rear door garnish.

(2) Align the application sheet to the end of rounded corner.

1) Clean the area around applying position to remove any foreign objects on body.

2) Detach the backing paper and apply the protector tape after positioning it correctly.

3) Detach the backing papers, and moisten the applying area and the backside of protector tape by spraying liquid (mild detergent solution at 3% concentration).


4) Apply the protector tape to the vehicle body.

CAUTION:

Remove the water or air bubbles out of the protector tape by using the plastic or rubber spatula.

5) Detach the application tape and temporary retention tape.

2. REAR QUARTER PROTECTOR

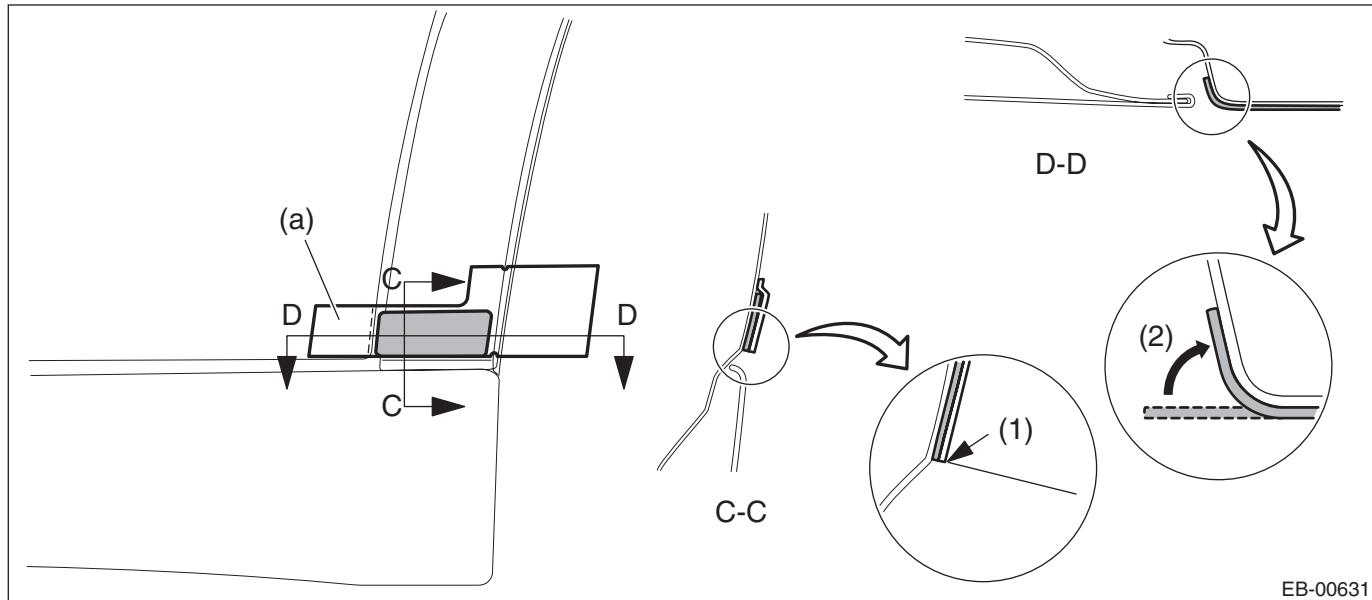

(1) Align the application sheet to the end of rounded corner.
(2) Apply the protector tape along the rounded surface.

- 1) Clean the area around applying position to remove any foreign objects on body.
- 2) Detach the backing paper from the temporary retention area (a) and apply the protector tape after positioning it correctly.
- 3) Detach the backing papers, and moisten the applying area and the backside of protector tape by spraying liquid (mild detergent solution at 3% concentration).
- 4) Apply the protector tape to the vehicle body.

CAUTION:

Remove the water or air bubbles out of the protector tape by using the plastic or rubber spatula.

- 5) Detach the application tape and temporary retention tape.
- 6) Bend the tack-in end and apply it as shown by (2) in the figure.

Protector Tape

EXTERIOR BODY PANELS

CRUISE CONTROL SYSTEM

CC

	Page
1. General Description	2
2. Relay and Fuse	4
3. Cruise Control System	5
4. Cruise Control Module	6
5. Cruise Control Command Switch	7
6. Combination Meter	11
7. Stop Light & Brake Switch	12
8. Clutch Switch	13
9. Inhibitor Switch	14
10. Transmission Control Module (TCM)	15
11. Neutral Position Switch	16