


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. FRONT UNDER COVER

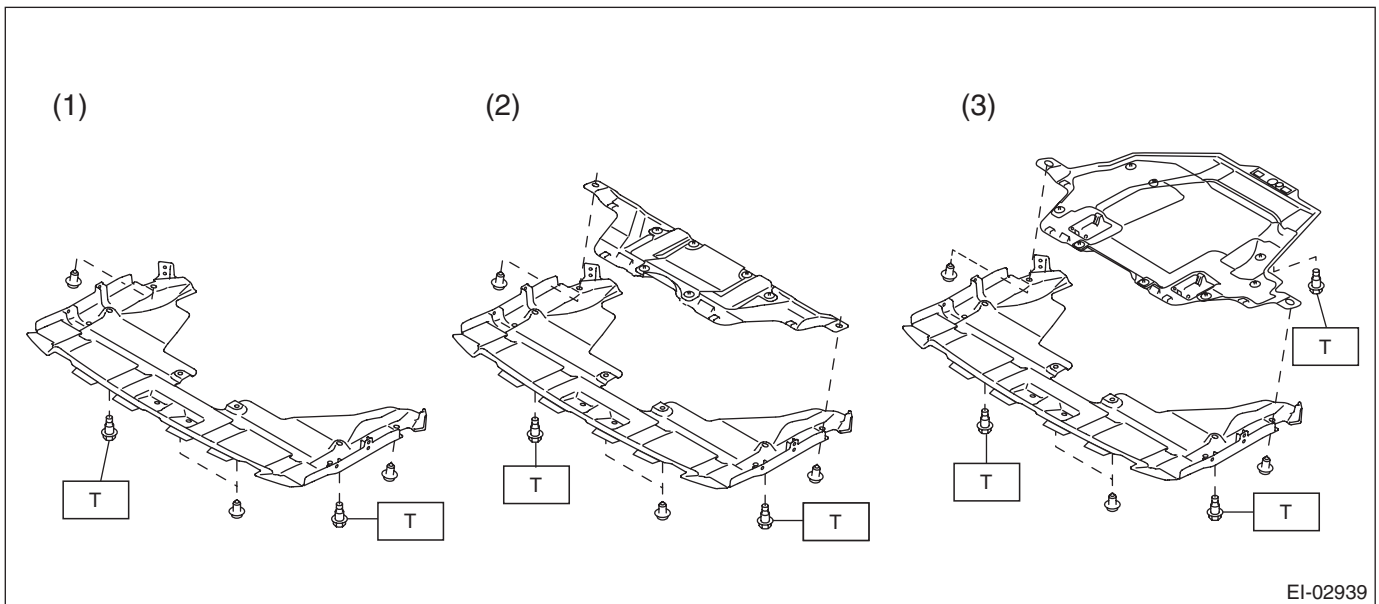


EI-02939

- (1) Small type
(2) Medium type

- (3) Large type

Tightening torque:N·m (kgf-m, ft-lb)
T: 17.5 (1.78, 12.9)


2. FLOOR UNDER PROTECTOR

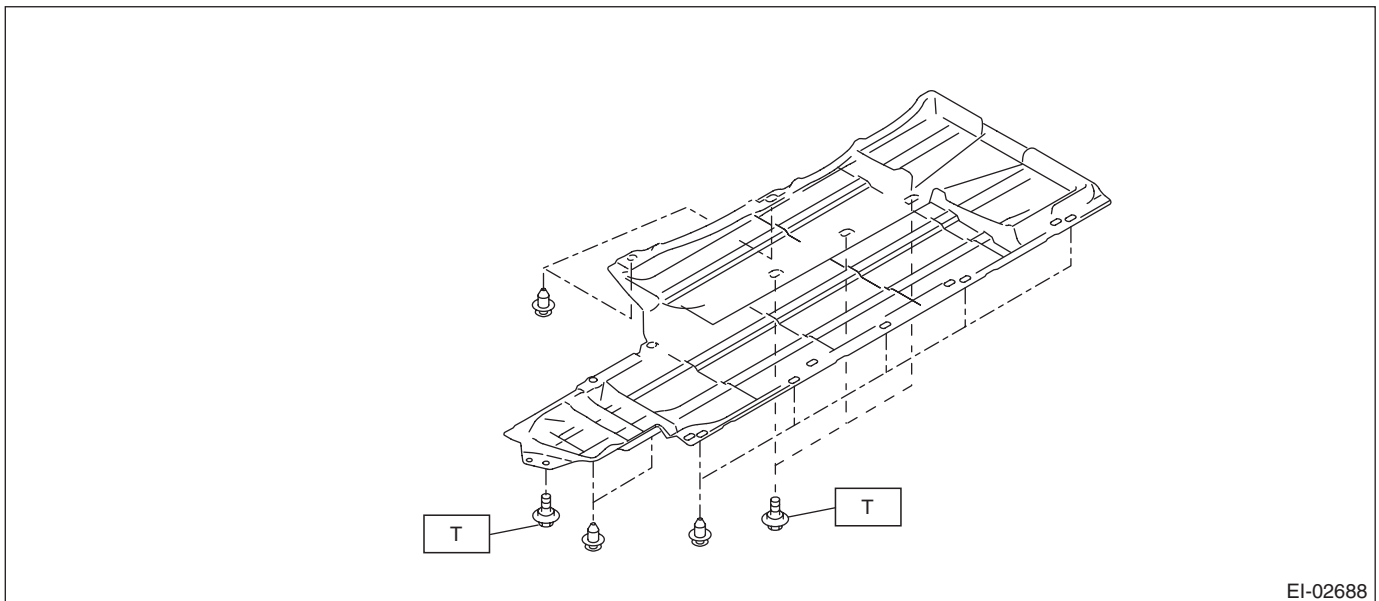

EI-02688

Tightening torque:N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

3. FUEL TANK PROTECTOR

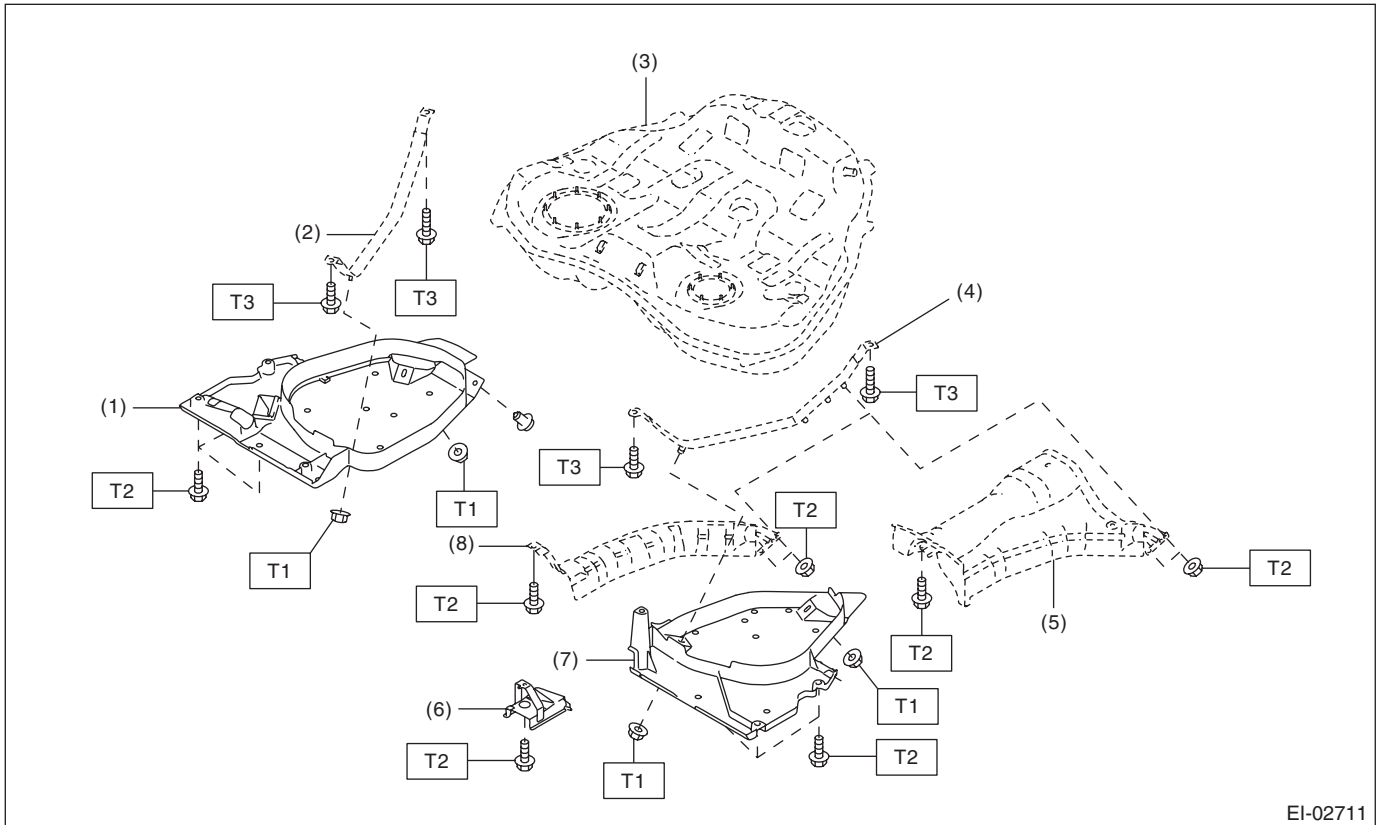

EI-02711

- | | |
|----------------------------|---|
| (1) Fuel tank protector RH | (5) Center heat shield cover (DOHC model) |
| (2) Fuel tank band ASSY RH | (6) Fuel tank bracket |
| (3) Fuel tank ASSY | (7) Fuel tank protector LH |
| (4) Fuel tank band ASSY LH | (8) Center heat shield cover (SOHC model) |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 9 (0.92, 6.6)


T2: 18 (1.84, 13.3)

T3: 33 (3.36, 24.3)

General Description

EXTERIOR/INTERIOR TRIM

4. FRONT HOOD GRILLE

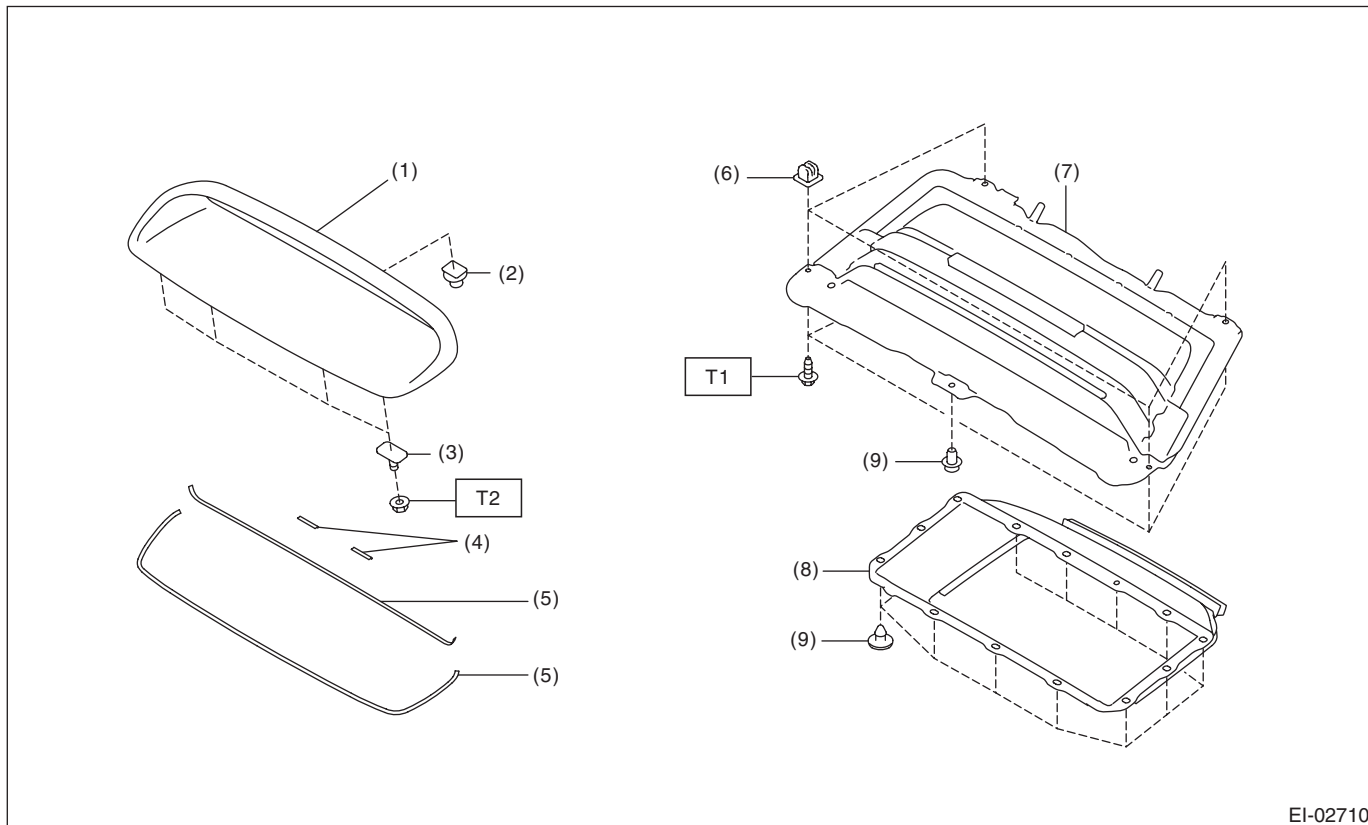


- | | |
|-----------------------|---------------------|
| (1) Front hood grille | (6) Grommet |
| (2) Clip anchor | (7) Hood duct |
| (3) Bolt | (8) Hood duct inner |
| (4) Protector | (9) Clip |
| (5) Gasket | |

Tightening torque:N·m (kgf-m, ft-lb)

T1: 1.0 (0.1, 0.7)

T2: 4.5 (0.46, 3.3)

5. FRONT BUMPER

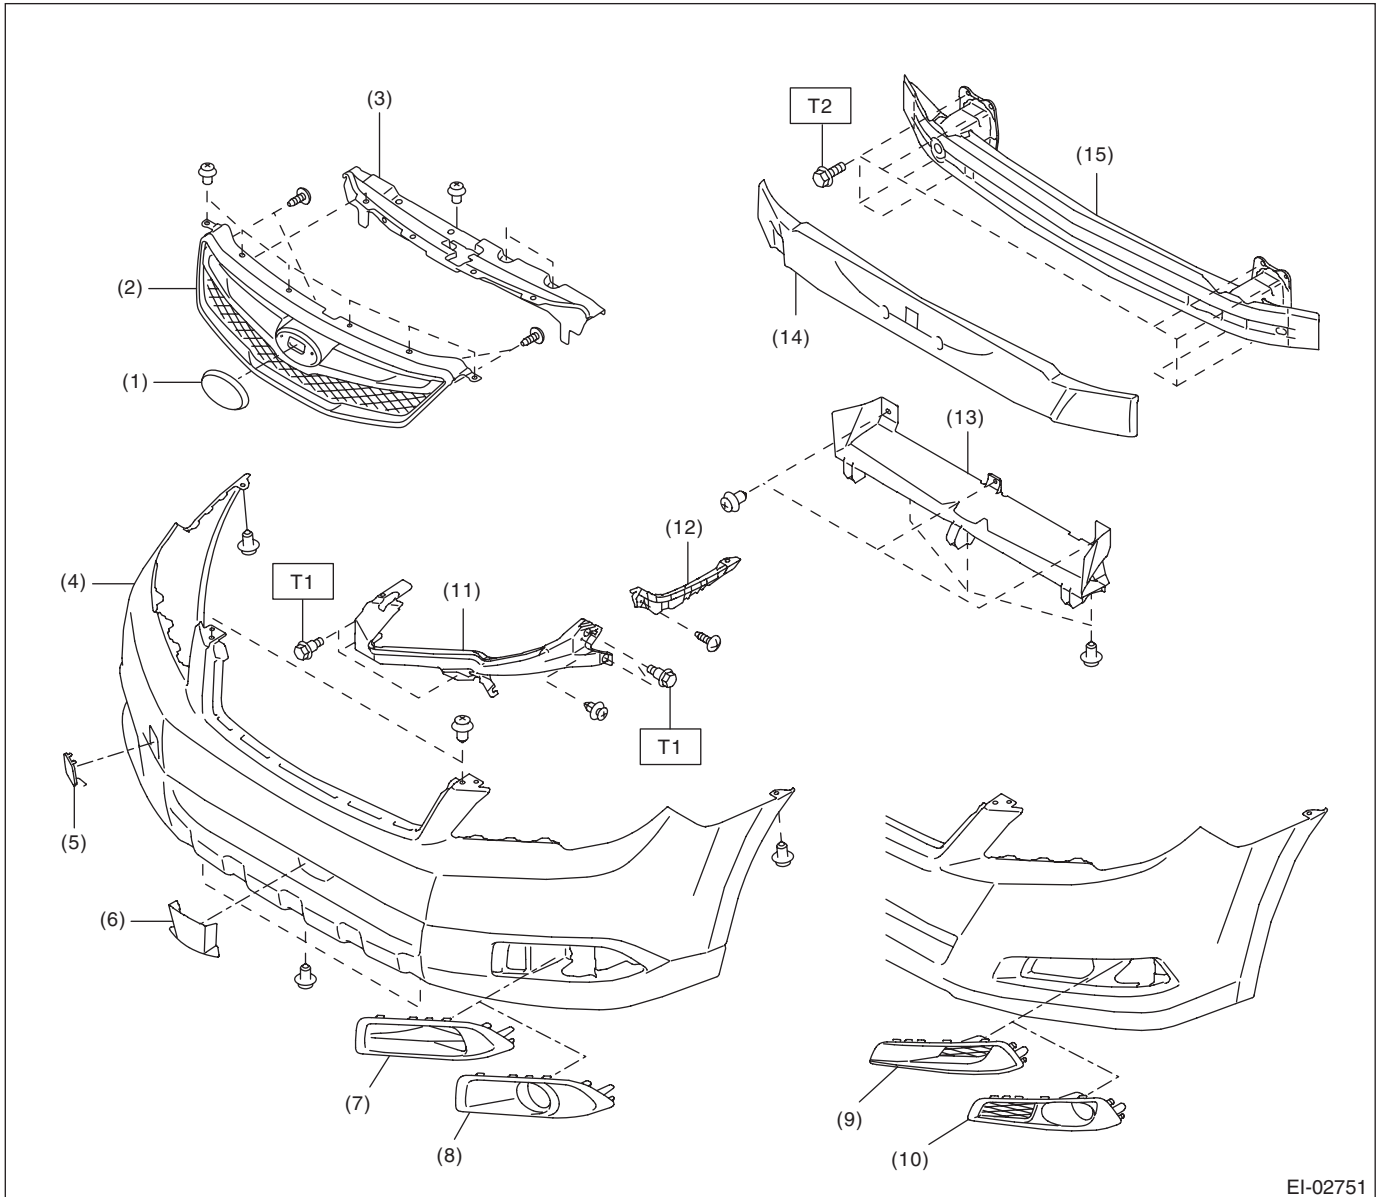

EI-02751

- | | | |
|----------------------------------|-------------------------------------|-----------------------|
| (1) Floor ornament | (8) Fog light cover (OUTBACK model) | (15) Beam COMPL front |
| (2) Front grille ASSY | (9) Bumper cover (Sedan model) | |
| (3) Grille bracket | (10) Fog light cover (Sedan model) | |
| (4) Front bumper face | (11) Bracket corner front | |
| (5) Front hook cover | (12) Bracket side front UPR | |
| (6) Bumper cover CTR | (13) Bracket center LWR front | |
| (7) Bumper cover (OUTBACK model) | (14) Energy absorber foam front | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)


T2: 32 (3.26, 23.6)

General Description

EXTERIOR/INTERIOR TRIM

6. REAR BUMPER

- Sedan model

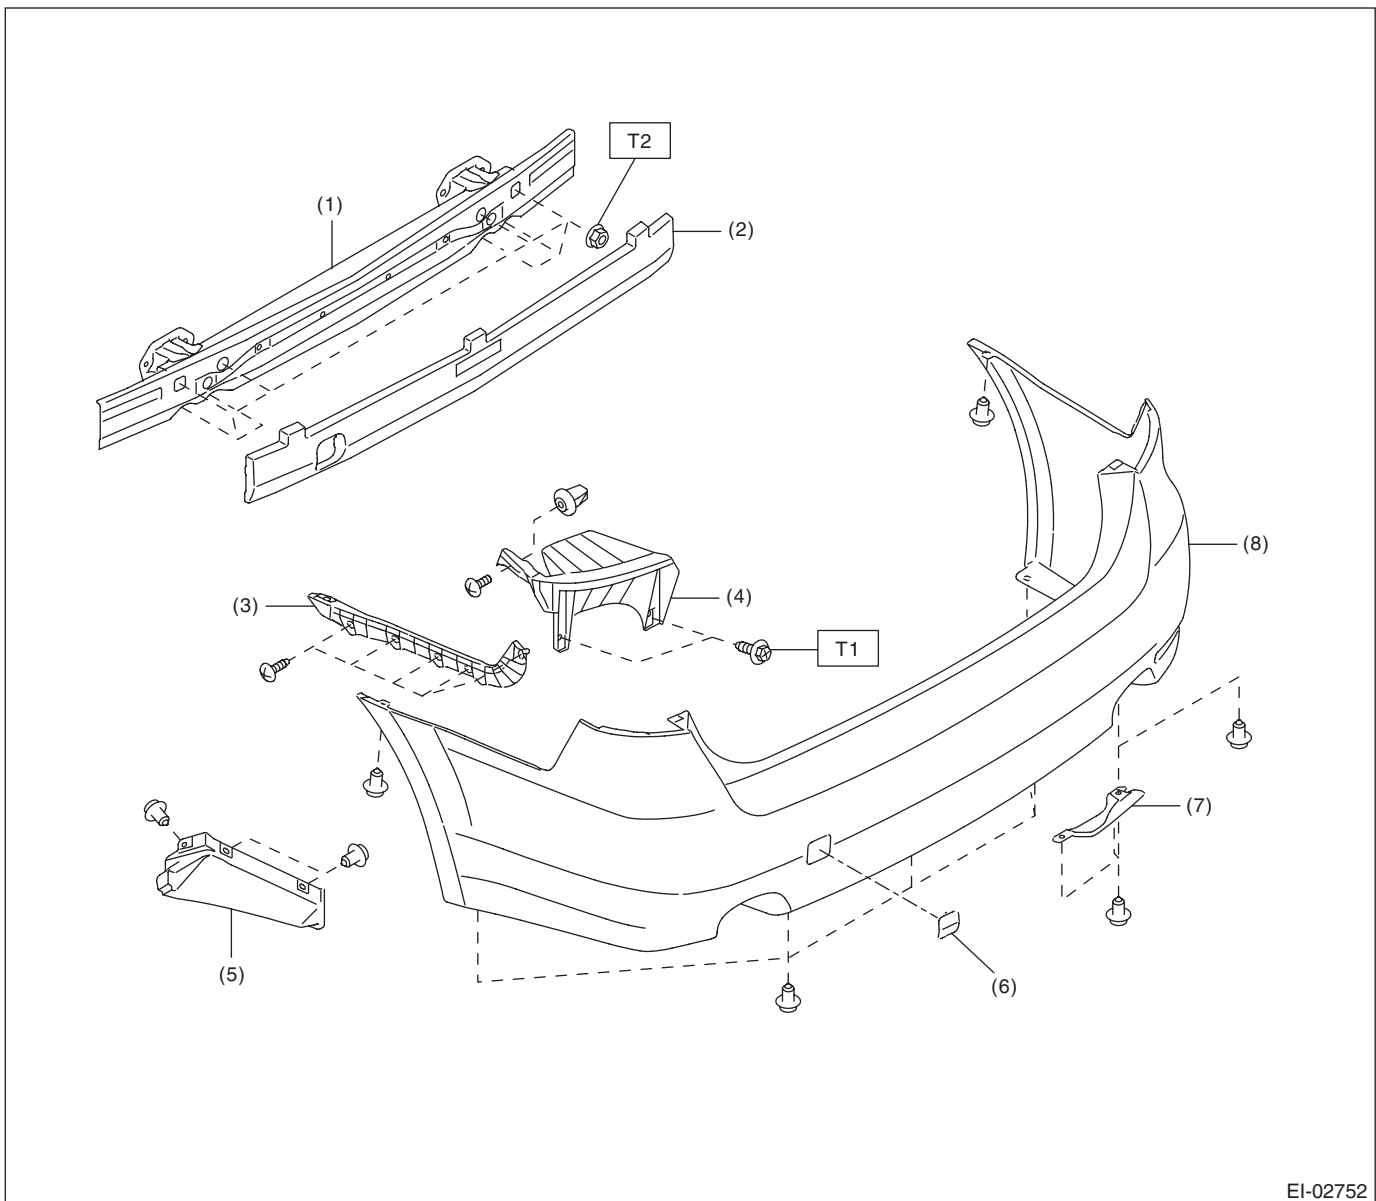

EI-02752


- | | |
|-------------------------------|---------------------------|
| (1) Beam COMPL rear | (5) Bracket side rear LWR |
| (2) Energy absorber foam rear | (6) Rear hook cover |
| (3) Bracket side rear UPR | (7) Bumper cover rear |
| (4) Bracket corner rear | (8) Rear bumper face |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 45 (4.59, 33.2)

- OUTBACK model

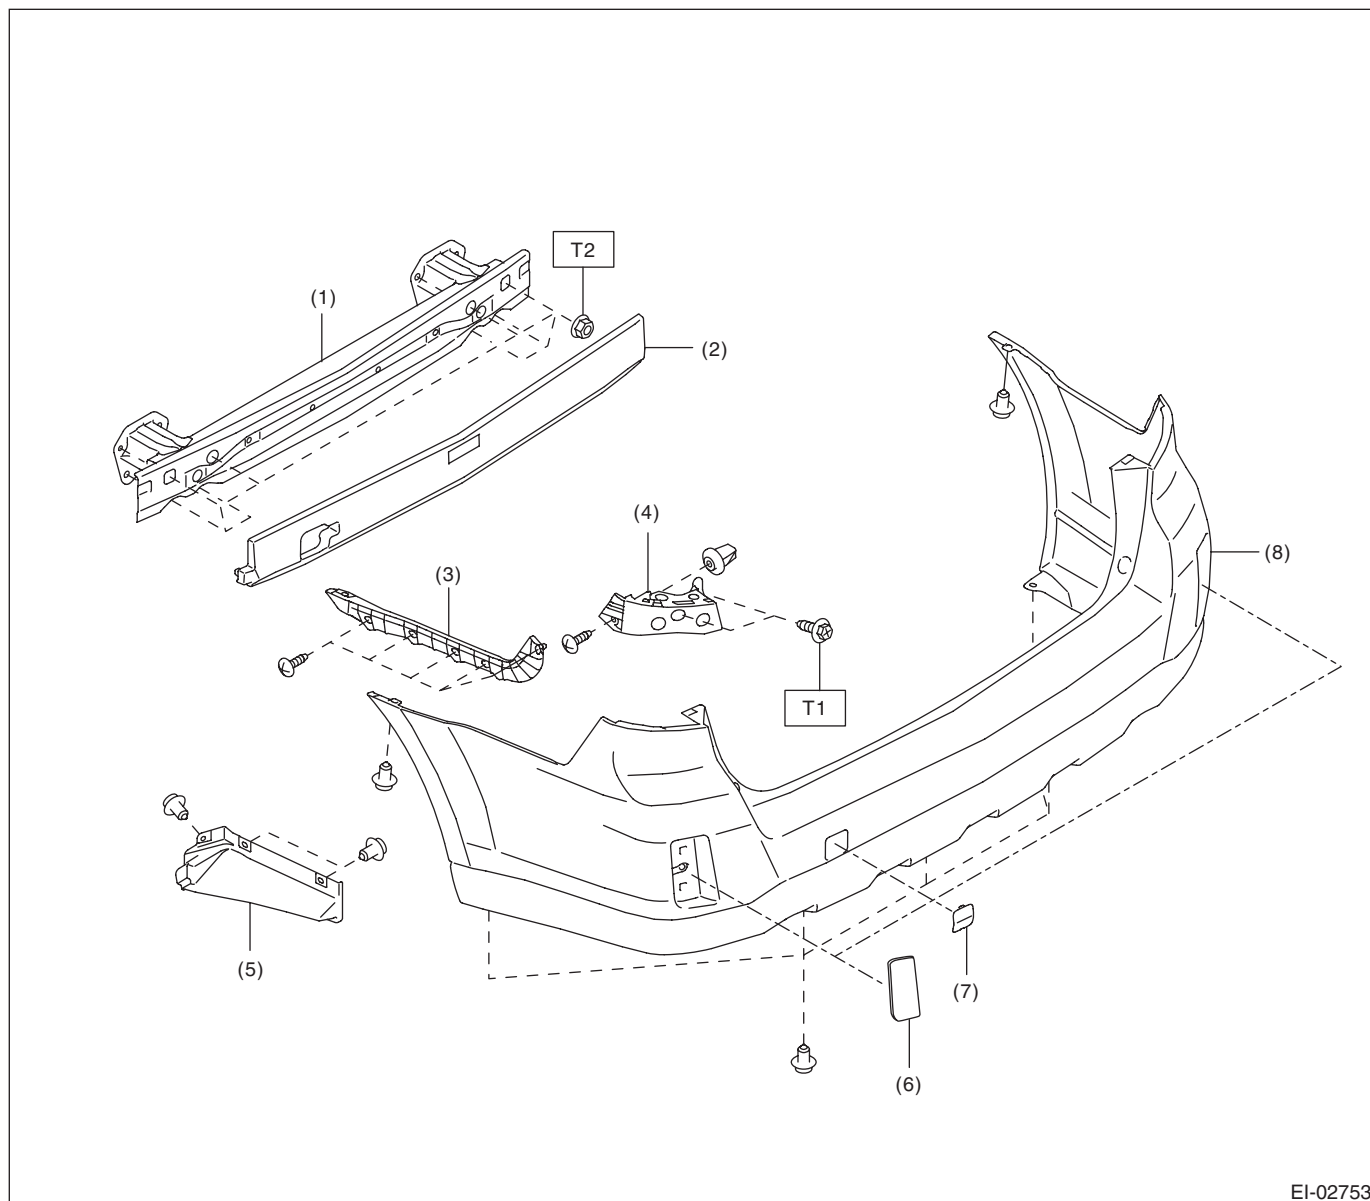

EI-02753

- | | |
|-------------------------------|---------------------------|
| (1) Beam COMPL rear | (5) Bracket side rear LWR |
| (2) Energy absorber foam rear | (6) Reflex reflector |
| (3) Bracket side rear UPR | (7) Rear hook cover |
| (4) Bracket corner rear | (8) Rear bumper face |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7.5 (0.76, 5.5)

T2: 45 (4.59, 33.2)

General Description

EXTERIOR/INTERIOR TRIM


7. MUD GUARD

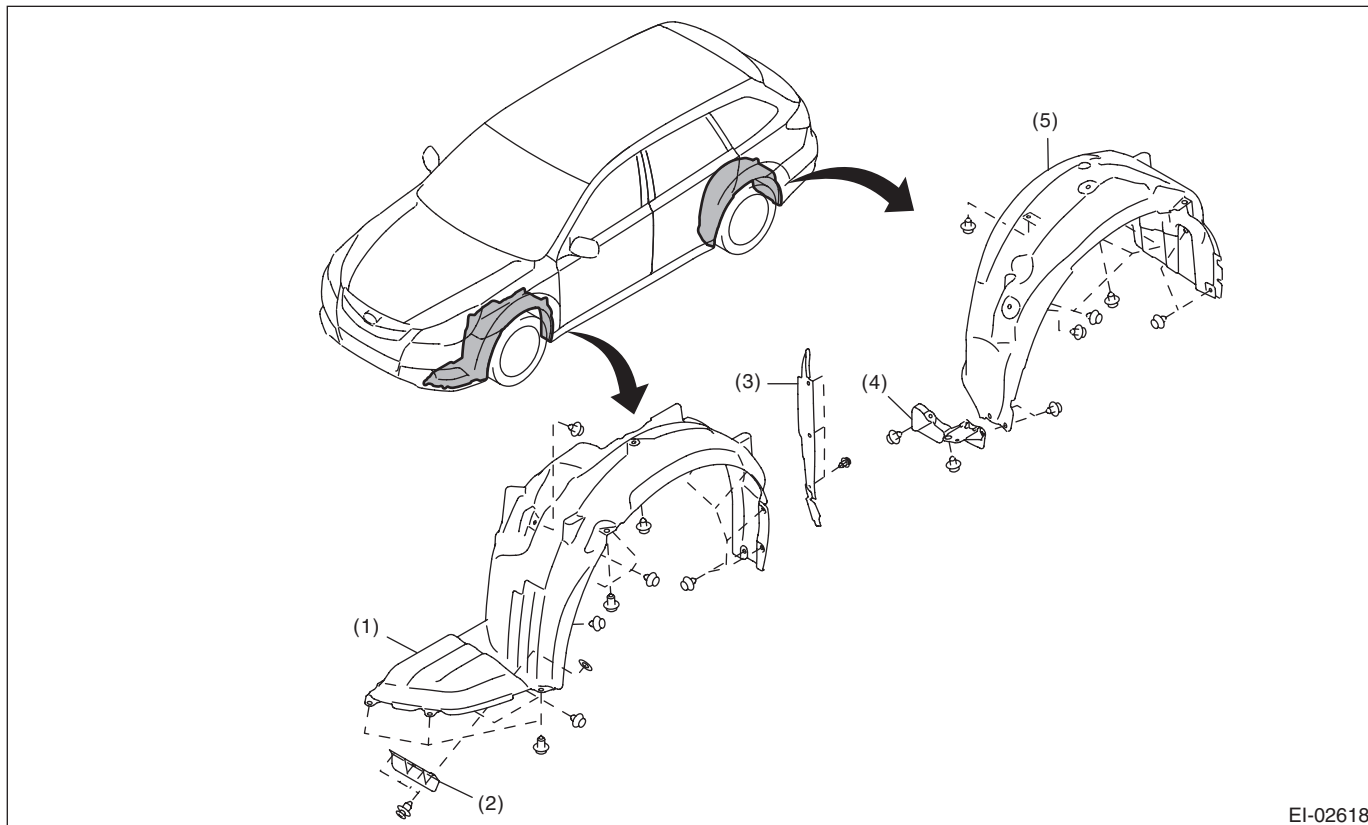

EI-02618

- | | | |
|--------------------------|-------------------------|--------------------|
| (1) Front mud guard | (3) Fender cover lower | (5) Rear mud guard |
| (2) Front air flap plate | (4) Rear air flap plate | |


8. COWL PANEL

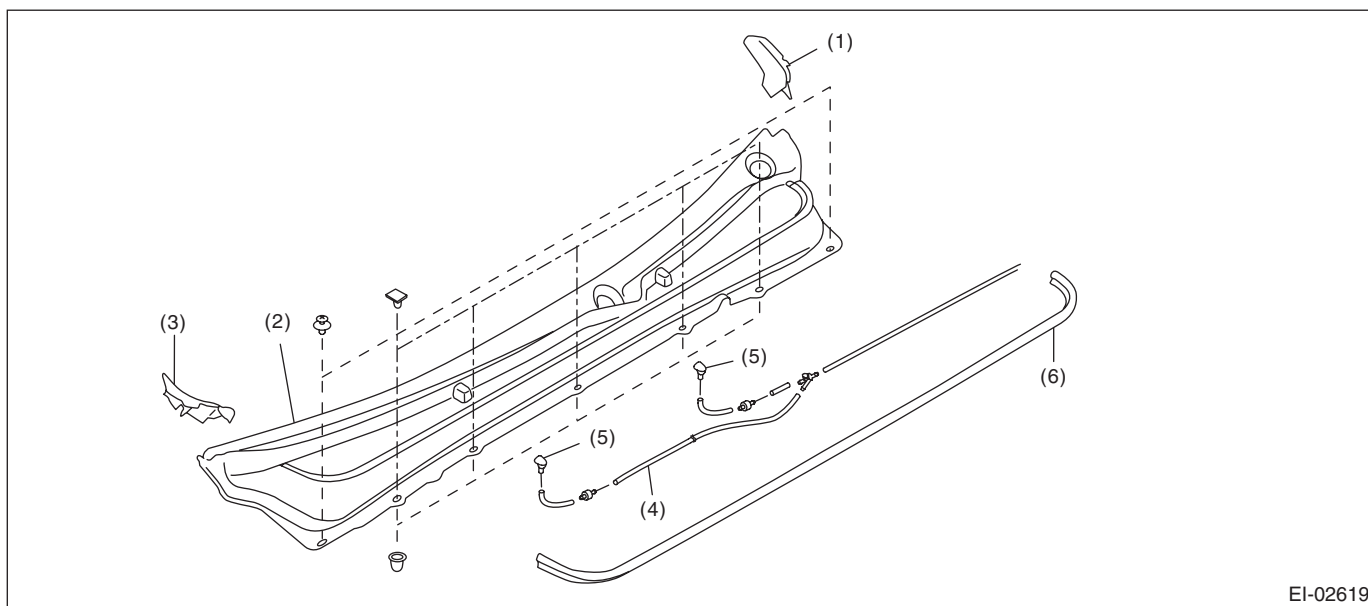


EI-02619

- | | | |
|------------------------|------------------------|---------------------|
| (1) Cowl panel side LH | (3) Cowl panel side RH | (5) Washer nozzle |
| (2) Cowl panel | (4) Washer hose | (6) Cowl panel seal |

9. SIDE SILL SPOILER

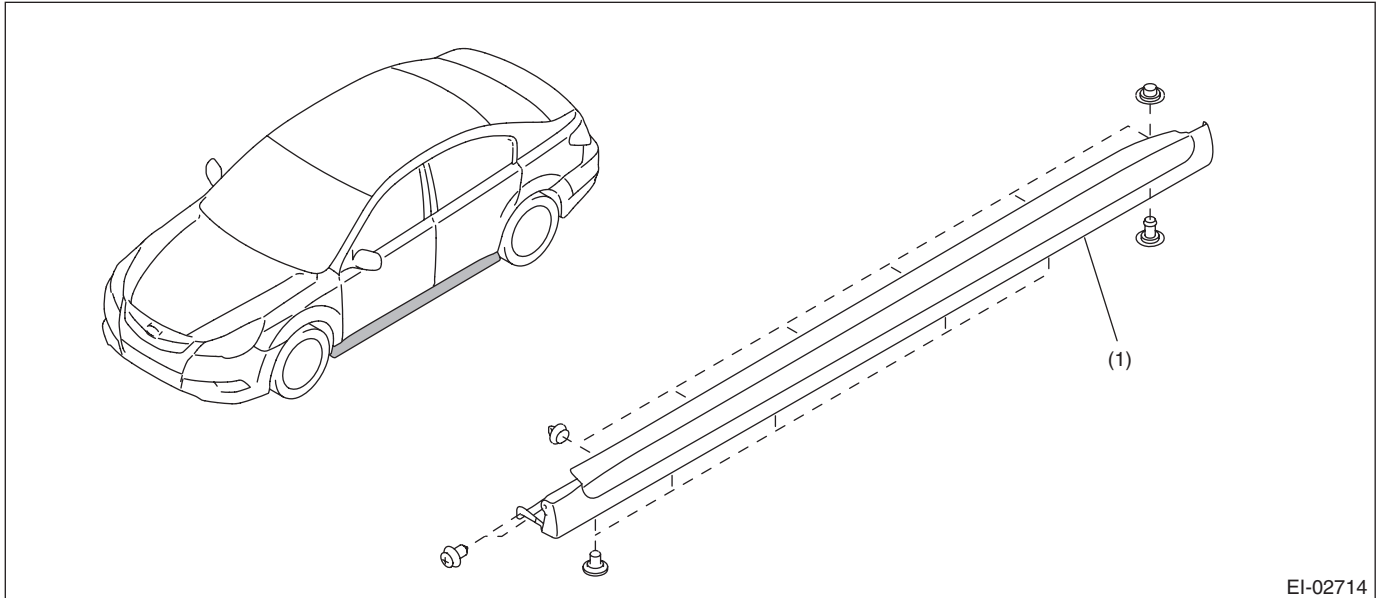

EI-02714

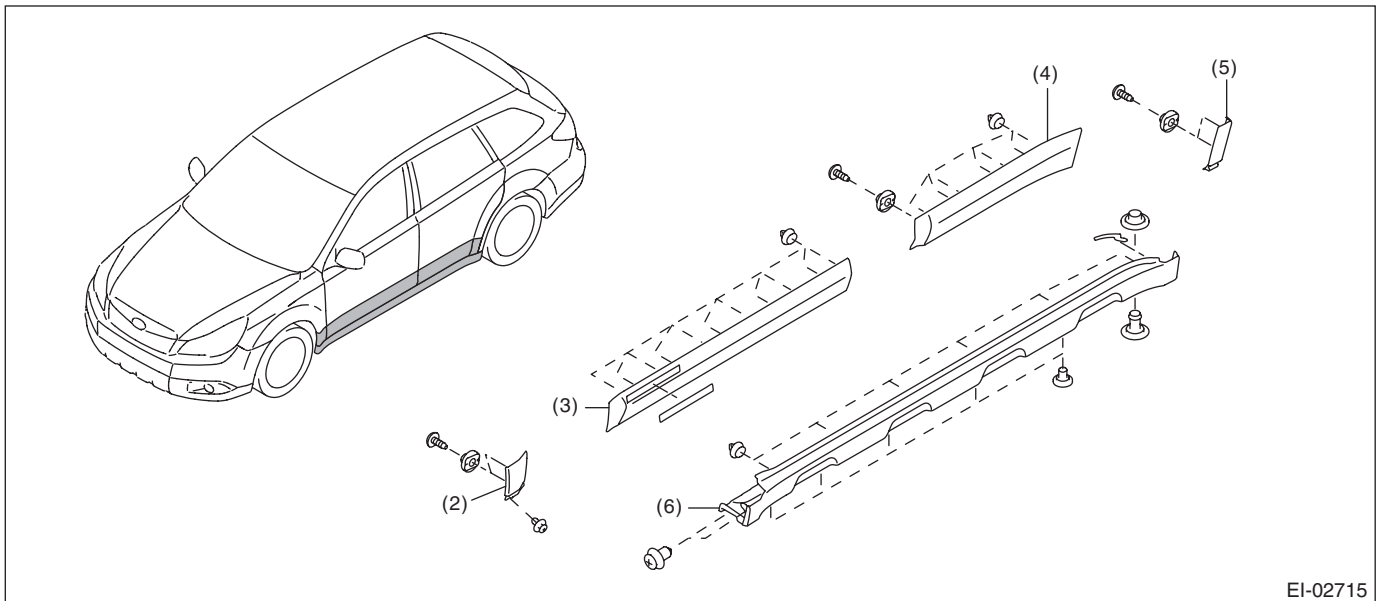


EI-02715

- | | | |
|--|--|--|
| (1) Side sill garnish ASSY (Sedan model) | (3) Garnish ASSY front door (OUT-BACK model) | (5) Garnish ASSY rear quarter (OUT-BACK model) |
| (2) Garnish ASSY front fender (OUT-BACK model) | (4) Garnish ASSY rear door (OUT-BACK model) | (6) Side sill garnish ASSY (OUT-BACK model) |

General Description


EXTERIOR/INTERIOR TRIM

10.ROOF MOLDING

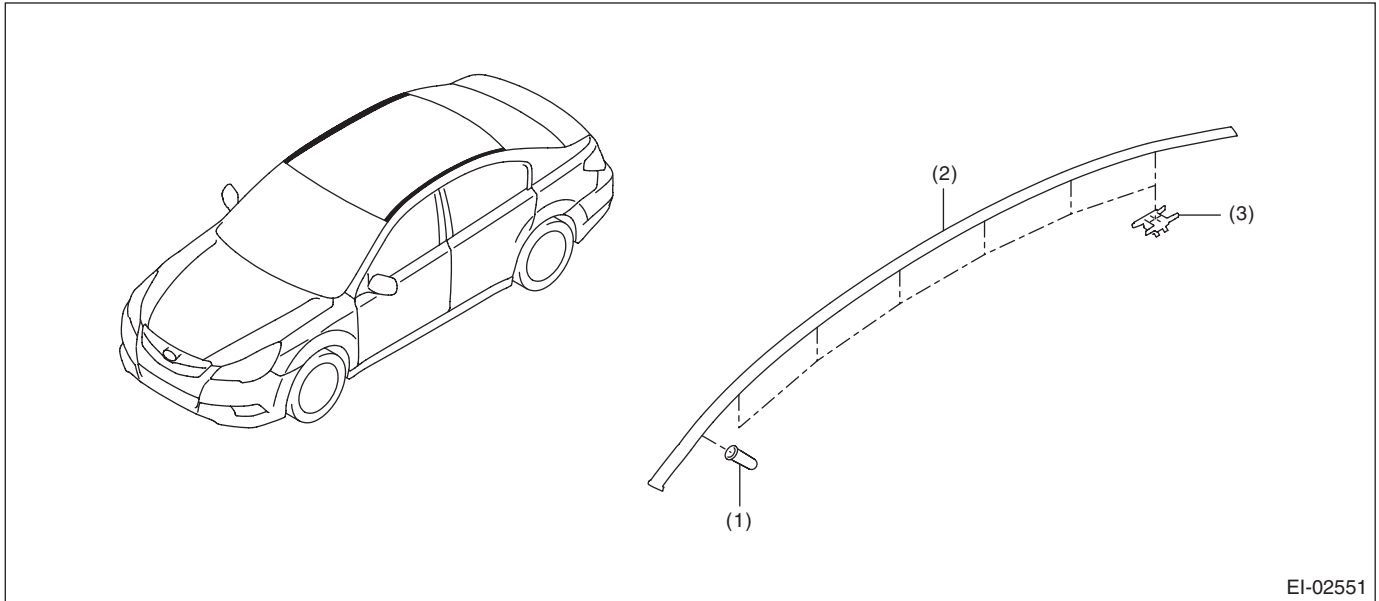

- (1) Rivet
- (2) Roof molding
- (3) Clip


11.ROOF RAIL

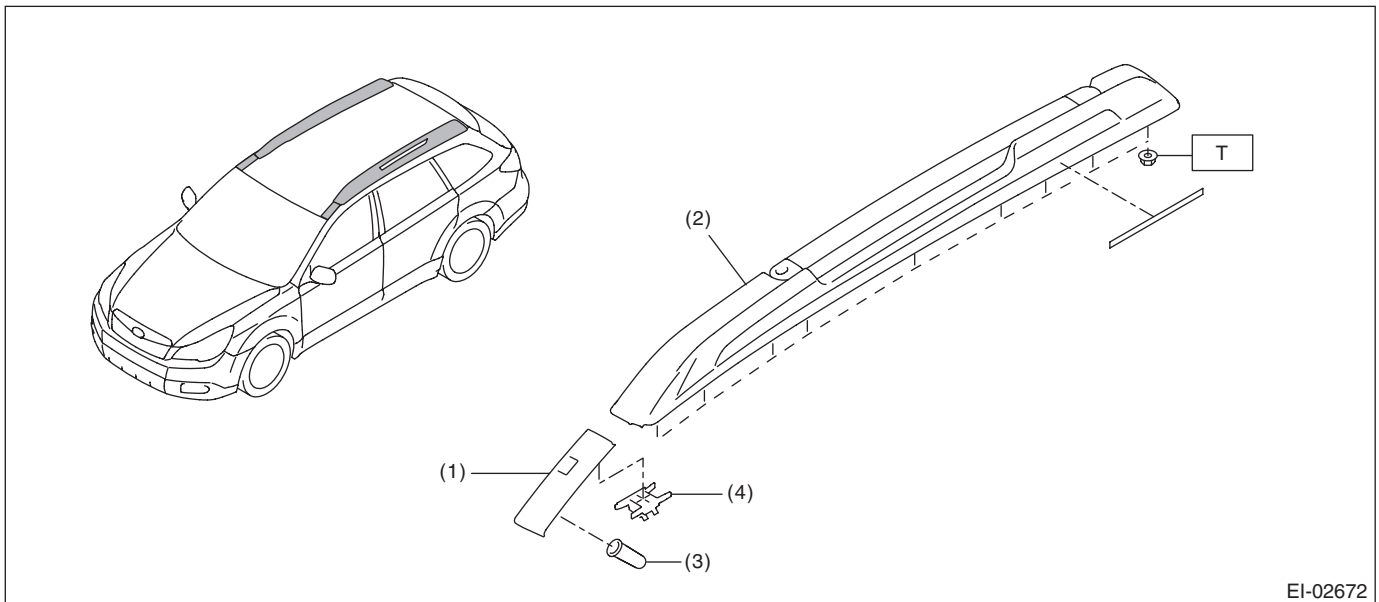

- (1) Roof molding
- (2) Roof rail ASSY
- (3) Rivet
- (4) Clip

Tightening torque:N·m (kgf·m, ft·lb)
T: 7.5 (0.76, 5.5)

12. TRUNK LID GARNISH

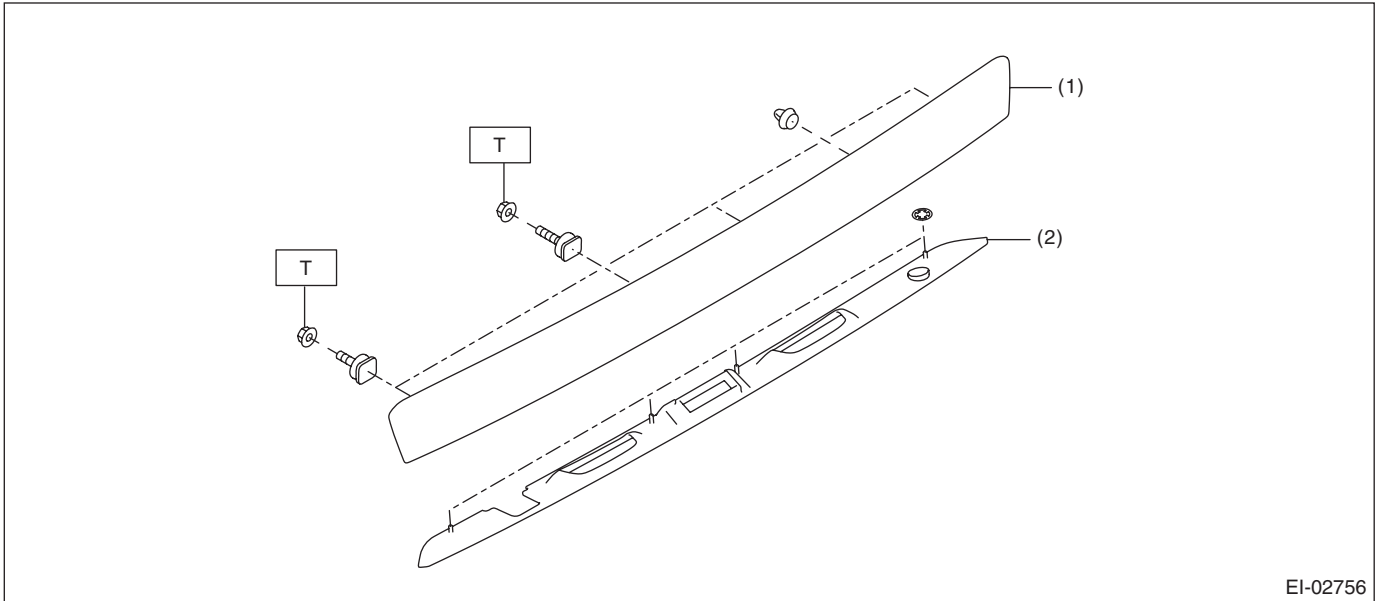


EI-02756

- (1) Trunk lid garnish
- (2) Undercover-trunk lid garnish

Tightening torque: N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.3)

13. REAR GATE GARNISH

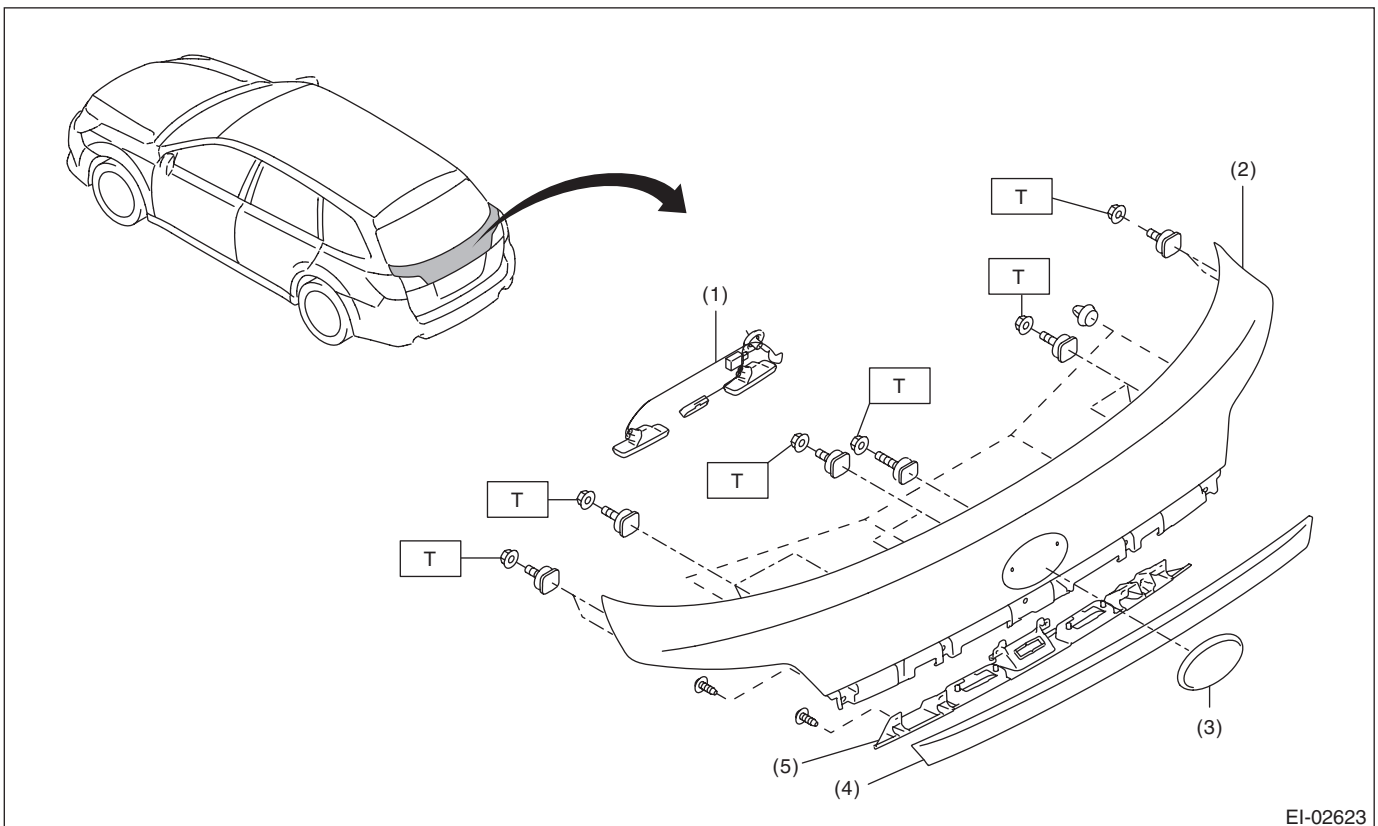

EI-02623

- (1) Rear gate opener ASSY harness
- (2) Rear gate garnish
- (3) Ornament
- (4) Molding
- (5) Garnish LWR


Tightening torque: N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.3)

General Description

EXTERIOR/INTERIOR TRIM


14.DOOR TRIM

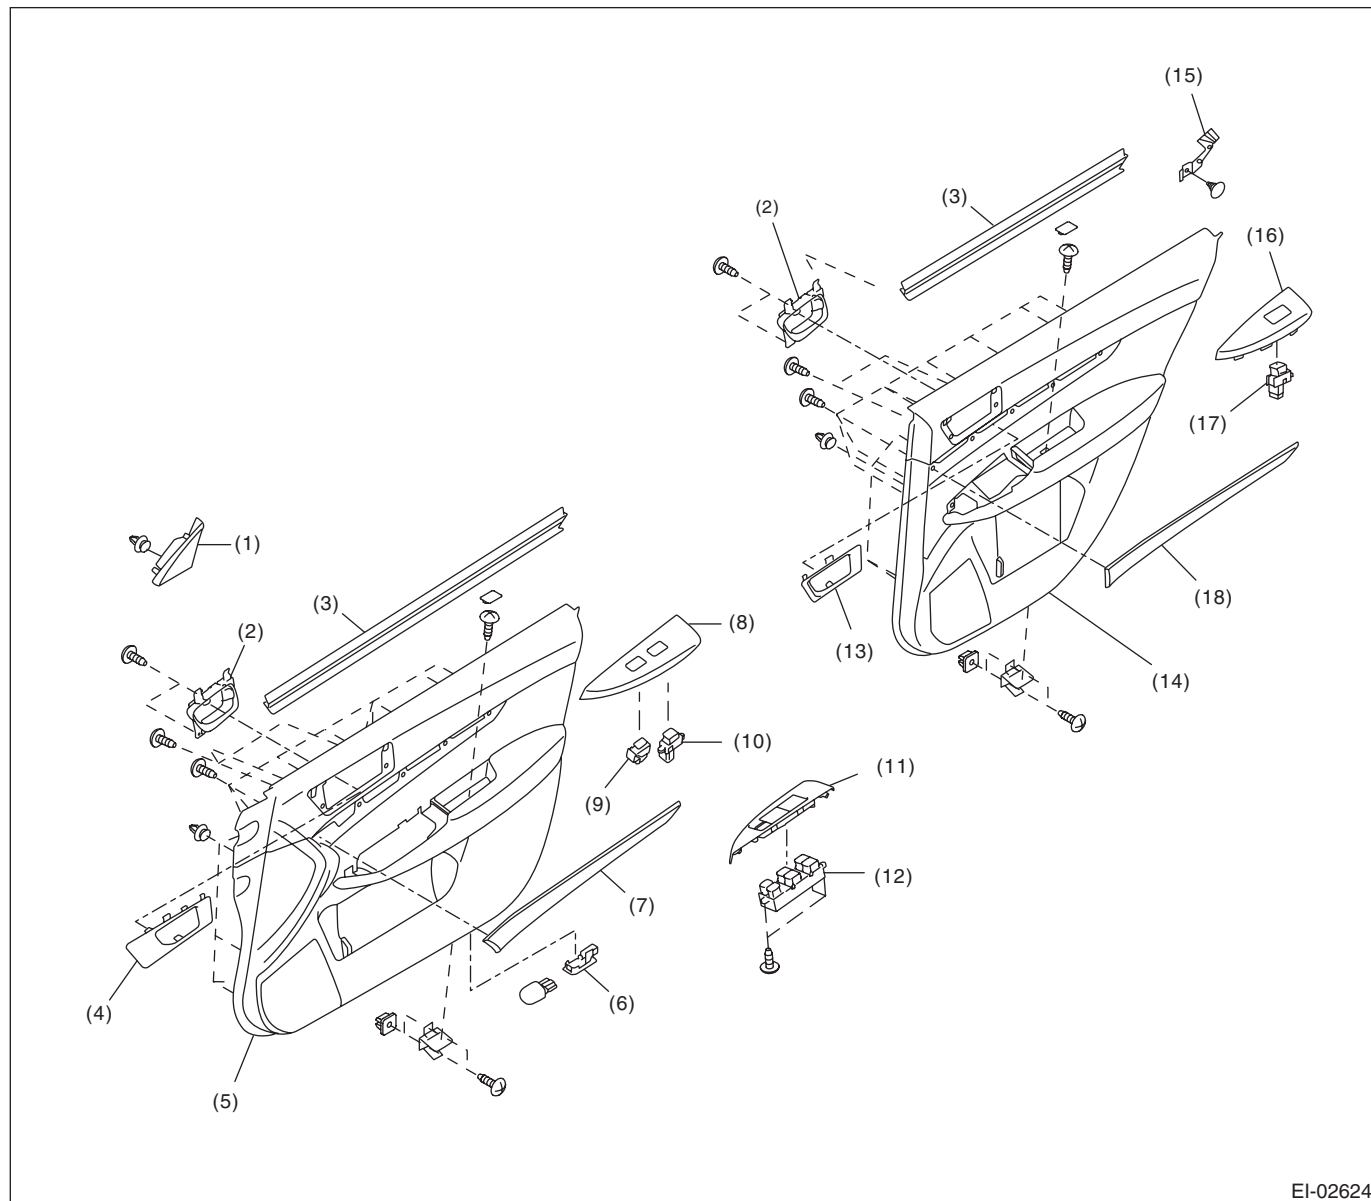

EI-02624

- | | | |
|-----------------------------------|---|--|
| (1) Gusset cover front | (7) Front door ornament panel | (13) Rear door inner remote cover |
| (2) Inner remote ASSY | (8) Power window switch panel front RH | (14) Rear door trim |
| (3) Weather strip inner | (9) Door lock switch ASSY | (15) Rear door cover upper |
| (4) Front door inner remote cover | (10) Power window sub-switch ASSY front | (16) Power window switch panel rear |
| (5) Front door trim ASSY | (11) Power window switch panel front LH | (17) Power window sub-switch ASSY rear |
| (6) Door step light | (12) Power window main switch ASSY | (18) Rear door ornament panel |

15.CONSOLE BOX

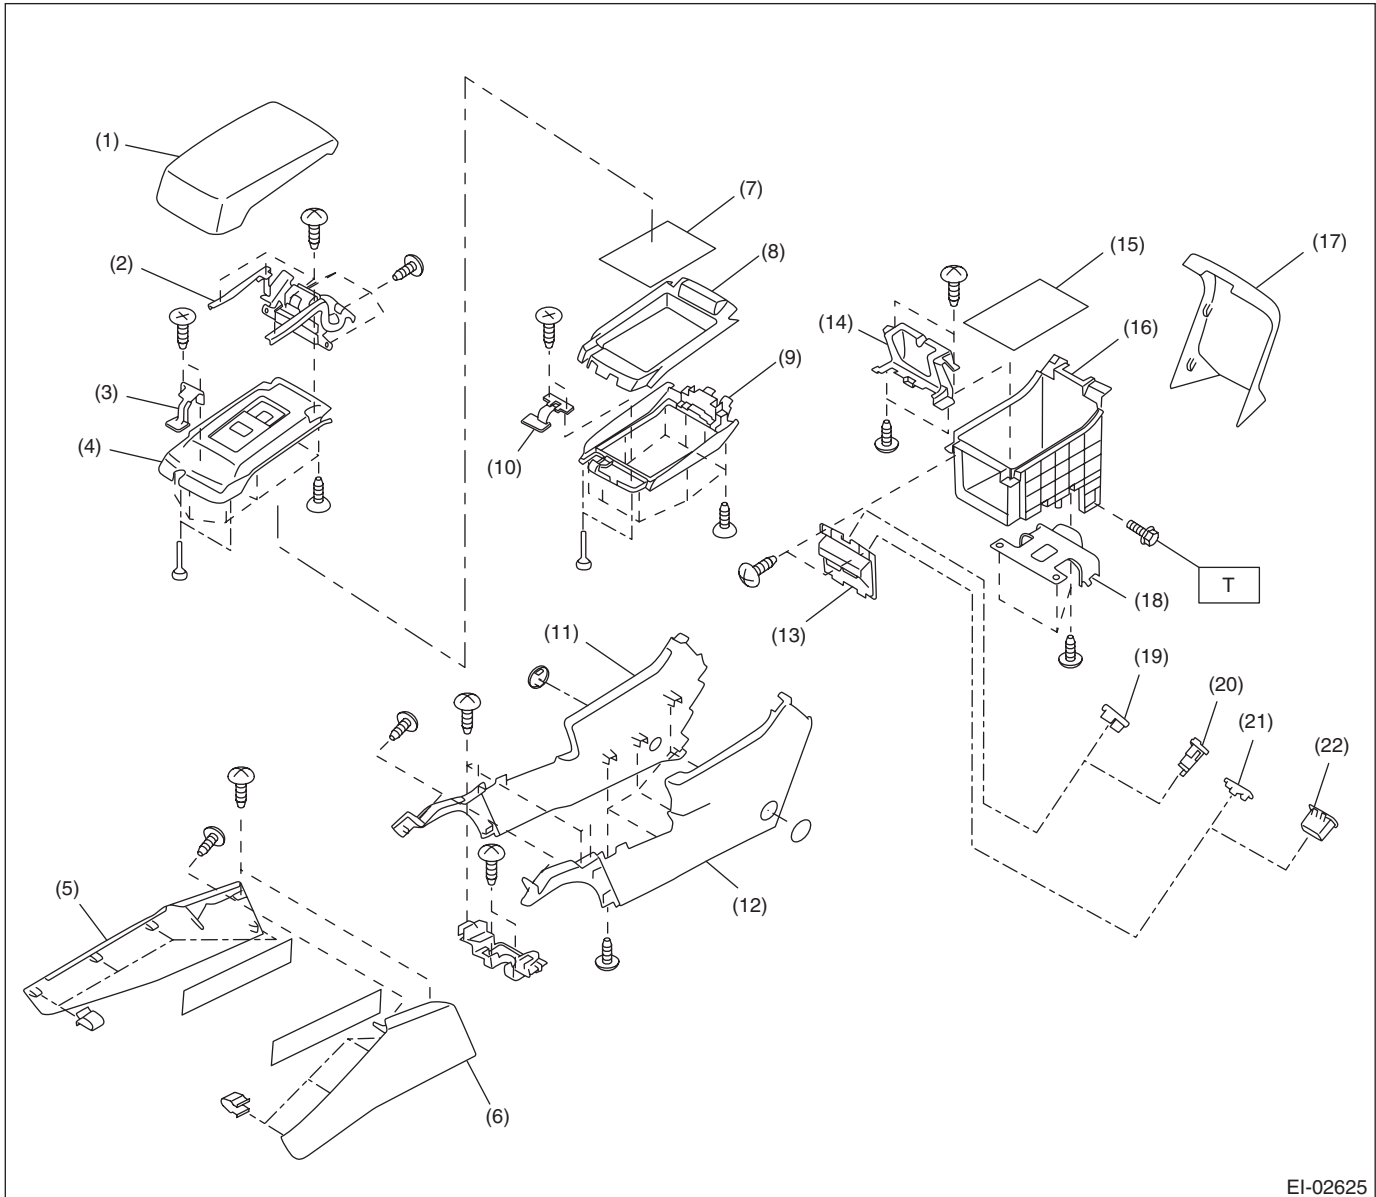

EI-02625


- | | | |
|--------------------------------------|-------------------------|-----------------------|
| (1) Console lid COMPL | (10) Lid lock LWR | (19) Cover A |
| (2) Console lid hinge COMPL | (11) Console box LWR RH | (20) Accessory socket |
| (3) Lid lock UPR | (12) Console box LWR LH | (21) Cover B |
| (4) Lid inner UPR | (13) Pocket case | (22) AUX unit |
| (5) Console front side cover ASSY RH | (14) Cover center | |
| (6) Console front side cover ASSY LH | (15) Mat (pocket) | |
| (7) Mat (lid LWR) | (16) Console pocket | |
| (8) Lid inner LWR | (17) Console rear cover | |
| (9) Lid outer LWR | (18) Console bracket | |

Tightening torque: N·m (kgf-m, ft-lb)

T: 6.5 (0.66, 4.8)

General Description


EXTERIOR/INTERIOR TRIM

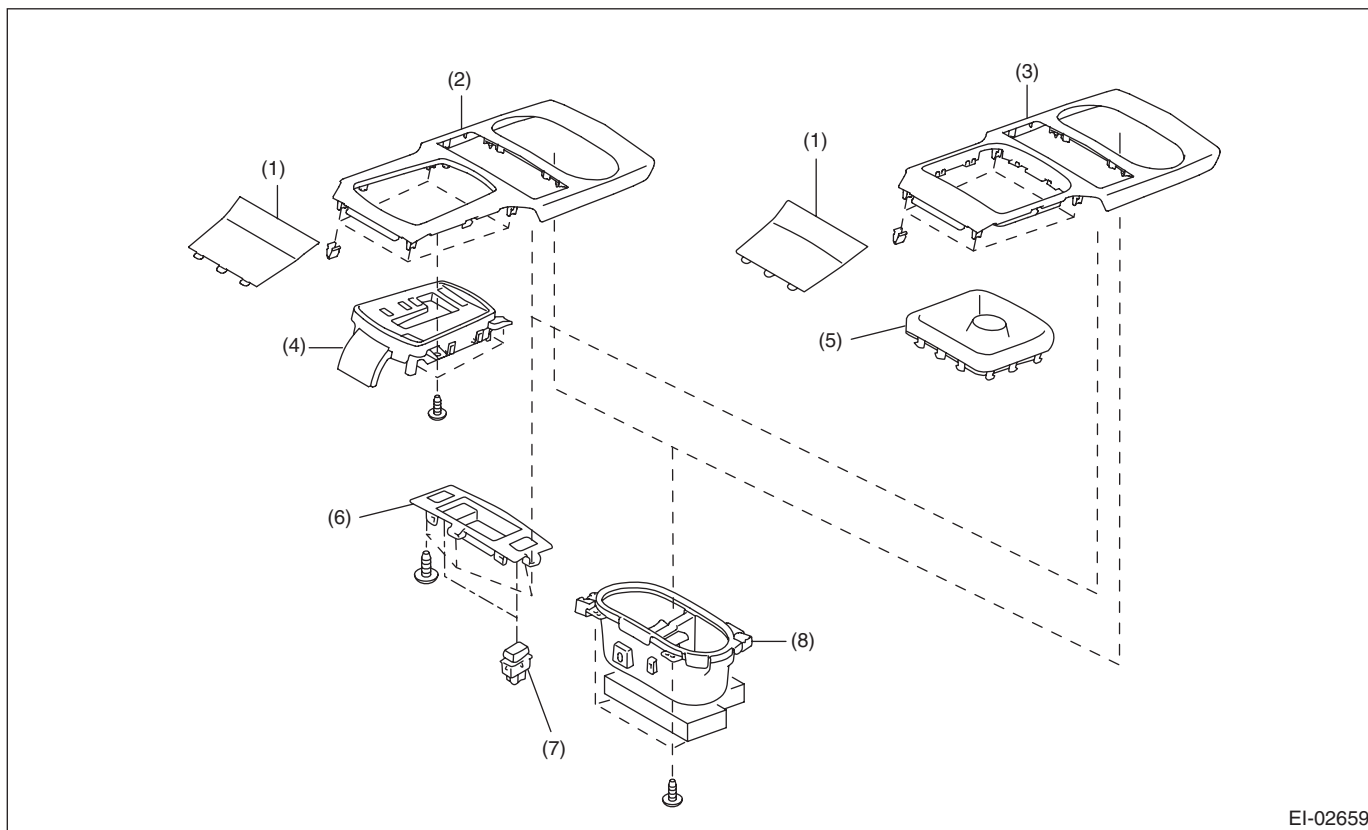

EI-02659

- | | | |
|-----------------------|---------------------------|------------------------|
| (1) Center pocket mat | (4) Indicator ASSY AT | (7) Seat heater switch |
| (2) Front cover AT | (5) Shift boot (MT model) | (8) Cup holder ASSY |
| (3) Front cover MT | (6) Switch case | |

16. INSTRUMENT PANEL

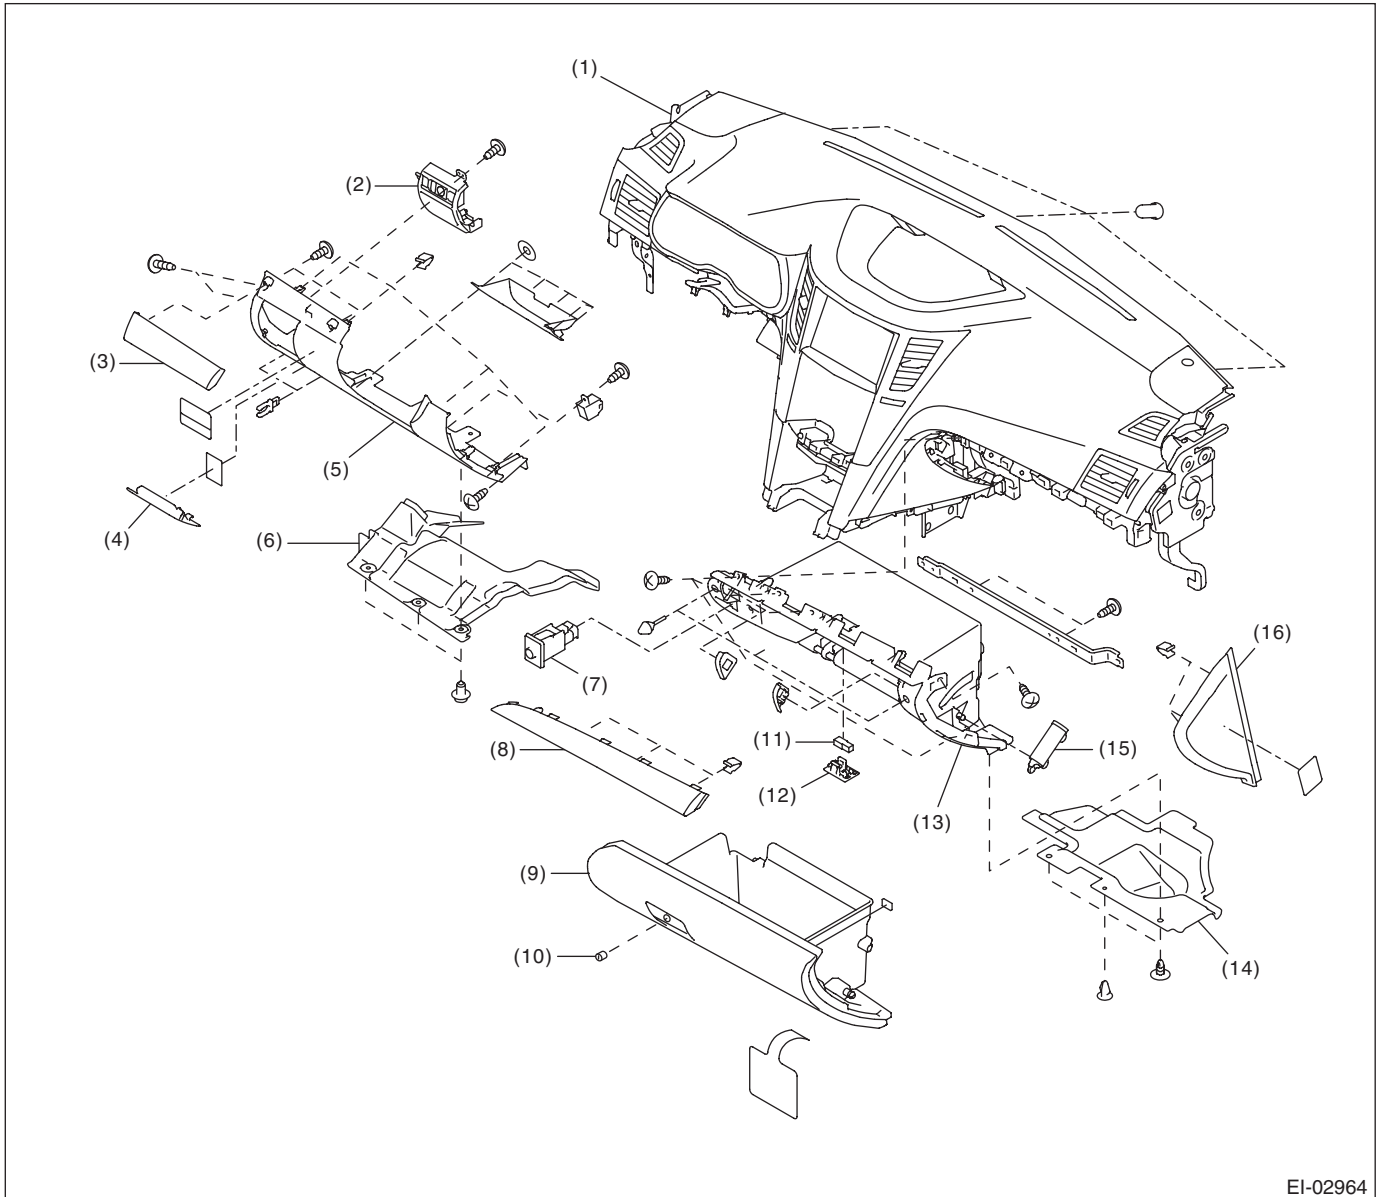


EI-02964

- | | | |
|--|--------------------------------|----------------------------------|
| (1) Instrument panel ASSY | (7) Trunk opener cancel button | (12) Illumination bracket |
| (2) Switch panel ASSY | (8) Ornament panel ASSY P | (13) Glove box back panel |
| (3) Ornament panel ASSY D OUT | (9) Glove box lid ASSY | (14) Glove box under cover |
| (4) Fuse lid | (10) Key cylinder-glove box | (15) Glove box damper |
| (5) Instrument panel lower cover | (11) Illumination LED ASSY | (16) Instrument panel side cover |
| (6) Instrument panel lower cover under | | |


General Description

EXTERIOR/INTERIOR TRIM

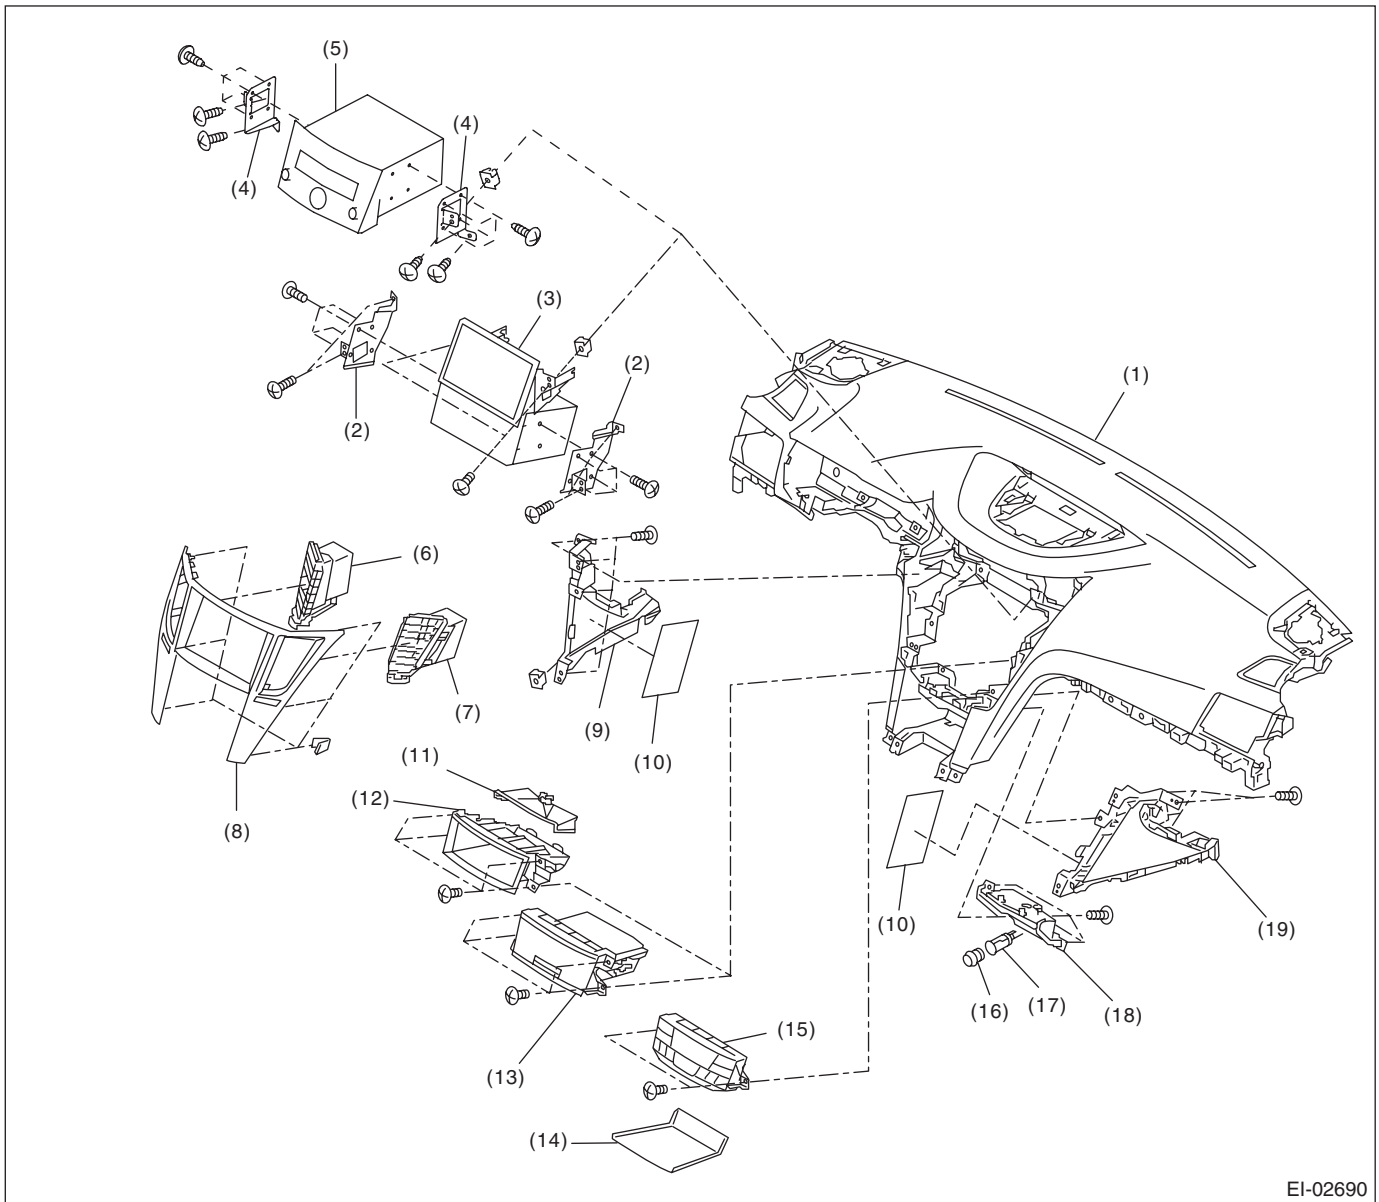

EI-02690

- | | | |
|---|--------------------------------|-------------------------------|
| (1) Instrument panel pad and frame ASSY | (8) Center panel ASSY | (15) Control panel ASSY |
| (2) Navigation bracket | (9) Center cover side RH | (16) Plug |
| (3) Navigation ASSY | (10) Insulator | (17) Accessory socket ASSY |
| (4) Audio bracket | (11) Pocket center light | (18) Center pocket back panel |
| (5) Audio ASSY | (12) Pocket ASSY (without lid) | (19) Center cover side LH |
| (6) Center grille ASSY LH | (13) Pocket ASSY (with lid) | |
| (7) Center grille ASSY RH | (14) Center pocket mat | |

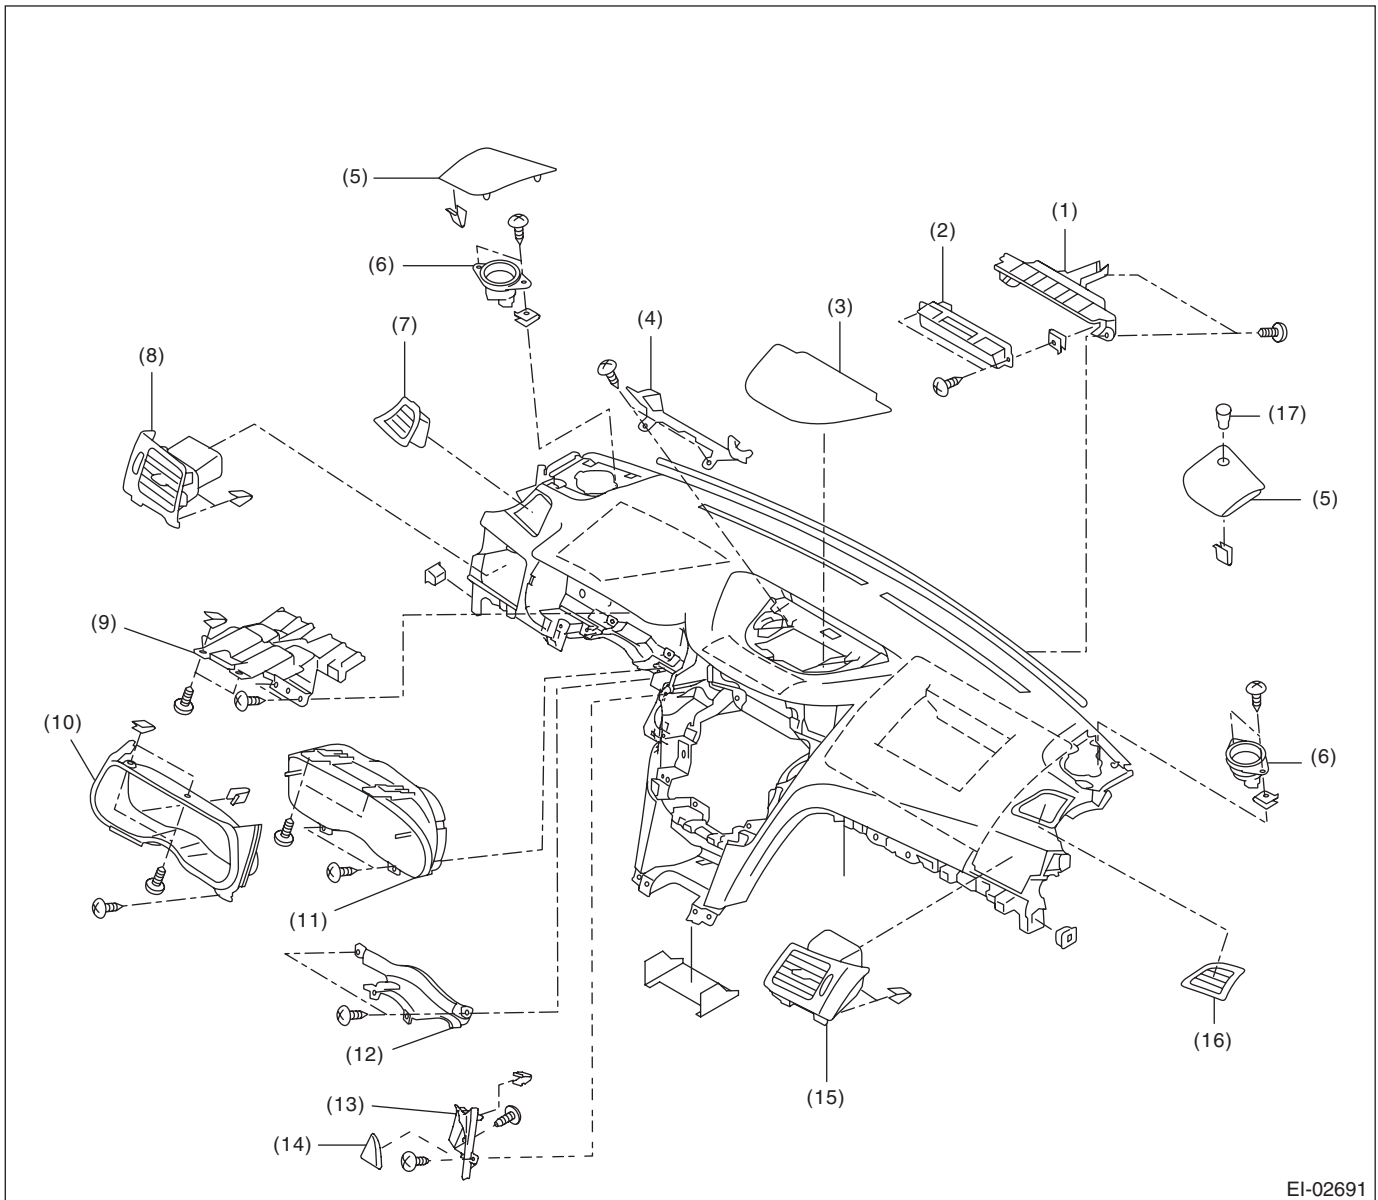


EI-02691

- | | | |
|-----------------------------|-------------------------------|--------------------------------|
| (1) Multi display panel UPR | (7) Defroster side grille RH | (13) Starter switch cover |
| (2) Multi display ASSY | (8) Side vent grille ASSY RH | (14) Ornament panel ASSY D INN |
| (3) Center speaker cover | (9) Meter reinforcement panel | (15) Side vent grille ASSY LH |
| (4) Multi display panel LWR | (10) Meter visor ASSY | (16) Defroster side grille LH |
| (5) Side speaker cover | (11) Combination meter ASSY | (17) Sunload sensor |
| (6) Front side speaker ASSY | (12) Steering upper cover | |

General Description

EXTERIOR/INTERIOR TRIM

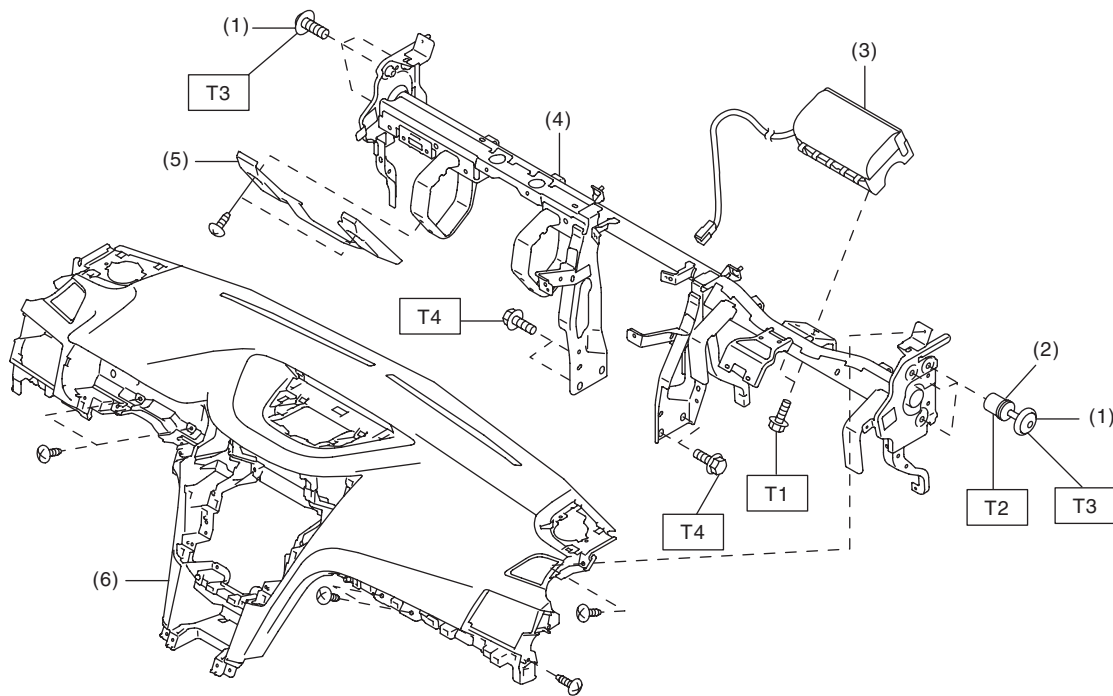

EI-02692

- | | |
|------------------------------------|---|
| (1) TORX® bolt | (4) Steering support beam ASSY |
| (2) Adjuster bolt | (5) Knee guard panel COMPL |
| (3) Passenger's airbag module ASSY | (6) Instrument panel pad and frame ASSY |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)


T2: 3 (0.31, 2.2)

T3: 18 (1.84, 13.3)

T4: 25 (2.55, 18.4)

General Description

EXTERIOR/INTERIOR TRIM

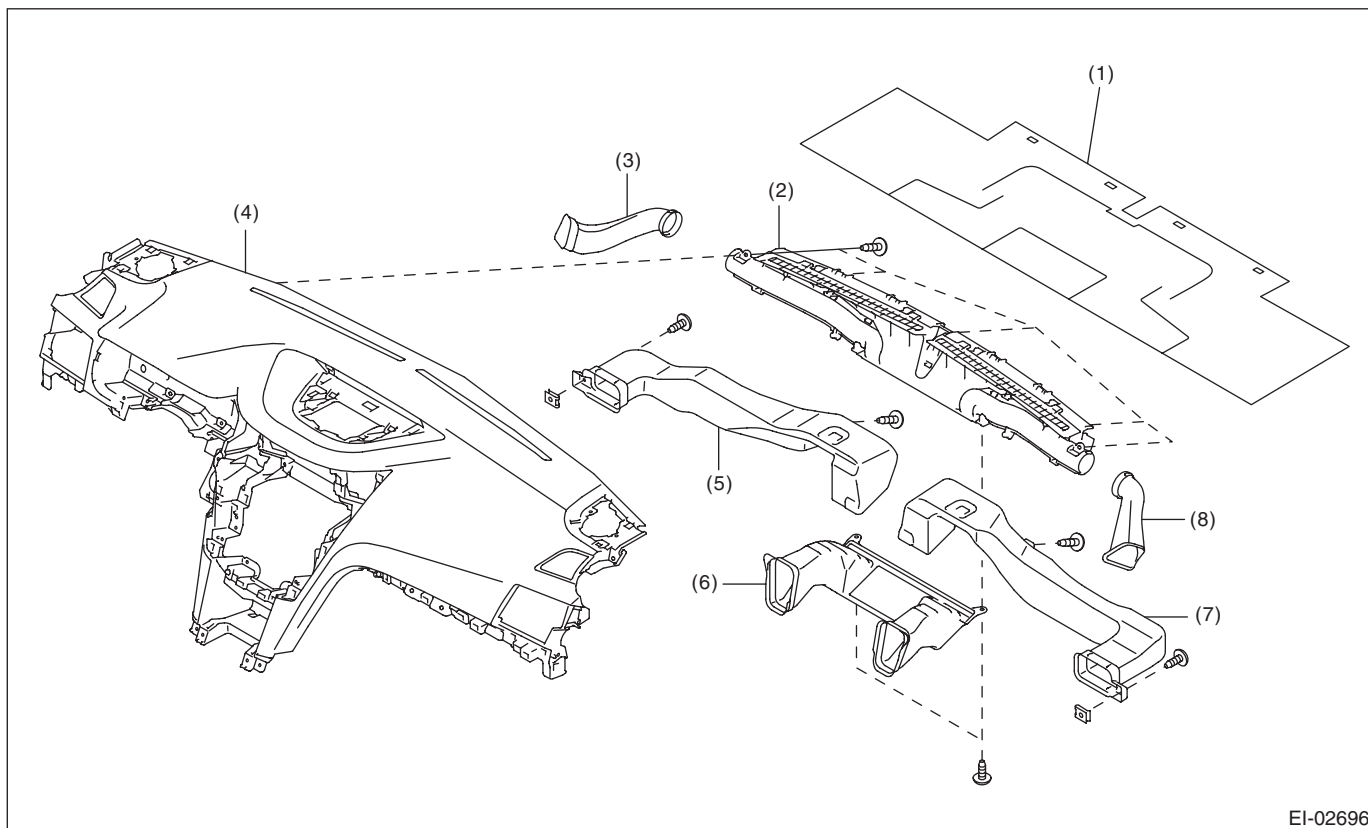

EI-02696


- | | | |
|---------------------------------|---|----------------------------|
| (1) Insulator | (4) Instrument panel pad and frame ASSY | (7) Side vent duct RH |
| (2) Front defroster nozzle ASSY | (5) Side vent duct LH | (8) Side defroster duct LH |
| (3) Side defroster duct RH | (6) Center vent duct | |

General Description

EXTERIOR/INTERIOR TRIM


17.INNER TRIM

- Sedan model

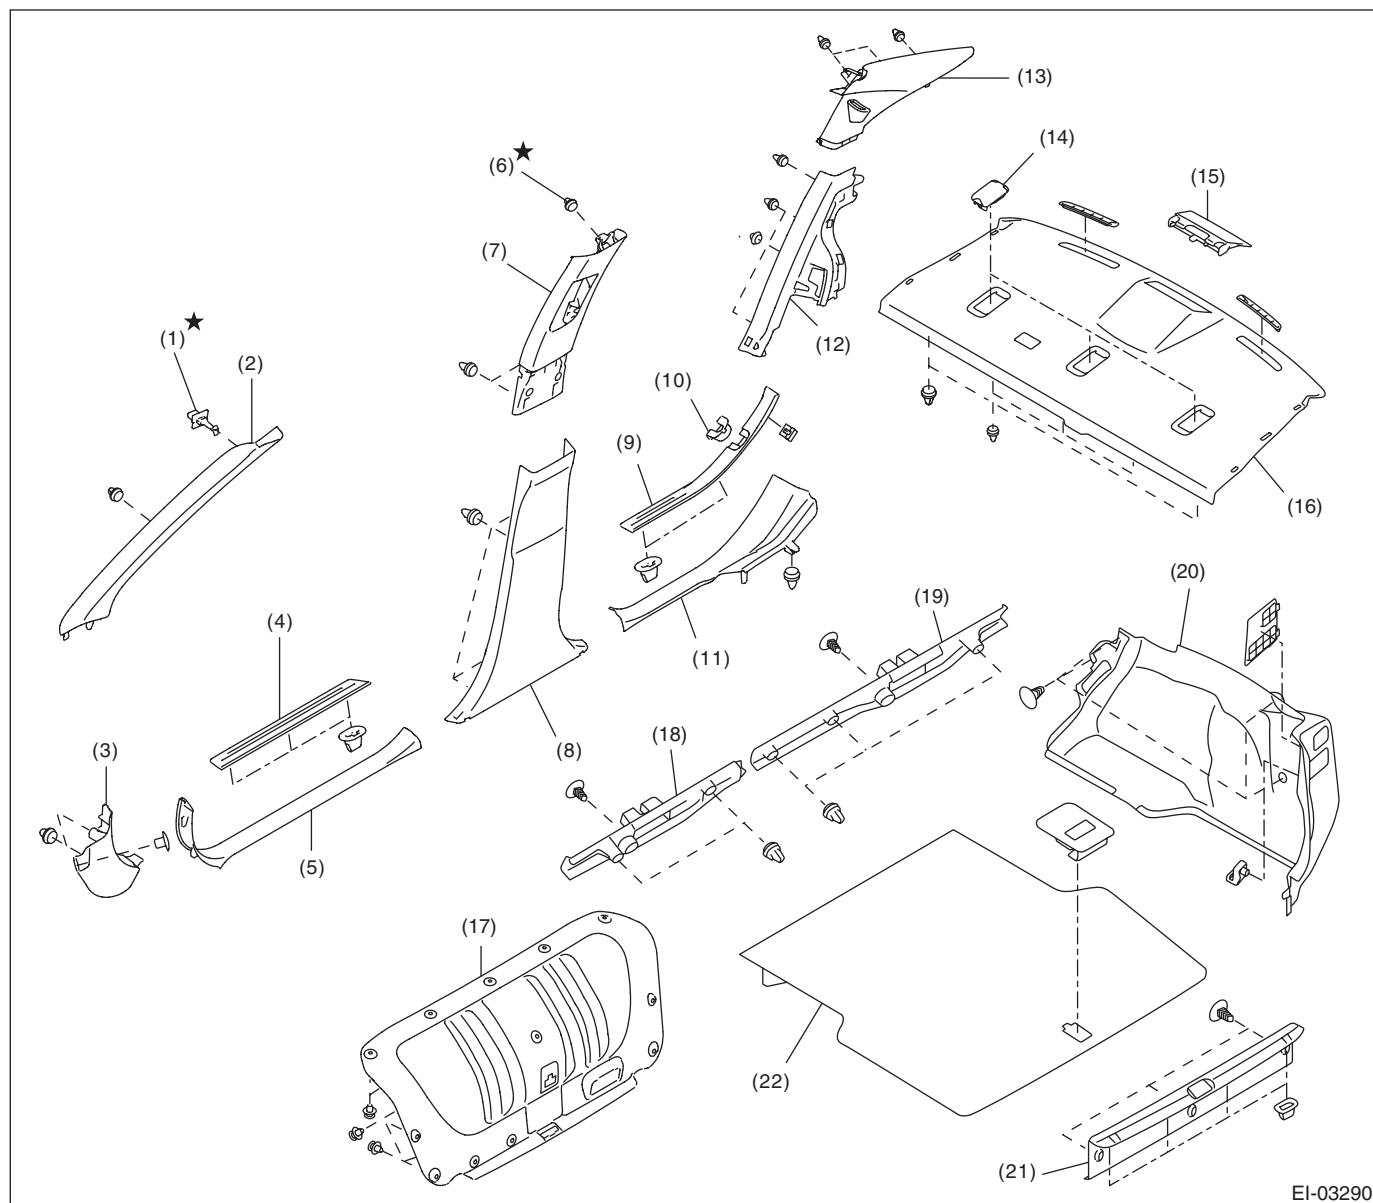

- | | | |
|---------------------------------|-----------------------------------|---------------------------------------|
| (1) Tether clip | (9) Side sill cover - rear OUT | (17) Trunk lid trim |
| (2) Front pillar trim | (10) Catcher cover | (18) Trunk trim panel ASSY - front LH |
| (3) Side sill cover front | (11) Side sill cover - rear INN | (19) Trunk trim panel ASSY - front RH |
| (4) Side sill cover - front OUT | (12) Rear quarter trim LWR | (20) Trunk trim panel ASSY - side |
| (5) Side sill cover - front INN | (13) Rear quarter trim UPR | (21) Trunk trim panel ASSY - rear |
| (6) Clip | (14) Child anchor cap | (22) Trunk mat |
| (7) Center pillar trim UPR | (15) High-mounted stop light ASSY | |
| (8) Center pillar trim LWR | (16) Rear shelf panel | |

• OUTBACK model

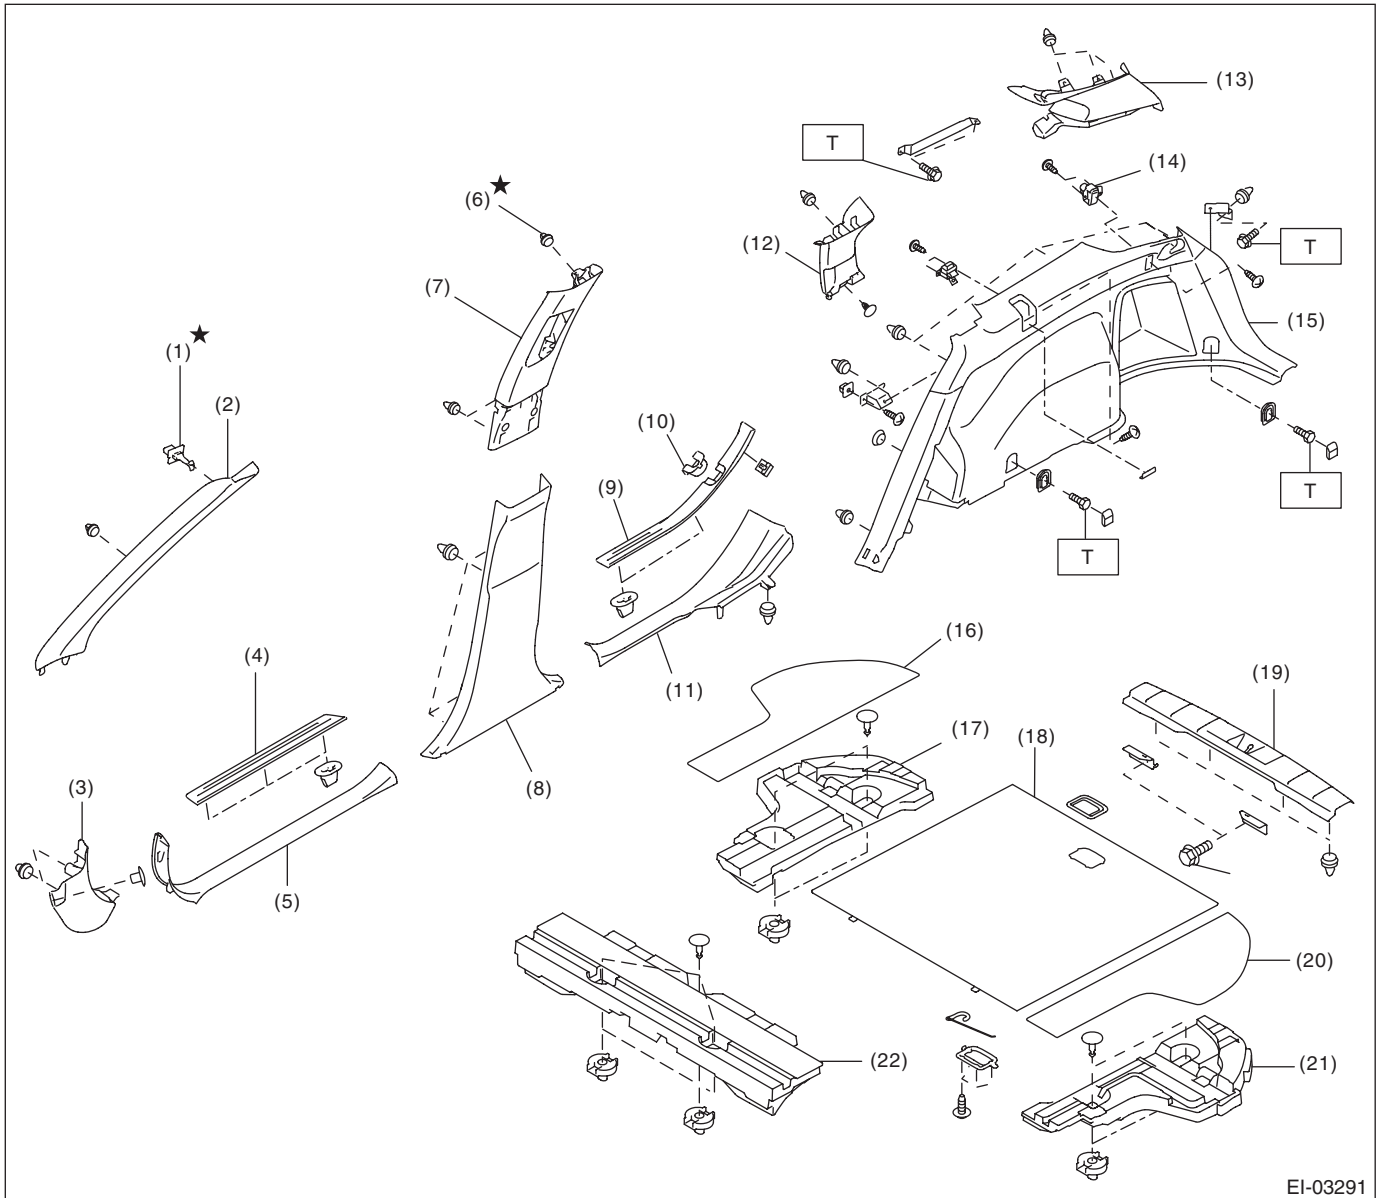

EI-03291

- | | | |
|---------------------------------|------------------------------------|------------------------------------|
| (1) Tether clip | (10) Catcher cover | (19) Rear floor edge cover |
| (2) Front pillar trim | (11) Side sill cover - rear INN | (20) Rear floor mat LH |
| (3) Side sill cover front | (12) Rear quarter trim UPR - front | (21) Rear floor spacer LH |
| (4) Side sill cover - front OUT | (13) Rear quarter trim UPR - rear | (22) Rear floor spacer CTR - front |
| (5) Side sill cover - front INN | (14) Hook | |
| (6) Clip | (15) Rear quarter trim LWR | |
| (7) Center pillar trim UPR | (16) Rear floor mat RH | |
| (8) Center pillar trim LWR | (17) Rear floor spacer RH | |
| (9) Side sill cover - rear OUT | (18) Rear floor mat CTR | |


Tightening torque: N-m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM


18.REAR GATE TRIM

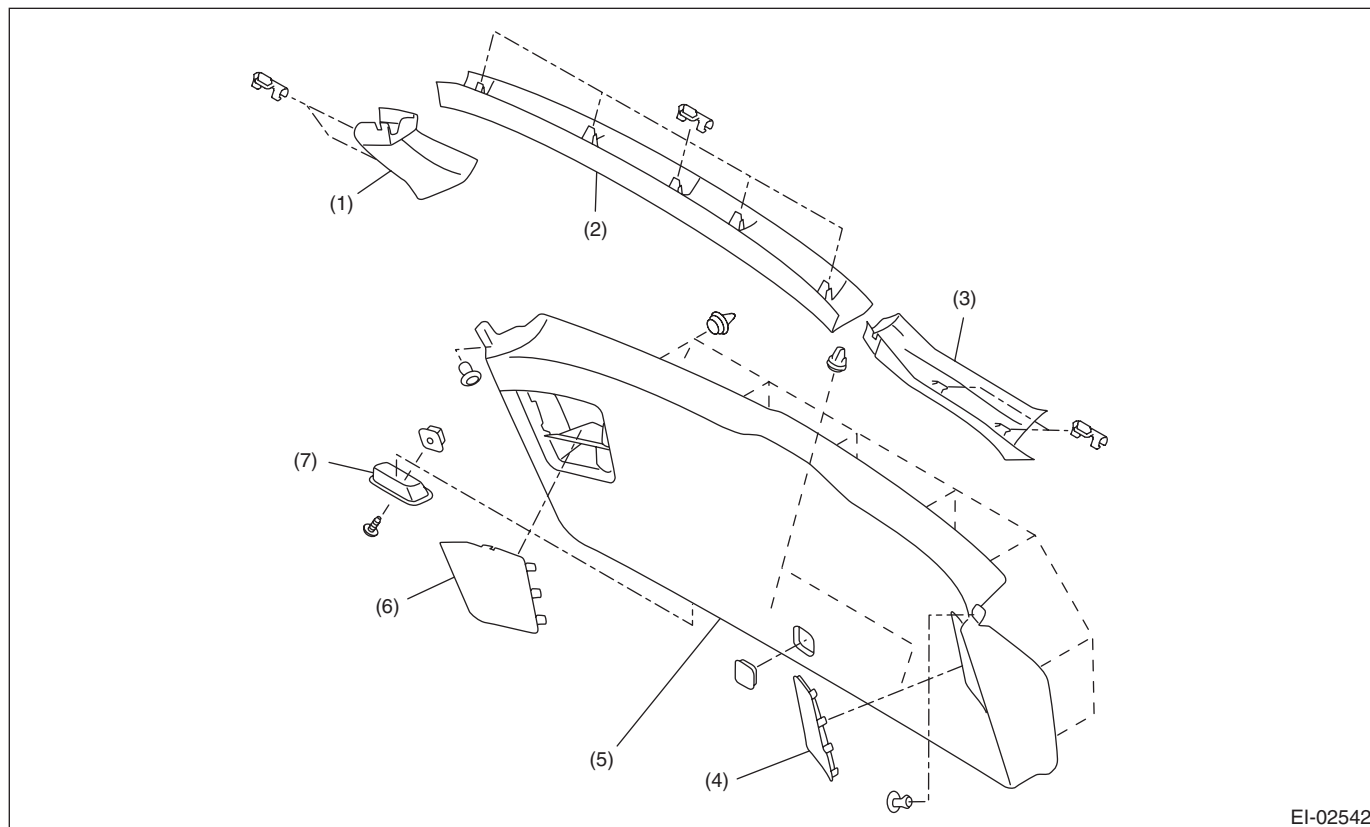


EI-02542

- | | | |
|------------------------------|----------------------------|----------------------|
| (1) Rear gate pillar trim RH | (4) Rear gate lower cap LH | (7) Rear gate handle |
| (2) Rear gate upper trim | (5) Rear gate lower trim | |
| (3) Rear gate pillar trim LH | (6) Rear gate lower cap RH | |

19.ROOF TRIM

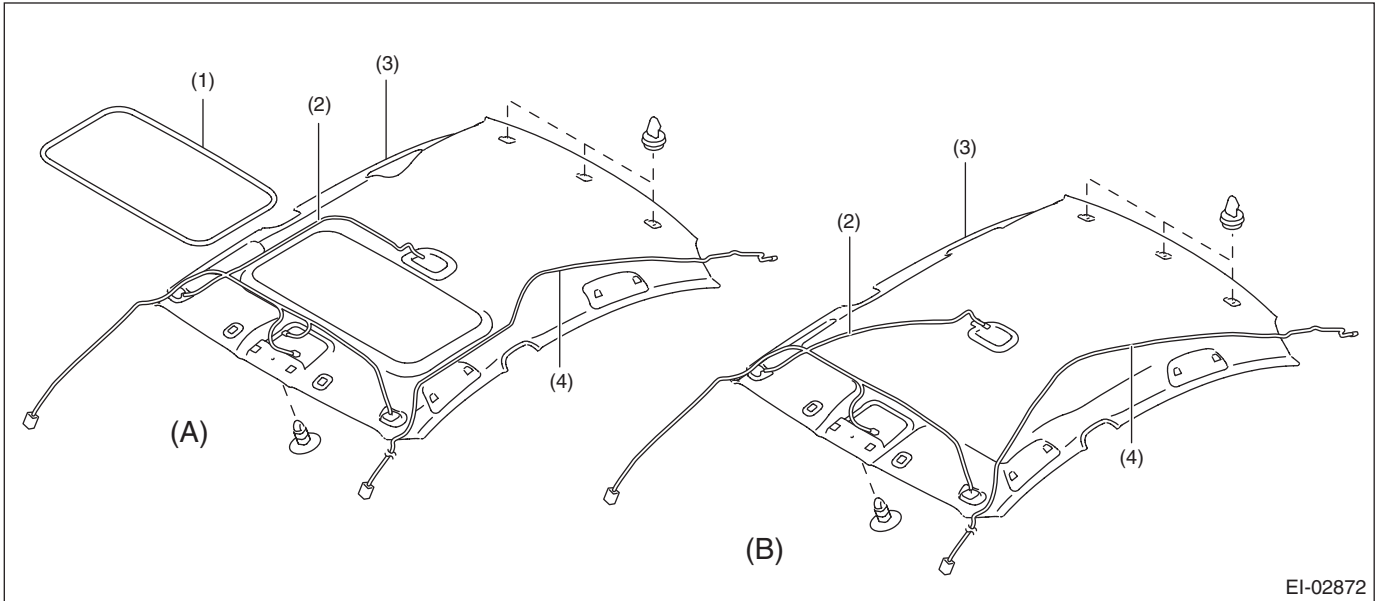

EI-02872

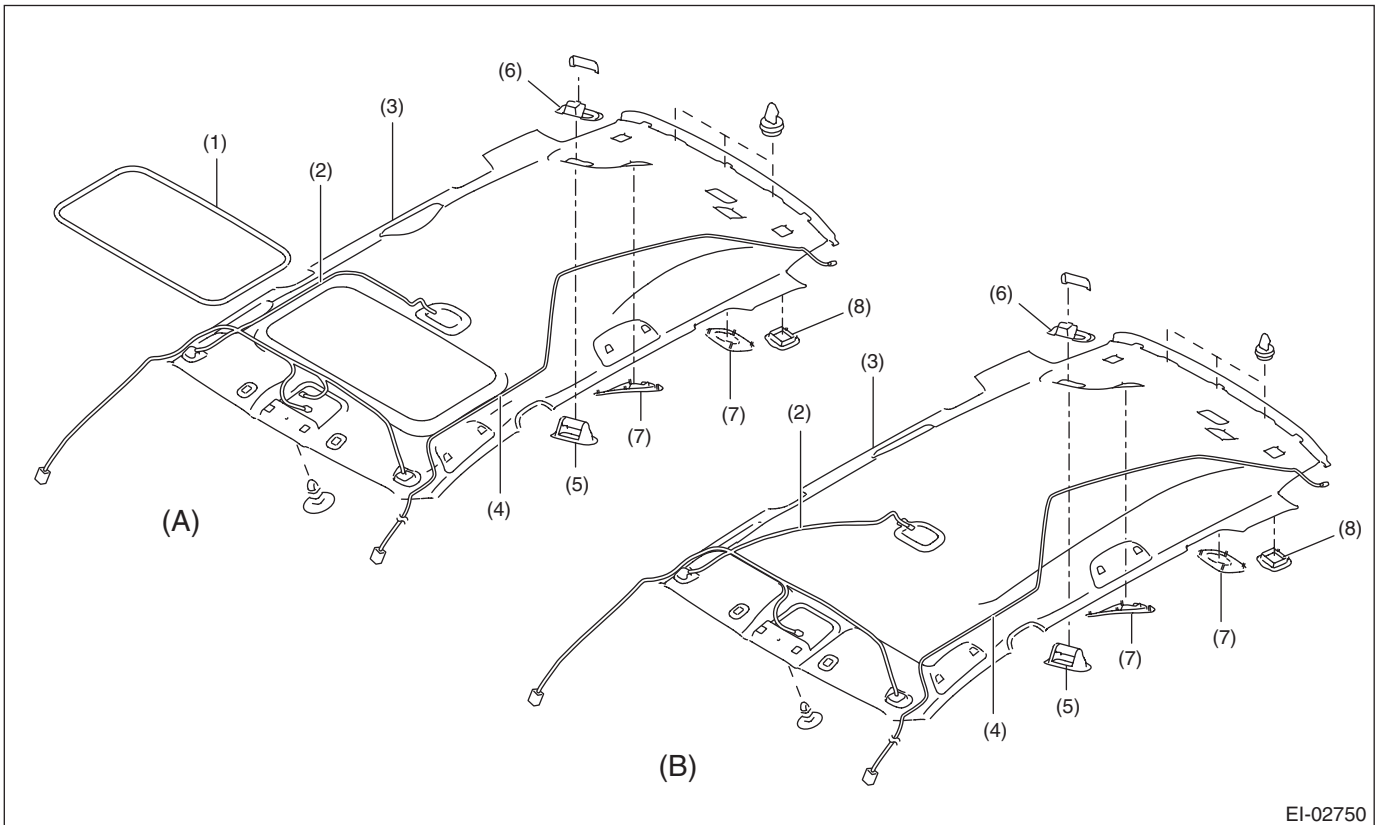

EI-02750

(A) Model with sunroof

(B) Normal roof model

(1) Sun roof garnish

(4) Feeder cord ASSY

(7) Speaker cover

(2) Roof cord ASSY

(5) Seat belt holder cover

(8) Child anchor cover


(3) Roof trim

(6) Seat belt holder base

General Description

EXTERIOR/INTERIOR TRIM

20.ROOM INNER PARTS

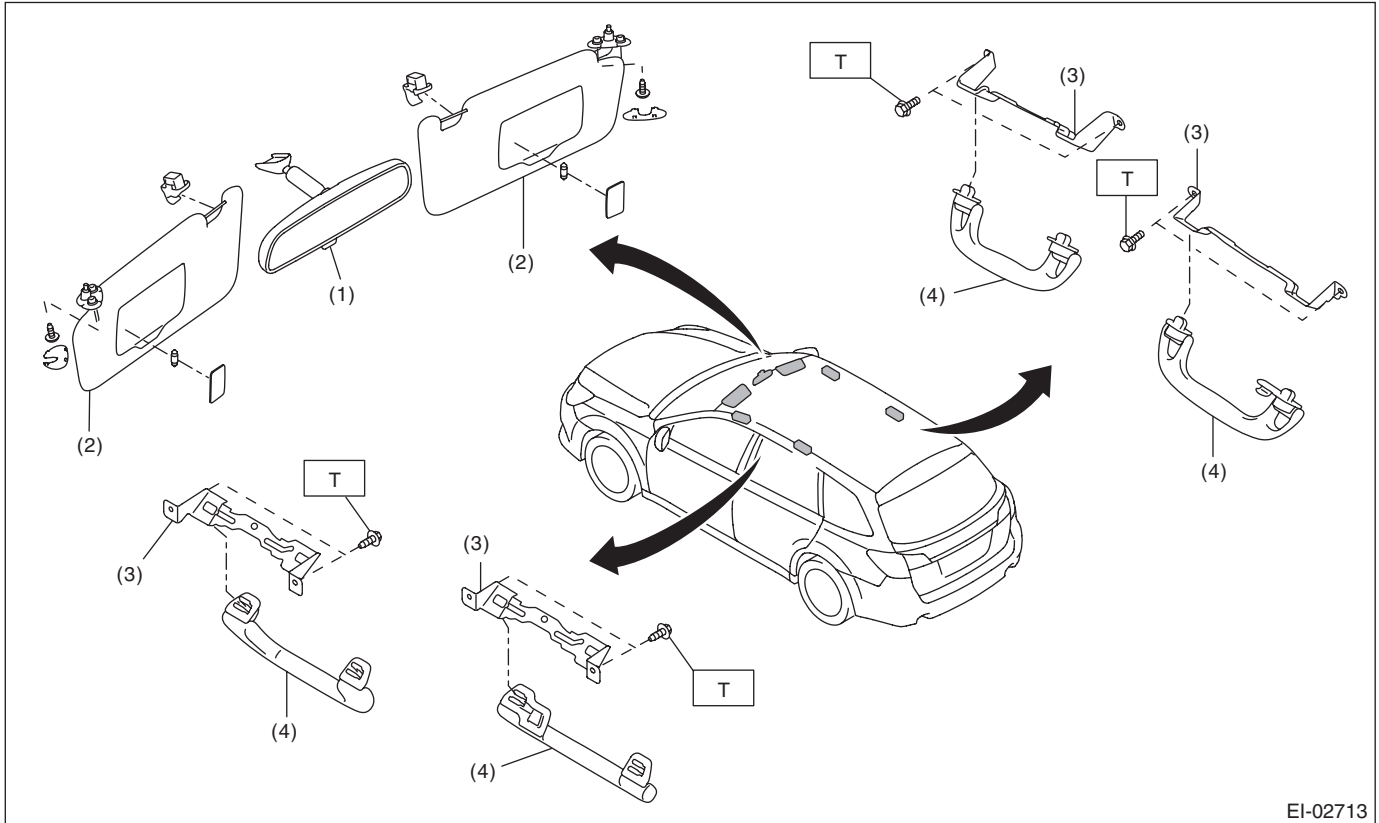


EI-02713

- (1) Room mirror
- (2) Sun visor

- (3) Assist grip bracket
- (4) Assist grip

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

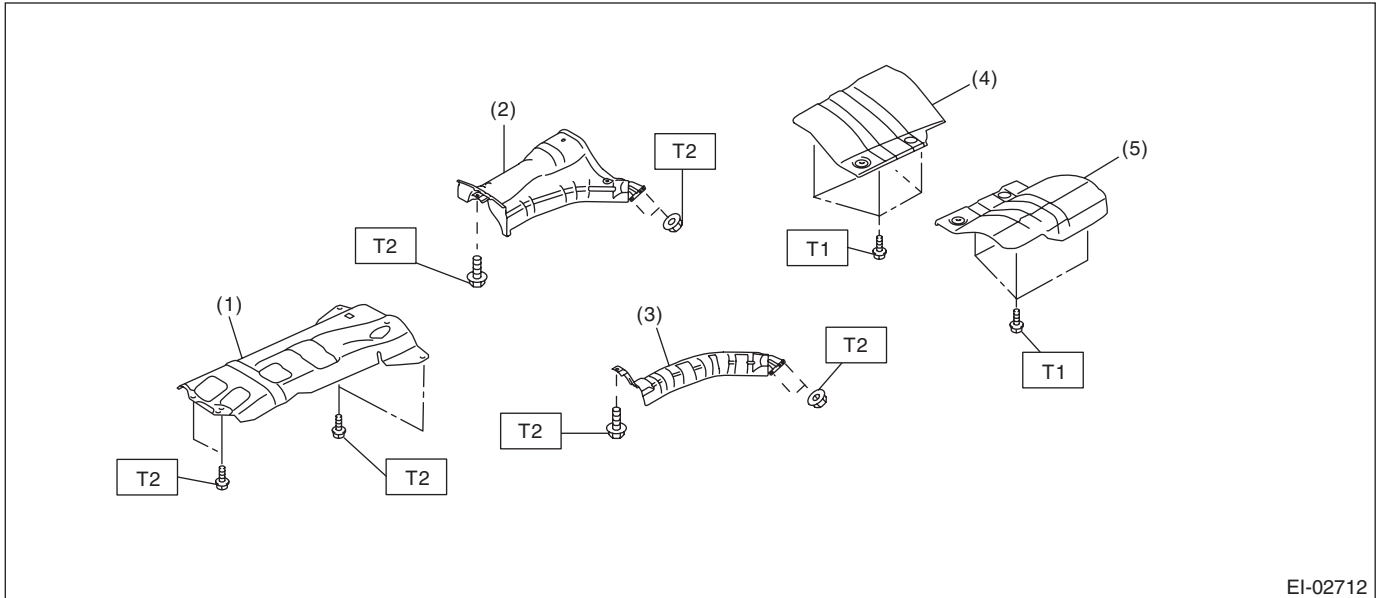21.HEAT SHIELD COVER

EI-02712

- | | |
|---|---|
| (1) Front heat shield cover | (4) Rear heat shield cover RH (only DOHC model) |
| (2) Center heat shield cover (DOHC model) | (5) Rear heat shield cover LH |
| (3) Center heat shield cover (SOHC model) | |

Tightening torque:N·m (kgf-m, ft-lb)***T1: 10 (1.02, 7.4)******T2: 18 (1.84, 13.3)*****B: PREPARATION TOOL**

TOOL NAME	REMARKS
Clip remover	Used for removing trim. • KTC AP201-10A • KTC AP201-N • KTC AP203-10A • KTC AP20L-10B or equivalent
Clip clamp pliers	Used for removal of various clips and clamps. • KTC CCP-190 or equivalent