


14. Door Trim

A: REMOVAL

1. FRONT DOOR


- 1) Disconnect the ground cable from battery.
- 2) Remove the gusset cover.
 - (1) Attach the protective tape (a) to the door trim.
 - (2) Release the clips and claws, then detach the gusset cover.

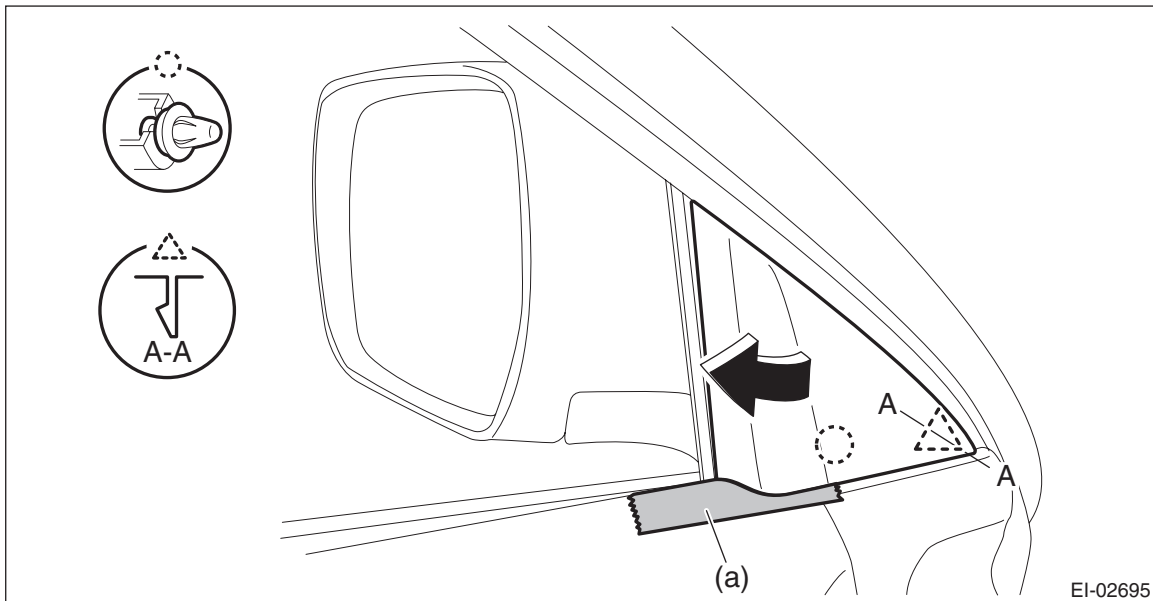

- 3) Remove the front door trim assembly.
 - (1) Open the cover and remove the screw.
 - (2) Remove the clips in the order of (A) to (J) and remove the front door trim assembly from the door panel.

CAUTION:


When removing the door trim, be sure to remove the clips in the correct order. Forcibly removing clips may damage the door panel assembly.

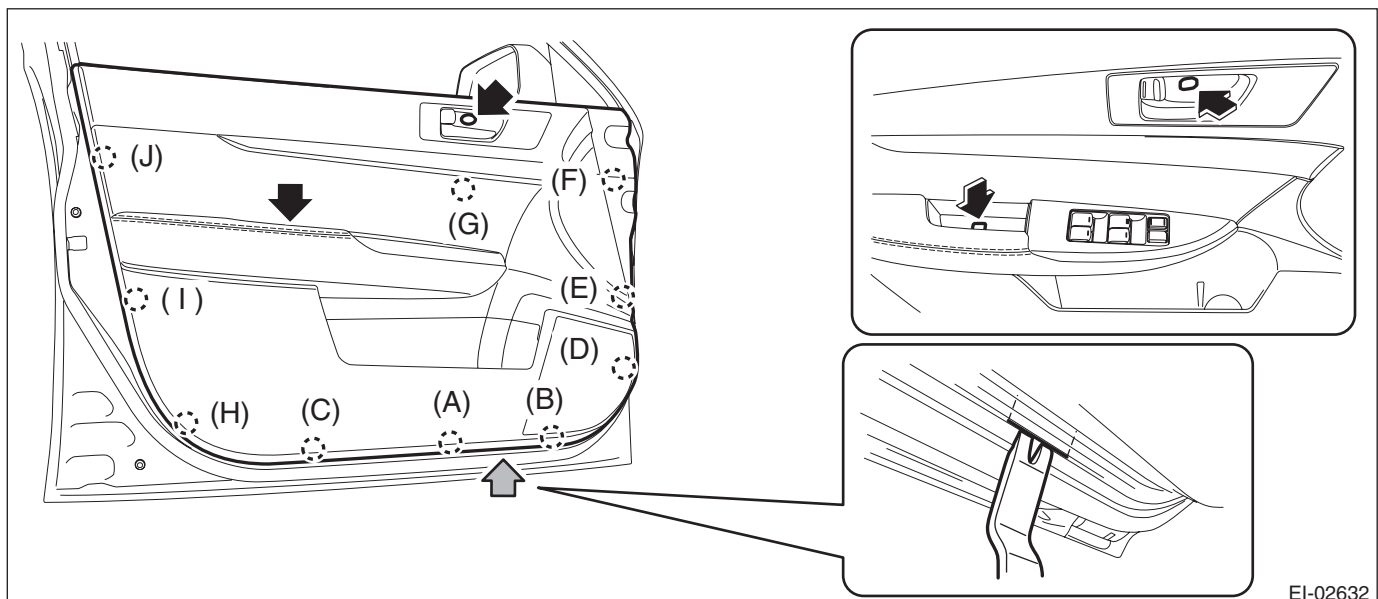

NOTE:

Insert a plastic clip remover into the slit at the bottom edge of the door trim and lift the door trim.

- (3) Remove the cables (a) and (b) from the cable holder of inner remote.

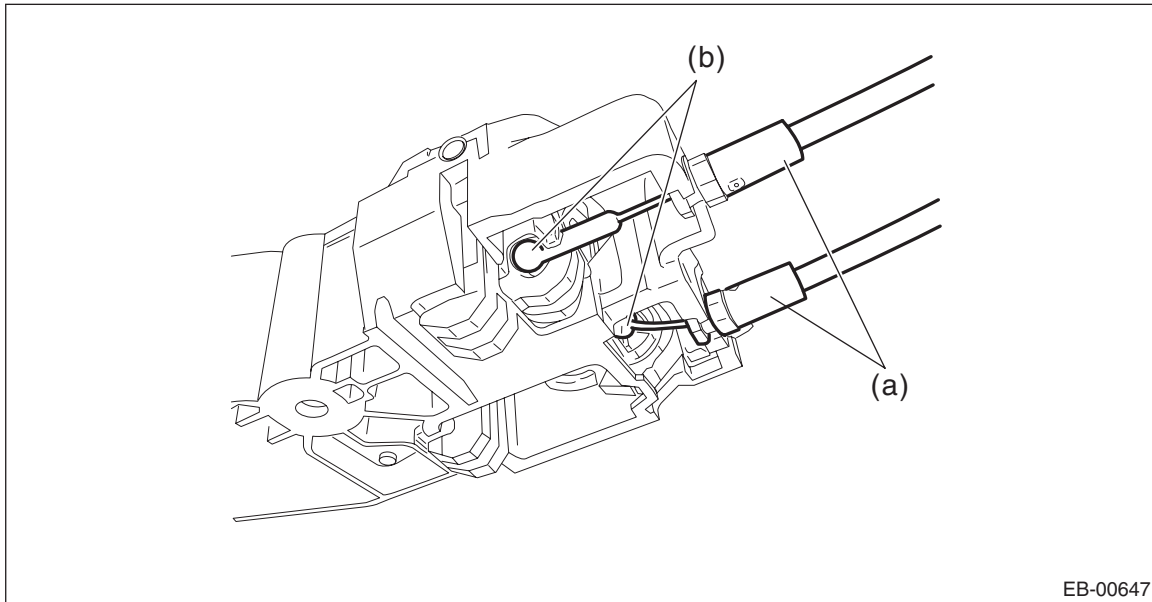


- (4) Disconnect the harness connector and remove the door trim assembly.

2. REAR DOOR

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim assembly.
 - (1) Open the cover and remove the screw.
 - (2) Remove the clips in the order of (A) to (H) and remove the rear door trim assembly from the door panel.

CAUTION:

When removing the door trim, be sure to remove the clips in the correct order. Forcibly removing clips may damage the door panel assembly.

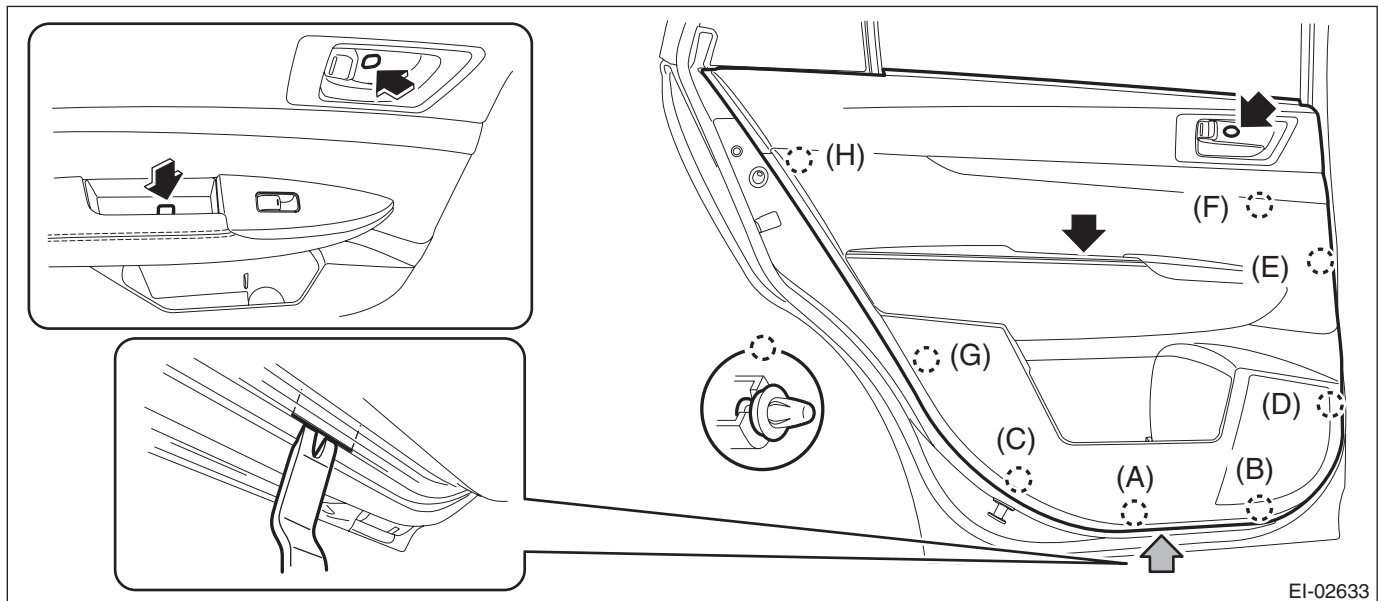


NOTE:

Insert a plastic clip remover into the slit at the bottom edge of the door trim and lift the door trim.

Door Trim

EXTERIOR/INTERIOR TRIM

- (3) Remove the cables (a) and (b) from the cable holder of inner remote.

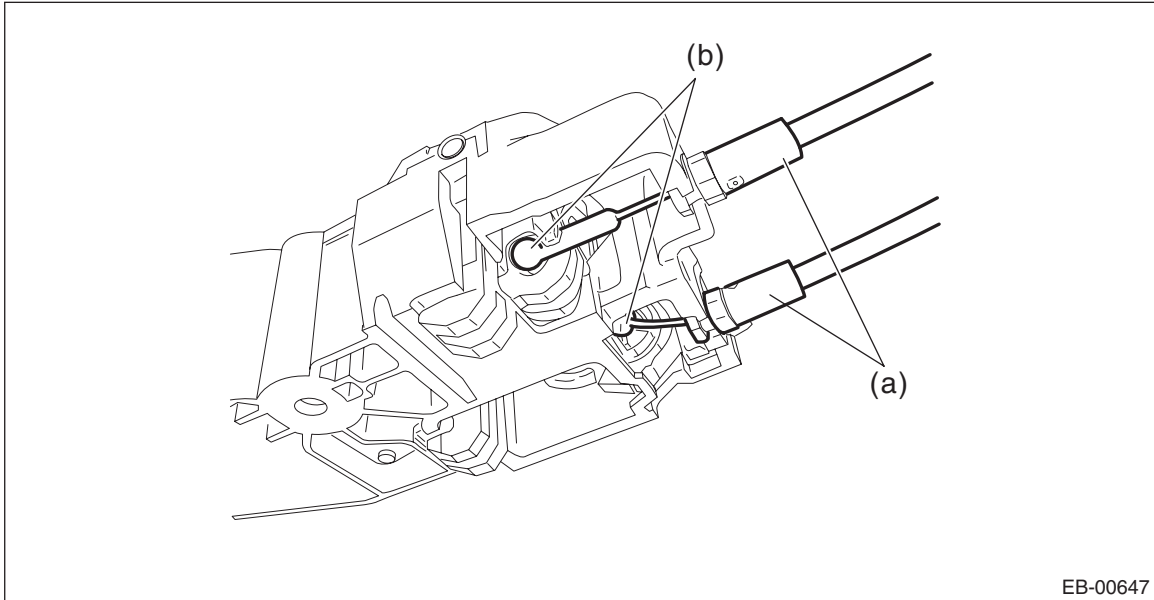

- (4) Disconnect the harness connector and remove the door trim.

B: INSTALLATION

Install each part in the reverse order of removal.