


2. Front Grille

A: REMOVAL

1) Remove the front bumper face assembly.

(1) Remove the clips, turn over the front mud guard, and disconnect the fog light connector. (Model with fog light)

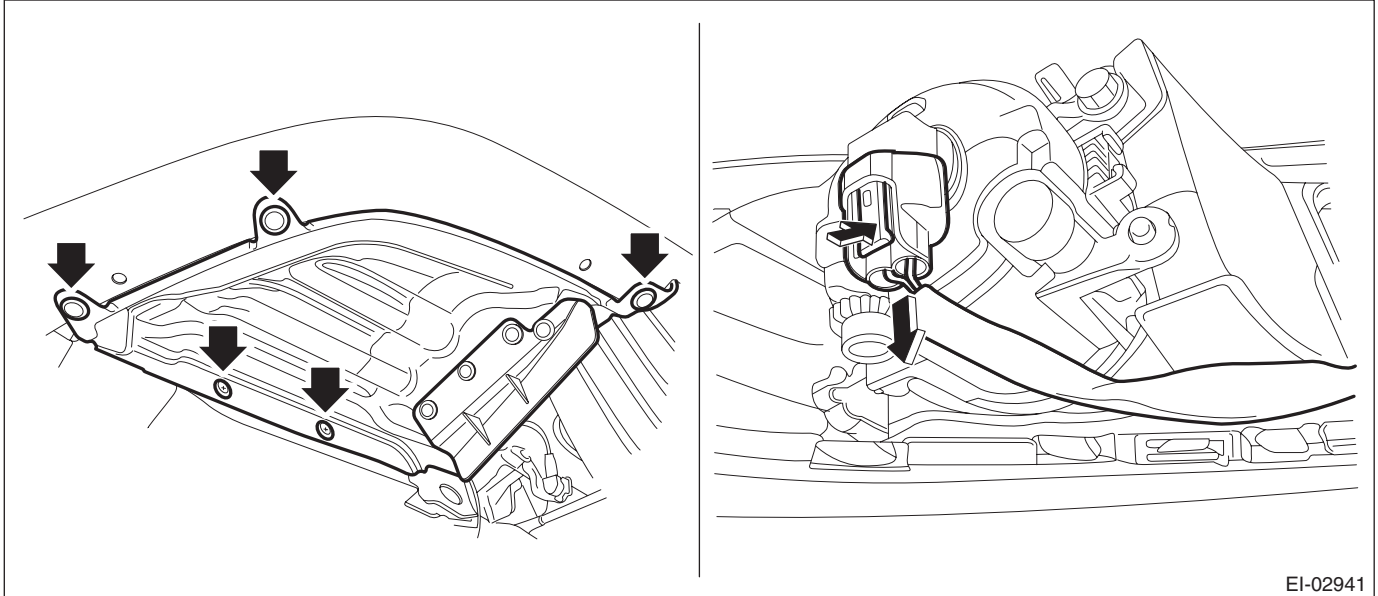


EI-02941

(2) Remove the clips at the upper side of the bumper.

(3) Remove the clips from the fender.

(4) Remove the clips at the lower side of bumper.

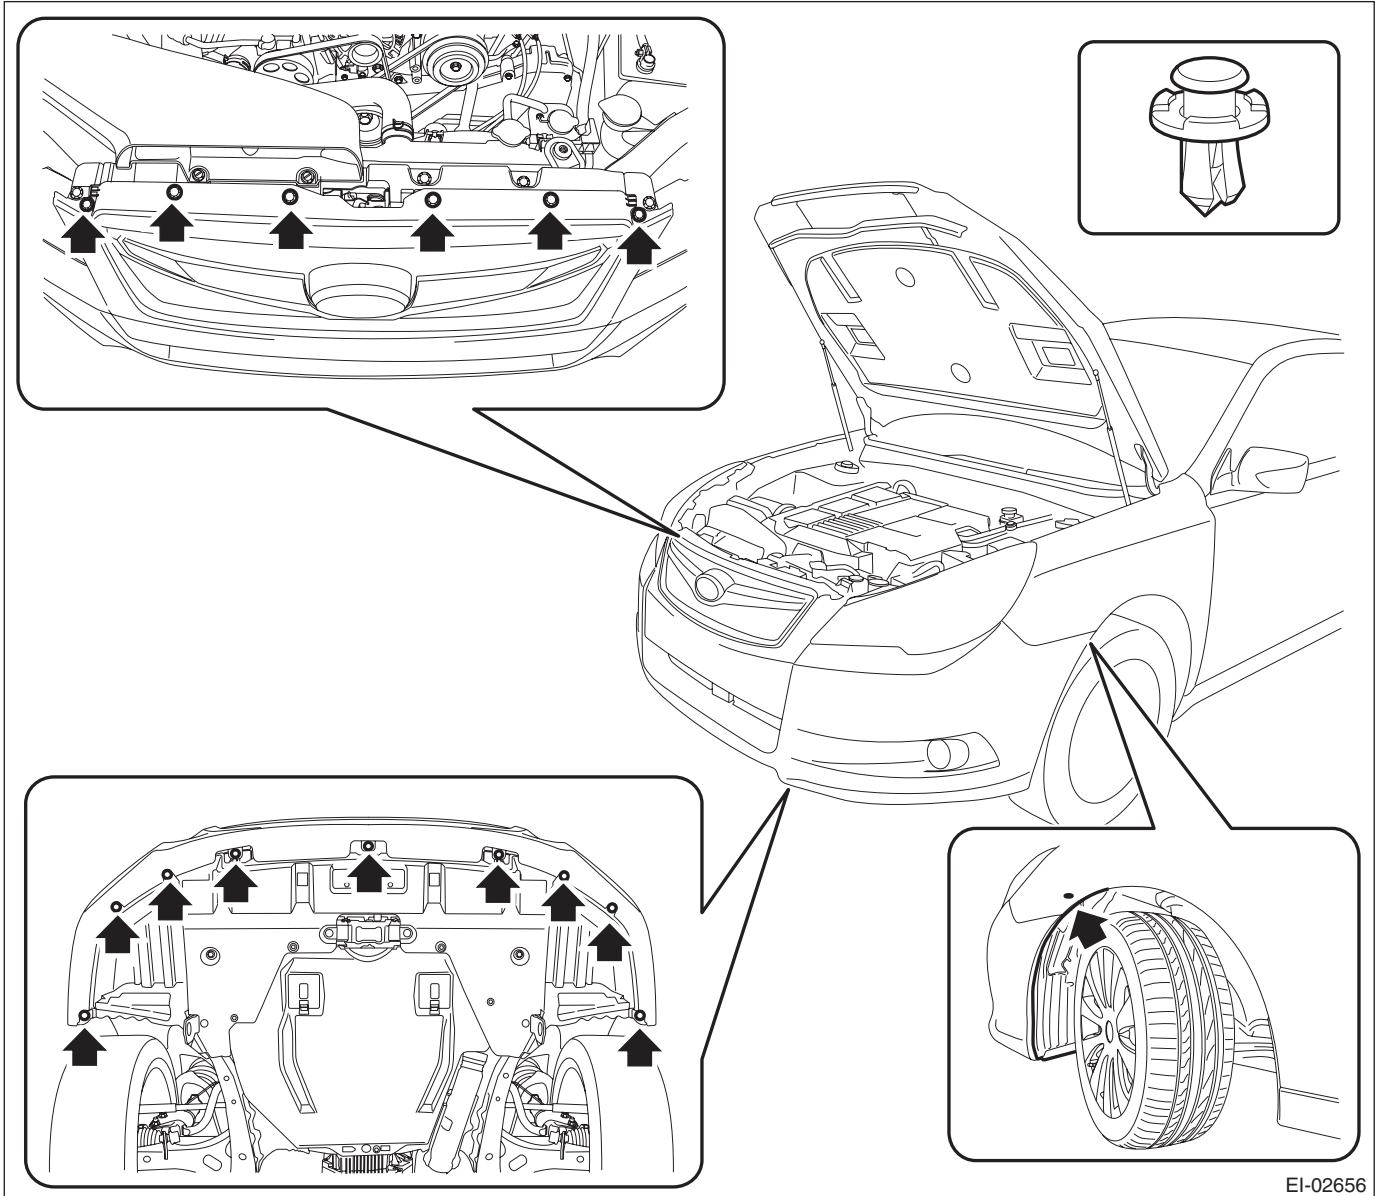

EI-02656


Front Grille

EXTERIOR/INTERIOR TRIM

- (5) Detach the flange section on the bumper face side from the bracket side front UPR.

CAUTION:

Do not pull forcibly. It may damage the flange sections of the bumper face.

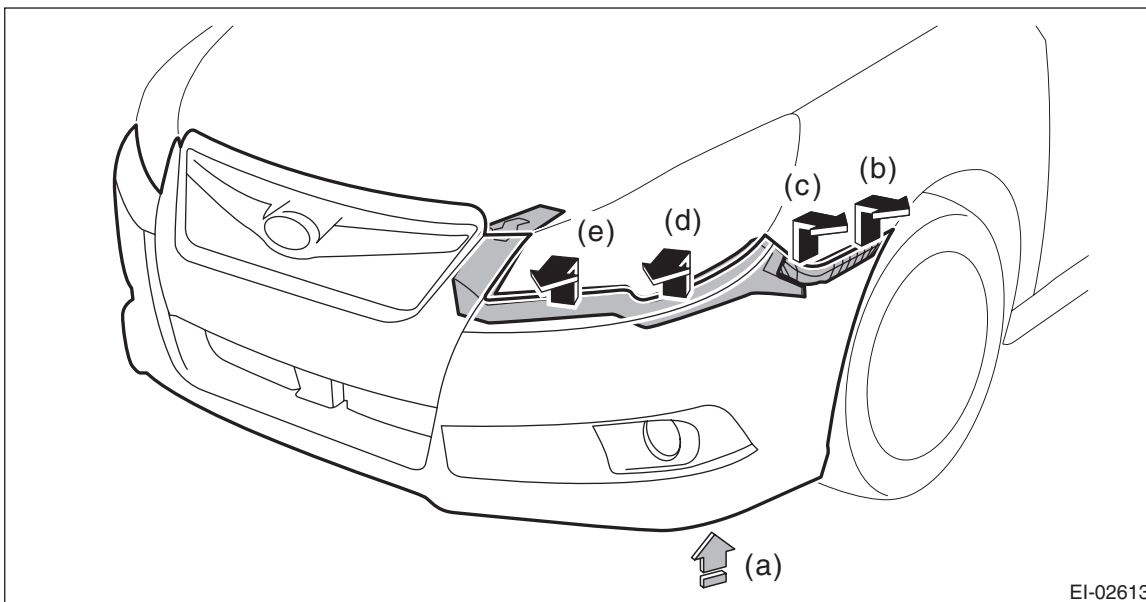


EI-02613

NOTE:

Pushing up the lower side (a) of the fog light, remove from (b) to (e).
Detach the opposite side in the same manner.

2) Remove the front grille assembly.


- (1) Remove the screws from the back side of bumper face.
- (2) Release the claws, and remove the front grille assembly.

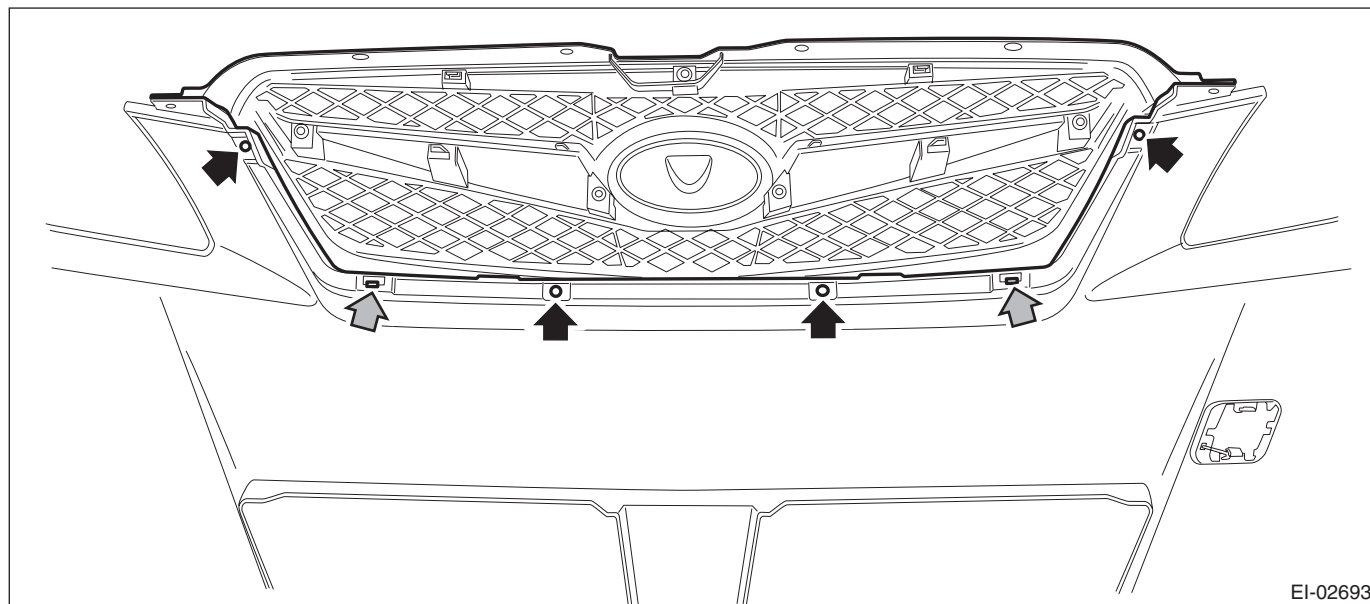

EI-02693

B: INSTALLATION**CAUTION:**

Install the bumper face so that the under cover front end (b) comes inside the front bumper face (a).

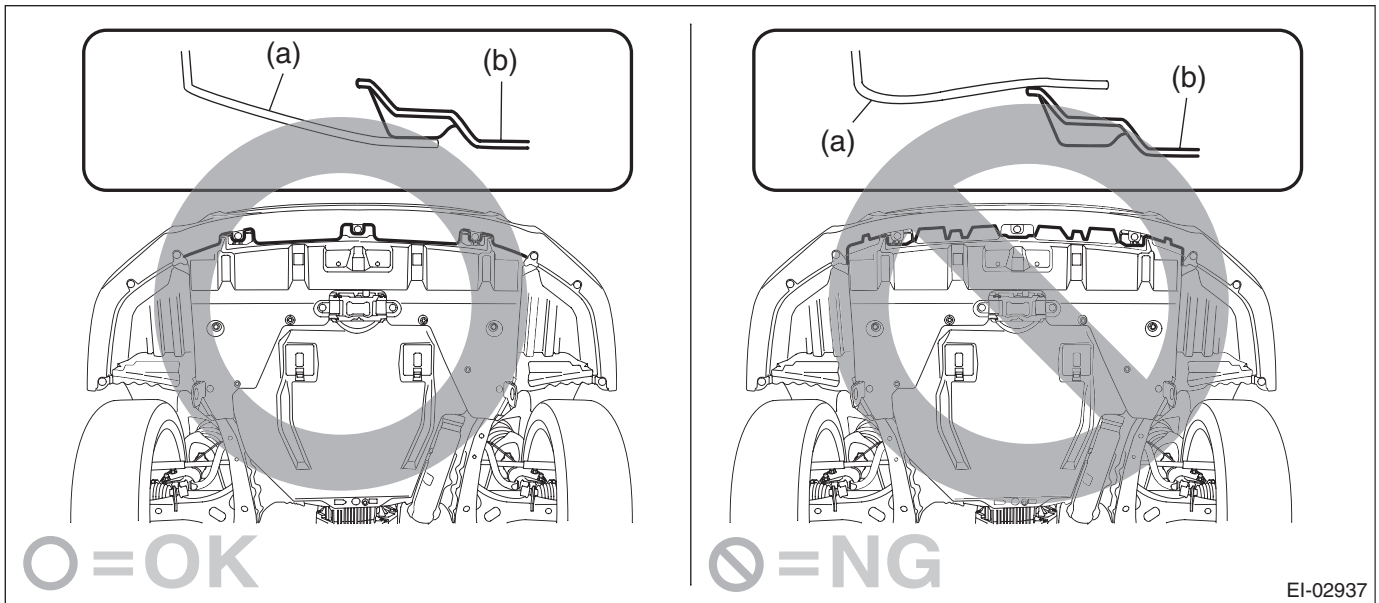

Install each part in the reverse order of removal.