


## 25.Sun Visor

### A: REMOVAL

- 1) Remove the cover, loosen the screws, and remove the sun visor assembly.
- 2) Remove the sun visor hook.
  - (1) Press both sides using a flat tip screwdriver.
  - (2) Remove the sun visor hook by pulling toward you.

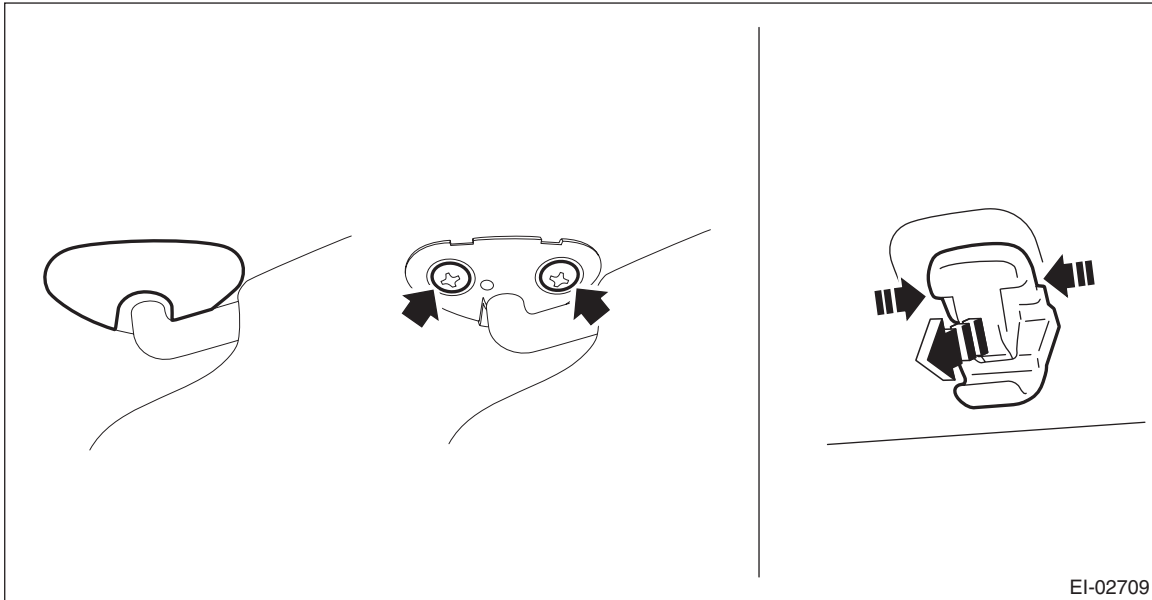

EI-02709

### B: INSTALLATION

Install each part in the reverse order of removal.