

32. Heat Shield Cover

A: REMOVAL

1. FRONT HEAT SHIELD COVER

1) Remove the rear exhaust pipe and muffler.


- **Rear exhaust pipe**

- H4 turbo model: <Ref. to EX(H4DOTC)-15, REMOVAL, Rear Exhaust Pipe.>
- H4 non-turbo model: <Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.>
- H6 model: <Ref. to EX(H6DO)-8, REMOVAL, Rear Exhaust Pipe.>

- **Muffler**

- H4 turbo model: <Ref. to EX(H4DOTC)-17, REMOVAL, Muffler.>
- H4 non-turbo model: <Ref. to EX(H4SO)-10, REMOVAL, Muffler.>
- H6 model: <Ref. to EX(H6DO)-10, REMOVAL, Muffler.>

2) Remove the four bolts to remove the front heat shield cover.

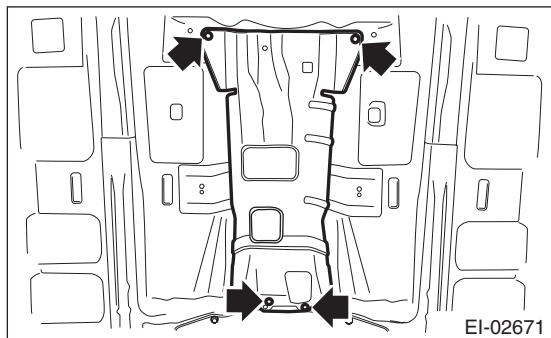

2. CENTER HEAT SHIELD COVER

1) Remove the rear exhaust pipe and muffler.

- **Rear exhaust pipe**

- H4 turbo model: <Ref. to EX(H4DOTC)-15, REMOVAL, Rear Exhaust Pipe.>
- H4 non-turbo model: <Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.>
- H6 model: <Ref. to EX(H6DO)-8, REMOVAL, Rear Exhaust Pipe.>

- **Muffler**



- H4 turbo model: <Ref. to EX(H4DOTC)-17, REMOVAL, Muffler.>
- H4 non-turbo model: <Ref. to EX(H4SO)-10, REMOVAL, Muffler.>
- H6 model: <Ref. to EX(H6DO)-10, REMOVAL, Muffler.>

2) Remove the propeller shaft. (Turbo model only) <Ref. to DS-10, REMOVAL, Propeller Shaft.>

Heat Shield Cover

EXTERIOR/INTERIOR TRIM

3) Remove the bolt (A), nut (B) and clip (C) to remove center heat shield cover.

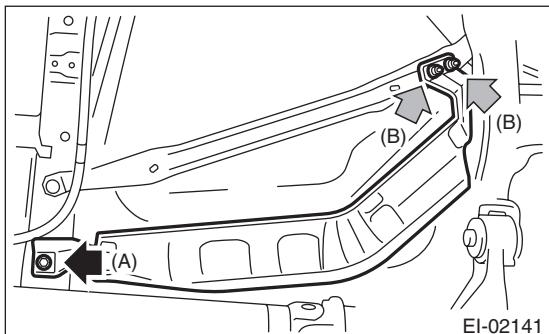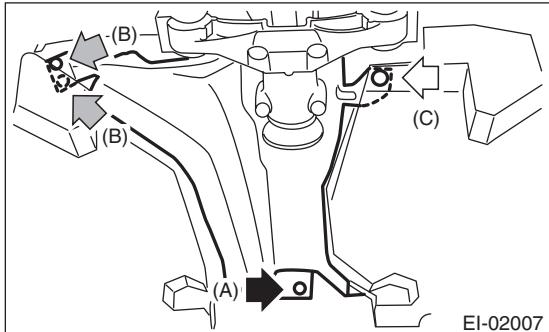


3. REAR HEAT SHIELD COVER

1) Remove the muffler.

- H4 turbo model <Ref. to EX(H4DOTC)-17, REMOVAL, Muffler.>
- H4 non-turbo model <Ref. to EX(H4SO)-10, REMOVAL, Muffler.>
- H6 model <Ref. to EX(H6DO)-10, REMOVAL, Muffler.>

2) Remove the bolts, and remove the rear heat shield cover.

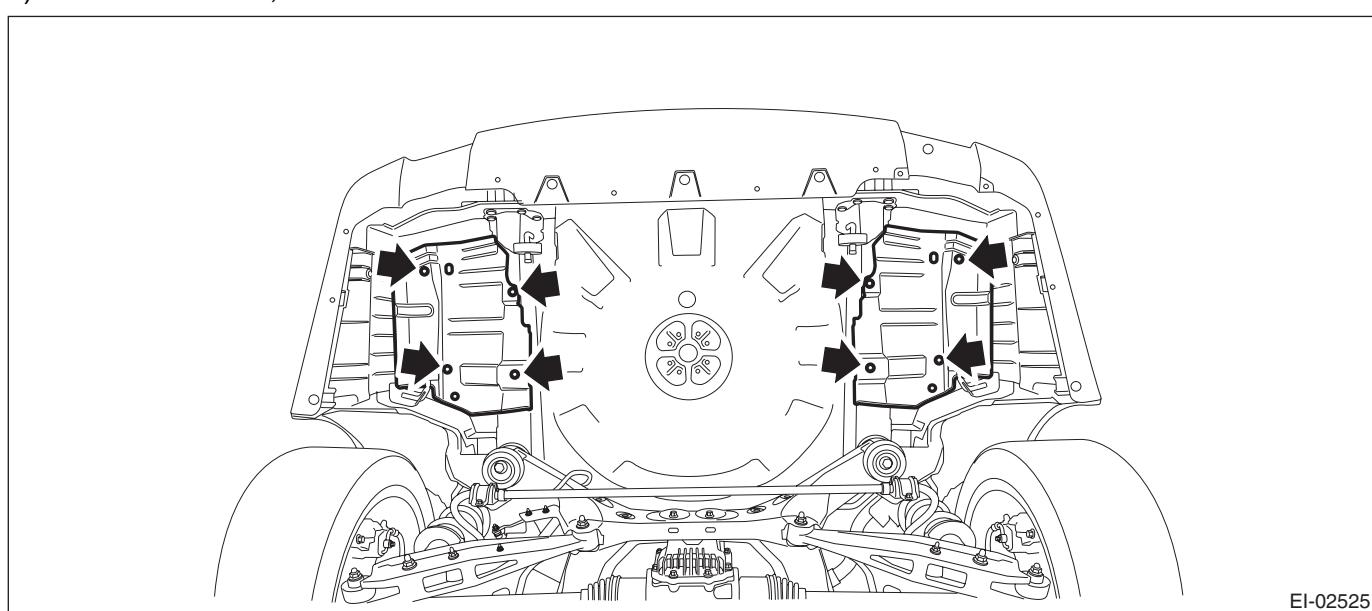

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to EI-25, HEAT SHIELD COVER, COMPONENT, General Description.>