


## 8. Mud Guard

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the wheels.
- 3) Remove the clips, and remove the mud guard.

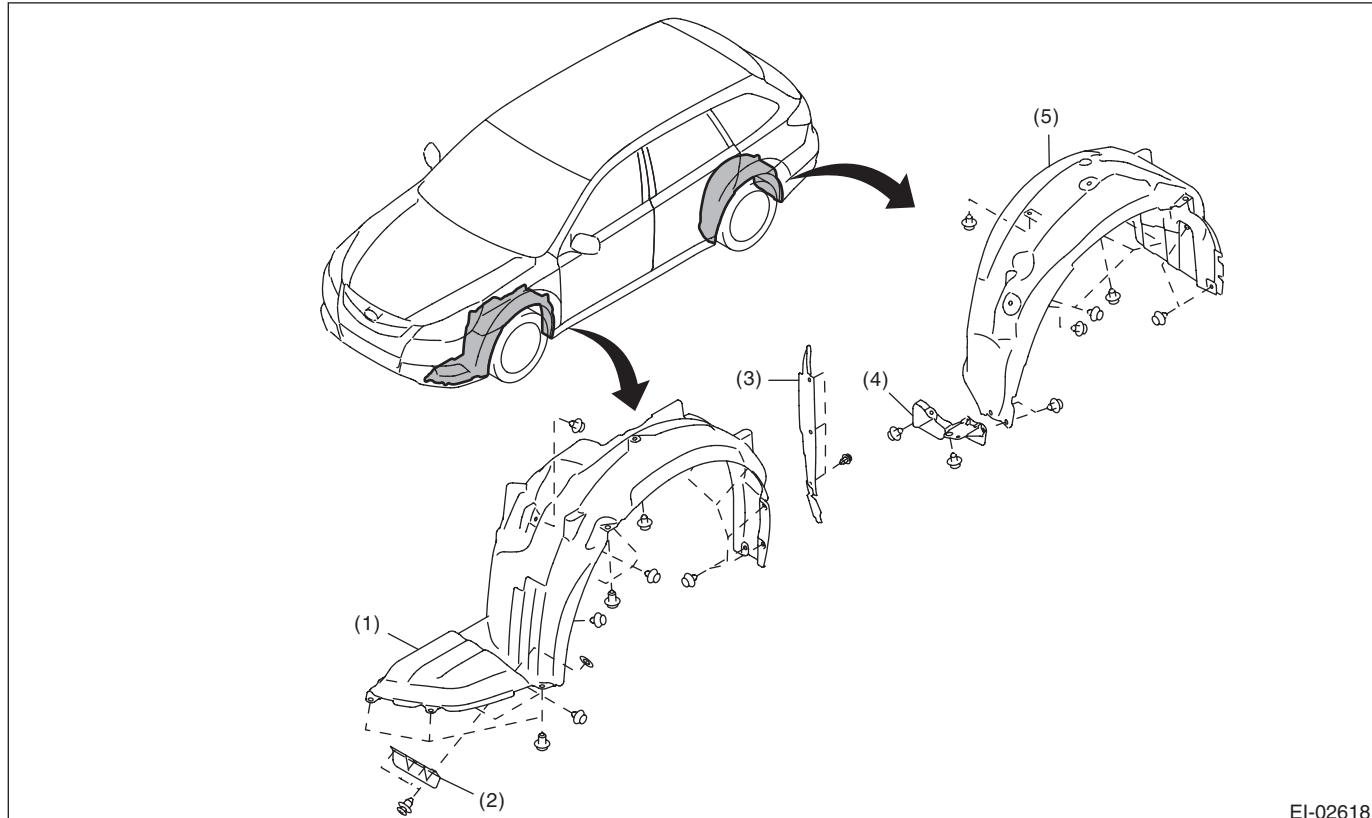

(1) Front mud guard

(2) Front air flap plate

(3) Fender cover lower

(4) Rear air flap plate

(5) Rear mud guard

### B: INSTALLATION

Install each part in the reverse order of removal.

#### *Tightening torque:*

*Wheel nut: 120 N·m (12.24 kgf-m, 88.5 ft-lb)*