

12. Rear Door Glass

A: REMOVAL


- 1) Remove the rear door trim. <Ref. to EI-61, REAR DOOR, REMOVAL, Door Trim.>
- 2) Remove the sealing cover.

CAUTION:

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new part.


- 3) Attach the battery ground cable and power window switch and turn the ignition to ON.
- 4) Remove the rear door glass.

- (1) Operate the power window switch to move the rear door glass to the lowest position where the mounting bolts can be seen.
- (2) Remove the screw and bolt and remove the door sash.

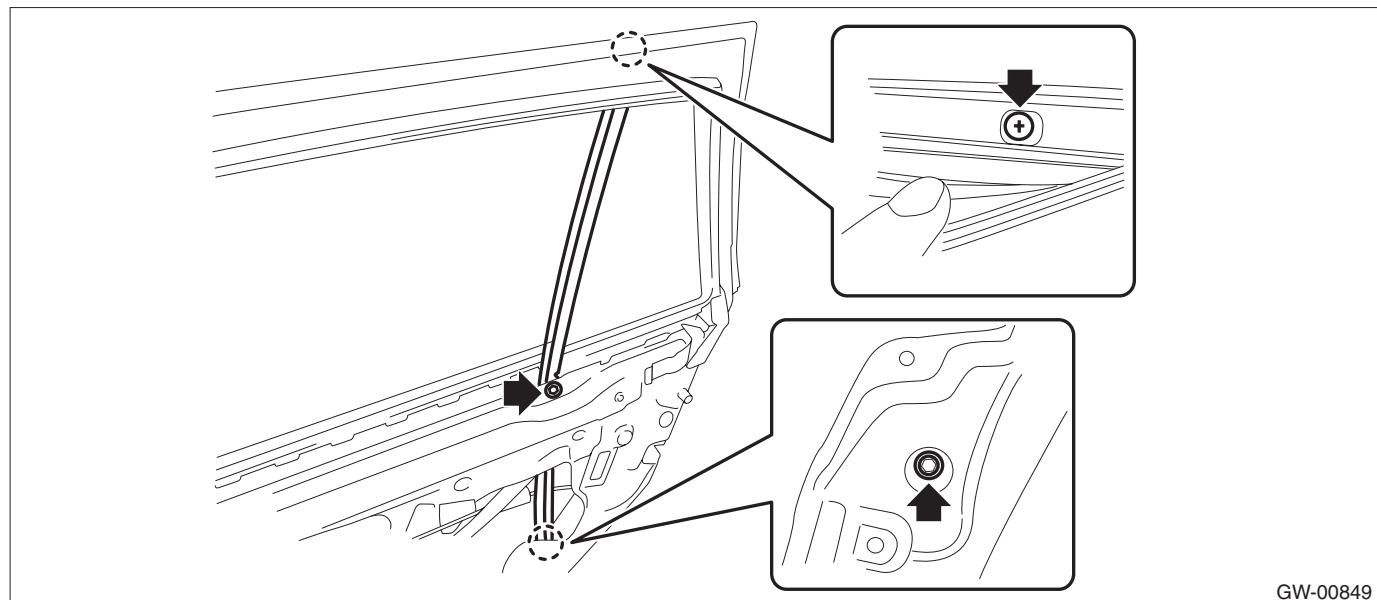

GW-00849

- (3) Remove the bolt.

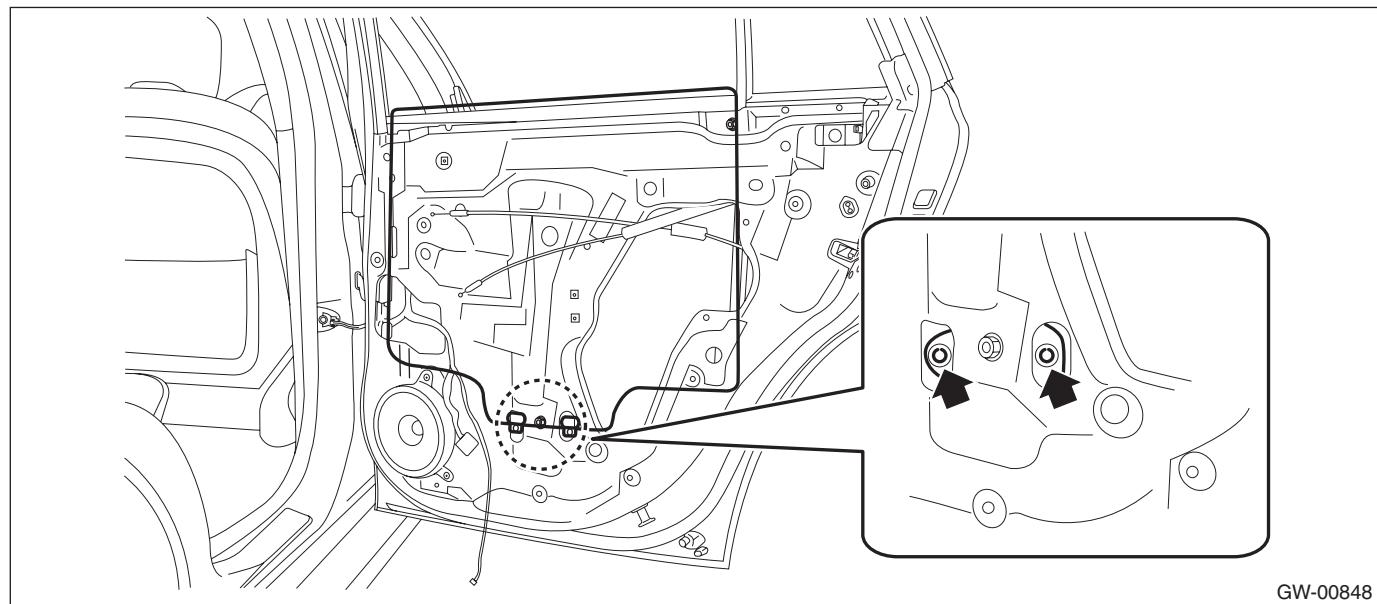

GW-00848


Rear Door Glass

GLASS/WINDOWS/MIRRORS

(4) Remove the rear door glass.

CAUTION:

Avoid impact and damage to the glass.

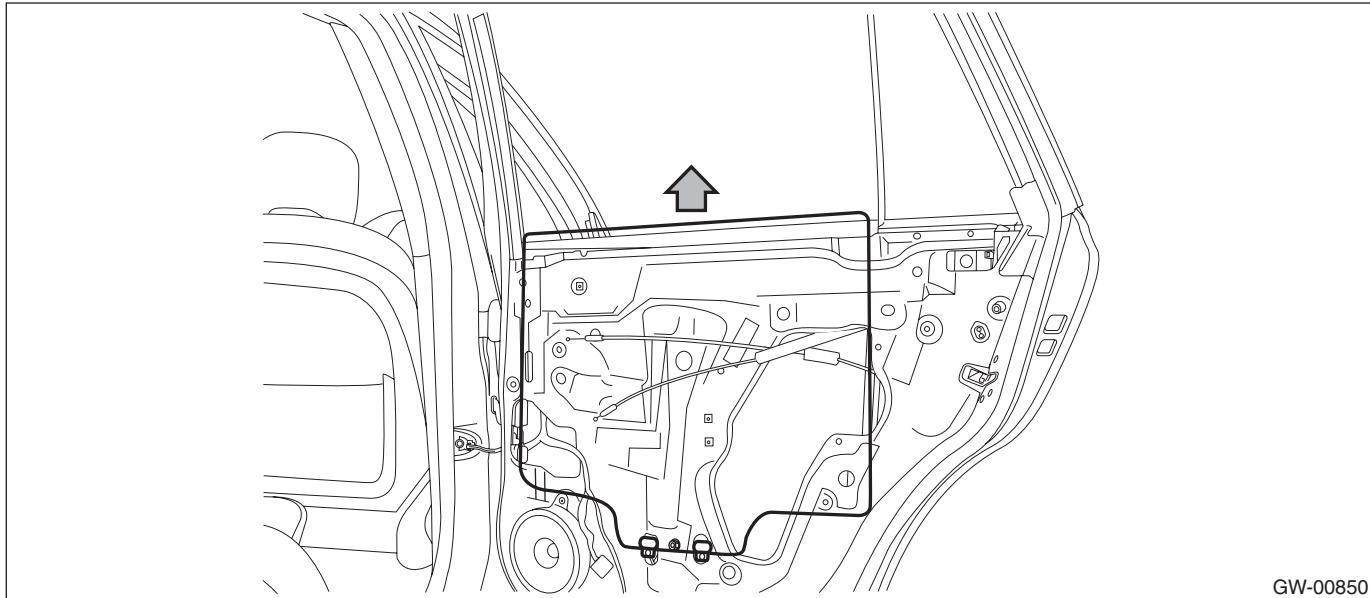

B: INSTALLATION

CAUTION:

Make sure that the glass run rubber is placed securely in the door frame and sash.

Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>